



4.1.6 EUT OPERATING CONDITIONS

- a. Connected the USB cable to any of the USB port in the PC.
- b. Connected the Loop "Back Connector" to the 3 pin stereo plug connector.
- c. Installed the driver for the cable from the USB cable floppy.
- d. After installing the driver the PC will allocate COM port to the USB cable.
- e. After installing the driver OPEN the HyperTerminal application, from the start menu>Programs>Accessories>communications>HyperTerminal.
- f. After opening the HyperTerminal clicked the properties icon in the Hyper Terminal menu and select the corresponding COM port which is assigned to this cable by the PC, and clicked OK.
- g. Clicked the "call" icon in the Hyper Terminal menu, and typed any character, the typed characters will be displayed on the hyper terminal window when the loop back connector is connected and character will not appear on the screen when the loop back connector is not connected.
- h. Repeated steps a-h.