


MODEL WT-203
Instruction Manual
Functions and Controls

- 1) Push To Talk Button
- 2) Changeable Face Cover
- 3) On / Off Button
- 4) Set Button
- 5) Safe, Flexible Antenna
- 6) Mode Button
- 7) Earphone
- 8) Battery (Button cells - DC 1.5V)
- 9) Battery Door Screw

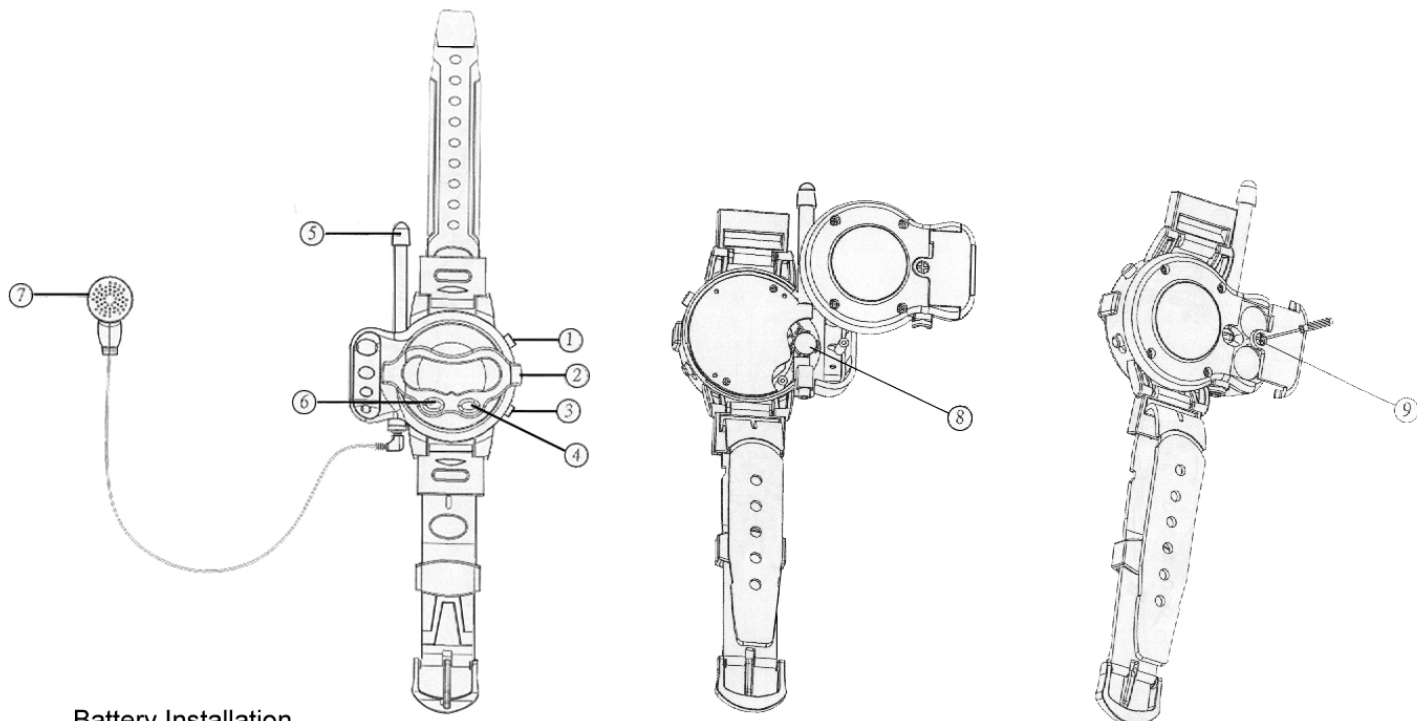

Battery Installation

This device is operated using one standard LR 44 size batteries (DC 1.5V Button Cell).

1. Open the battery door (# 9) with (+) screwdriver. Close the battery door after installation of battery..
2. If the device is not to be used for an extended period of time, remove the battery. Old and leaking batteries can cause damage to the unit and may void the warranty.

Operations of the Walkie Talkie

1. Plug the earphone into the earphone jack, then put on the earphone;
2. Switch the unit on (#3) until the unit activates;
3. To transmit a message, press the Push to Talk button (# 1) and talk clearly to the microphone;
4. To receive a message, release the Push to Talk button (# 1)
5. To Switch off, slide On / Off button (#3).

Care and Maintenance

1. Clean your set with a damp (never wet) cloth, solvent or detergent should never be used.
2. Avoid leaving your set in direct sunlight or in hot, humid or dusty places.
3. When the sound of the set becomes weak, it is the time to replace the batteries.

NOTE: 1) THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THE EQUIPEMENT: SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY.
2) SPECIFICATION AND COLORS OF CONTENTS MAY VARY FROM PHOTO. AND
3) SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

The 2-part warning statement for FCC ID Label Requirement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and**
- 2. This device must accept any interference received, including interference that may cause undesired operation.**