



HELLOMOTO

Introducing your new Motorola W760r wireless phone. Here's a quick anatomy lesson.

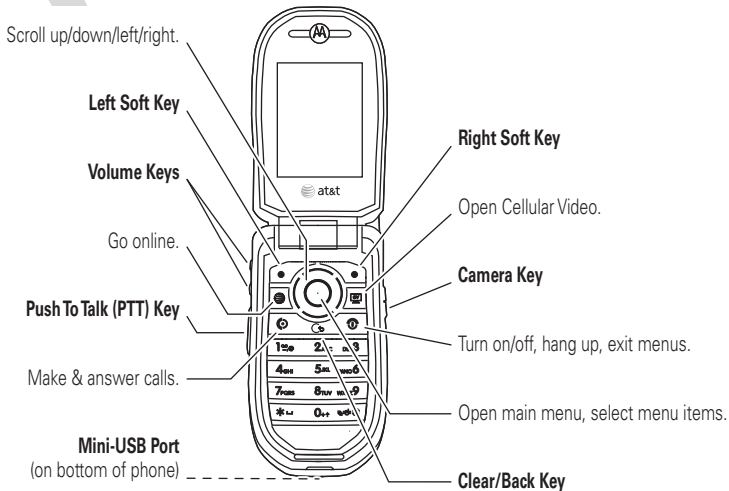

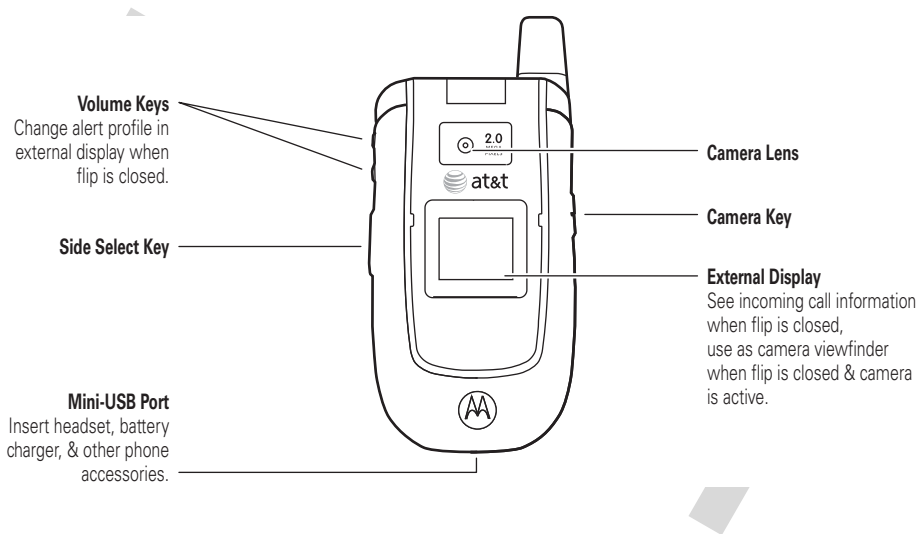

Volume Keys

Change alert profile in external display when flip is closed.

Side Select Key

Mini-USB Port

Insert headset, battery charger, & other phone accessories.


Camera Lens

Camera Key

External Display

See incoming call information when flip is closed, use as camera viewfinder when flip is closed & camera is active.


Home Screen

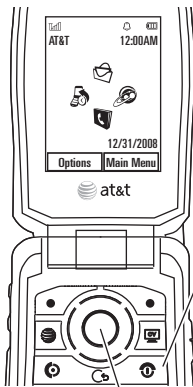

① Press & hold the power key  until the display lights up, to turn on your phone.

② Press the center key  to open the **Main Menu**.

Main Menu

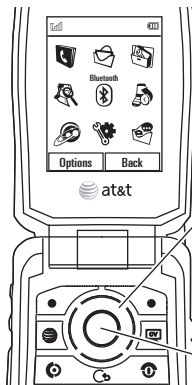

③ Press the navigation key  up/down/left/right to scroll to a menu feature.

④ Press the center key  to select it.

Note: This is the standard home screen and main menu layout. **Your phone's home screen and main menu may be different.** To change your home screen shortcuts and main menu appearance, see page 34.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP and Windows Media are trademarks of Microsoft Corporation. Macintosh is a registered

trademark of Apple Computer, Inc. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2007.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: TBD-O

contents

menu map 7

Use and Care 9

essentials 10

about this guide..... 10

SIM card 11

memory card..... 11

battery..... 12

turn the phone on & off... 15

make a call 15

answer a call 15

end a call 15

store a phone number..... 15

call a stored phone number. 16

search the contact list 16

your phone number..... 17

basics 18

display 18

text entry 20

volume..... 23

side select key..... 24

external display 24

voice commands 24

talking phone..... 26

handsfree speaker..... 26

codes & passwords..... 27

lock & unlock external keys . 27

lock & unlock phone..... 28

personalize 29

profiles..... 29

time & date 31

themes 32

display appearance 33

home screen shortcuts 34

main menu appearance.... 34

rearrange main menu..... 34

answer options 35

calls 36

turn off a call alert 36

recent calls..... 36

redial 37

return a call 37

caller ID 37

emergency calls..... 38

voicemail 38

entertainment..... 39

music player..... 39

browser 47

camera..... 49

video 52

messages 56

text messaging 56

mobile email	59
instant messaging.	59
connections	61
file manager	61
cable connections.	62
Bluetooth® wireless.	63
phone updates	67
other features	68
advanced calling	68
contacts	71
advanced personalizing.	75
call times.	76
handsfree	77
network.	78
personal organizer.	78
security	81
fun & games	82
service & repairs	83
SAR Data	84
EU Conformance	86

OSS Information	87
Safety Information.	90
Industry Canada Notice	94
FCC Notice	95
Warranty.	96
Hearing Aids.	100
WHO Information.	101
Registration	101
Export Law	102
Recycling Information	102
Perchlorate Label	103
Privacy and Data Security	103
Driving Safety.	104
index	106

menu map

main menu



Contacts



Messages

- Create Message
- Inbox
- My Folders
- Templates
- Drafts
- Outbox
- Email
- Call Voicemail



Office Tools

- Calendar
- Email
- MOTOSYNC
- Download Manager
- File Manager
 - Memory Card
 - My Blog *
 - Music and Sounds
 - Pictures
 - Videos
 - Voice
 - Application Downloads
 - Unrecognizable Files
 - My Documents
 - Album
- Alarm Clock
- World Clock
- Calculator
- Dialing Services
- Task List
- Notes
- Locations



Fun&Apps

- Media Finder
- Games
- Camera
- Video Camera
- Voice Recorder



Bluetooth



Recent Calls



Settings

- (see next page)



IM&Email

- IM
- Mobile Email

This is the standard main menu layout.
Your phone's menu may be different.

**To change your home screen shortcuts
and your main menu appearance, see
page 34.**

Tip: Press  to exit the current menu, or press  to exit all menus.

settings menu

- **Profiles**
- **Themes**
- **Home Screen**
 - Navigation Keys
 - Change Wallpaper
 - Clock Style
 - Date
- **Connections**
 - Bluetooth®
 - USB Setting
 - Media Synchronization
 - Memory Card
 - Modem
 - USB Printing
 - Tools
 - Modem & Tools
 - Voice Networks
 - Data Connections
 - Add a Connection
 - Edit a Connection
 - Remove a Connection
- **Call Settings**
 - Speed Dial
 - Call Forward
 - In-Call Setup
 - Hearing Aid
 - In-Call Timer
 - Answer Options
 - In-Call Message Alert
 - Roam Alert
 - Call Waiting
 - Auto-Redial
 - Call Drop Tone
 - Dialing Setup
 - My Caller ID
 - DTMF
 - Dialing Prefix
 - Fixed Dialing
 - Call Drop Tone
 - My SIM Number
- **Phone Settings**
 - Display Settings
 - Display Timeout
 - Screensaver
 - Brightness
 - Airplane Mode
 - Battery Meter
 - Time & Date
 - Language
 - Talking Phone
 - (continued next column)
- **Phone Settings (continued)**
 - Text Entry
 - Reset
 - Reset All Settings
 - Delete All Data
 - Delete Memory Cards
 - Properties
 - Java™ System
 - OTA Updates
 - Headset Settings
 - Auto-Answer
 - Voice Dial
 - TTY Settings
- **Security**
 - Phone Lock
 - External Key Lock
 - Application Lock
 - SIM Lock
 - Change Passwords
 - Certificates
- **Network**
 - Current Network
 - Scan Avail. Networks
 - Find New Network
 - My Network List
 - Search Setup
 - Service Tone

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

essentials

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* guide included in the box.

about this guide

This guide shows how to locate a menu feature as follows:

Find it:  >  Messages > Create Message

This means that, from the home screen:

1 Press the *center key*  to open the menu.

- 2** Press the *navigation key*  to scroll to  Messages, and press the *center key*  to select it.
- 3** Press  to scroll to **Create Message**, and press  to select it.

This guide uses the following symbols:

symbols	
	This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.




SIM card


Your *Subscriber Identity Module* (SIM) card stores your phone number and other information.

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

1

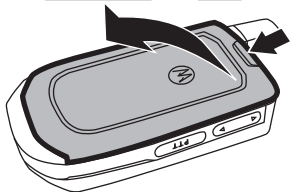

2

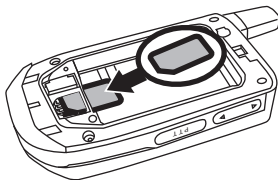

memory card


You can store music, photos, and other multimedia files on an optional removable microSD memory card.

Caution: Don't bend or scratch your memory card.

Keep it away from static electricity, water, and dirt.

Turn off your

phone before you install or remove the memory card.

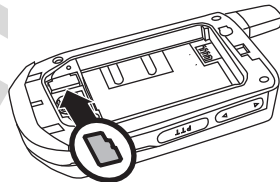

Note: Your phone can use a memory card with up to 4 GB capacity (greater than 1 GB storage guaranteed only for Motorola-approved microSD cards).

battery

Battery Use & Battery Safety

- **Motorola recommends you always use Motorola-branded batteries and chargers.**

The warranty does not cover damage caused by non-Motorola batteries and/or chargers.

Caution: Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion, or other hazard.

- Battery usage by children should be supervised.

- **Important:** Motorola mobile devices are designed to work best with qualified batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it bears a Motorola “Original Equipment” hologram;
- If there is no hologram, the battery is not a qualified battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.
- New batteries or batteries stored for a long time may take more time to charge.
- **Charging precautions:** When charging your battery, keep it near room temperature. Never

expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.

Always take your mobile device with you when you leave your vehicle.

- When storing your battery, keep it in a cool, dry place.
- It is normal over time for battery life to decrease, and for the battery to exhibit shorter runtime between charges or require more frequent or longer charging times.
- **Avoid damage to battery and mobile device.** Do not disassemble, open, crush, bend, deform, puncture, shred, or submerge the battery or mobile device. Avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorized Service Center before using. Do **not** attempt to dry it with an

appliance or heat source, such as a hair dryer or microwave oven.

- **Use care when handling a charged battery**—particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (e.g., jewelry, keys, beaded chains) could complete an electrical circuit (short circuit), causing the battery to become very hot, which could cause damage or injury.


Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center for proper battery disposal.




Warning: Never dispose of batteries in a fire because they may explode.

insert the battery

1

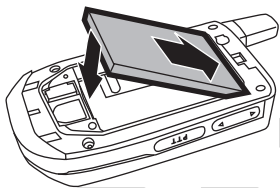


2

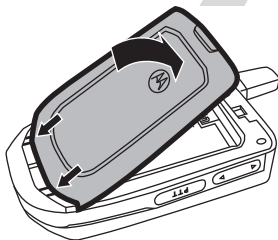

charge the battery

New batteries are not fully charged. Open the protective cover on your phone's

mini-USB port, and plug the battery charger into your phone and an electrical outlet. The battery charge indicator light on your phone shows when the battery is charging. The display shows **Charge Complete** when finished.

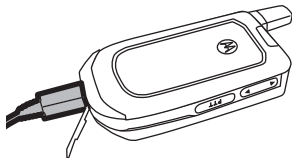

Tip: Motorola batteries have circuitry that protects the battery from damage from overcharging.

Note: You can charge your battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must



have the correct software drivers installed. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.

turn the phone on & off

Press and hold the *power/end key*  for a few seconds, or until the display turns on or off.



make a call

Open the flip, then enter a phone number and press the *send key* .

Tip: To **voice dial** a call, see page 24.

answer a call

When your phone rings and/or vibrates, open the phone flip or press  to answer.

end a call

To “hang up,” close the phone flip or press .

store a phone number

You can store a phone number in your list of **Contacts**.

Note: You can store a new contact on your **SIM card**, or store the contact both in **phone memory** and on the SIM card. When you choose to store a contact to both locations, only the contact’s name and phone number are stored on the SIM card.

To store a phone number:

- 1 Enter a phone number in the home screen.
- 2 Press **Save**.
- 3 Enter a name for the phone number.
- 4 Select the phone number, then select **Number Type** and set the number type (for example, **Home** or **Work**).
- 5 Press **Save** to store the contact.

To edit or store additional information about the contact, see page 71.

call a stored phone number

Find it:  >  **Contacts**

- 1 Scroll to the contact.

Note: If a contact has multiple phone numbers or email addresses, press  left/right to select the number or email address you want.

- 2 Press  to call the contact.

To **voice dial** an entry in your contact list, see page 24.

search the contact list

Find it:  >  **Contacts**

Press the keypad keys to enter the first letters of the contact you want. Press  to go to the contact.

your phone number

To see your phone number from the home screen:

Find it:  >  **Settings** > **Call Settings** > **My SIM Number**


To see your phone number while you're on a call, press **Options** > **My Tel. Numbers**.

To store or edit your name and phone number on your SIM card, select the field you want to edit. If you don't know your phone number, contact your service provider.

basics

display

The *home screen* appears when you turn on the phone.

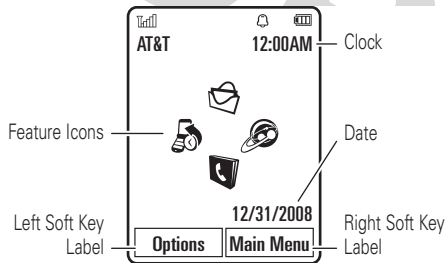

To dial a number from the home screen, press number keys and .

Press the *center key*  or the **Main Menu** soft key to open the main menu.

Press the **Options** soft key in the home screen to change the alert profile, send a message, change the wallpaper, lock the external (side) keys, create a contact, or locate a Bluetooth® device.

Press the *navigation key*  up, down, left, or right in the home screen to open basic features. To show, hide, or change shortcut key icons in the home screen, see page 34.

Status indicators appear at the top of the home screen:



1 Signal Strength Indicator – Shows the strength of the wireless network connection.

2 Bluetooth® Indicator – Shows Bluetooth status:

-  (solid blue) = Bluetooth powered on
-  (solid green) = Bluetooth connected
-  (flashing blue) = Bluetooth discoverable mode

3 Messaging Presence Indicator – Shows your instant messaging (IM) status:

-  (green) = online
-  = offline
-  = busy
-  = discrete

 (gray) = invisible to IM

4 IM Indicator – Shows when you receive a new IM message.

5 Message Indicator – Shows when you receive a new text or voice message. Other indicators can include:

-  = email message
-  = voicemail message

6 Location Indicator – Shows  when your phone is providing location information to the network.

7 Profile Indicator – Shows the alert profile setting:

-  = ring only
-  = ring & vibrate
-  = vibrate only
-  = vibrate then ring


 = silent

- 8 Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call forwarding is on.
- 9 Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.



text entry

Some features let you enter text.

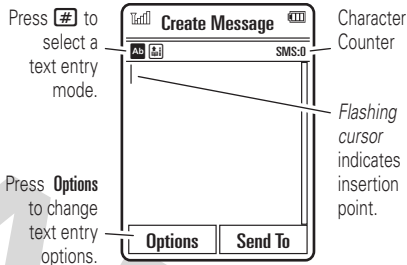

text entry modes

	"word" mode (page 21)
	"abc" mode (page 22)
	numeric mode (page 23)
	symbol mode (page 23)

To **change** your global text entry settings or languages:

Find it:  >  Settings > Phone Settings > Text Entry

Change text case: In a text entry screen, press  to change text case to all capital letters () , next letter capitalized () , or next letter lowercase (no symbol).

Set word learning: Your phone can learn the words you enter, to improve text prediction and completion. In a text entry screen, press **Options** > **Text Entry** > **Set Text Prediction** > **Learn My Words**. Your phone shows  when word learning is active.

Set text completion: Set your phone to complete words based on the characters you enter. In a text entry screen, press **Options** > **Text Entry** > **Set Text Prediction** > **Offer Completions**. Your phone shows  when text completion is active.

Enter punctuation: In a text entry screen, press  to enter punctuation or other characters.

Edit or delete text: In a text entry screen, press  to move the cursor to the right of text you want to edit. Press the *clear/back* key  to delete the character left of the cursor. Hold  to delete the entire word.

word mode


Press  in a text entry screen to switch to “word” predictive text entry mode. Your phone shows  in the display.

Word mode lets you enter words using one keypress per letter. The phone predicts each word as you enter it.

For example, if you press **7 7 6 4**, your display might show:

Press ***** to enter **Prog** & a space.

Press **↑** up/down to see other words. Press **◀** to select a word.

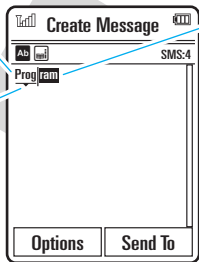


You can turn text completion on (**☑**) or off (**☐**).

Press **C** to delete character to left of cursor.

For example, if you press **7** one time, your display might show:

Character displays at insertion point.

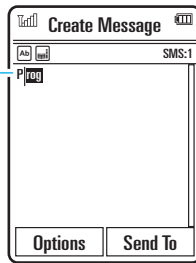

After two seconds, character is accepted and cursor moves to next position.

abc mode

Press **#** in a text entry screen to switch to “abc” text entry mode. Your phone shows **Ab** in the display.

To enter text, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

When text completion is activated, your phone tries to guess the rest of the word:

- Press **◀** to select the suggested word.
- Press **→** right to enter the suggested word and a space.
- If you want a different word, press keypad keys to enter the remaining letters.

numeric mode

Press **#** in a text entry screen until you see **123**.

Press the number keys to enter the numbers you want.

Tip: Just need one number? To enter a number quickly, press and hold a number key until the number appears.


symbol mode

Press **#** in a text entry screen until you see **123**. The display shows the symbol associated with each keypad key. Press **↕** up/down repeatedly to see different symbols. To insert a symbol, press its key, or scroll to it and press **◆**.

volume


Press the volume keys to:

- turn off an incoming call alert
- change earpiece or speakerphone volume during a call
- change playback volume for a song or video
- set your phone's alert profile in the home screen (press the volume keys to scroll to a profile, then press **◆** or the side select key to select it)

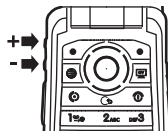

side select key

The side select key gives you another way to do things. For example, when you scroll to a menu item, you can press the side select key to select it (instead of pressing .

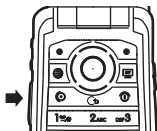

Shortcut: From the home screen, press the side select key to activate the camera.

external display

When your phone flip is closed, the external display shows the time and indicates phone status, incoming calls, and other events. For a list of phone status indicators, see page 19.

set phone alert profile in the external display

From the external display, press the external volume keys on the side of your phone to scroll to an alert profile, then press the side select key to select it.

voice commands

You can use voice commands to tell your phone what to do.

Note: Not all languages support voice commands.

voice dial a call

You can dial a contact list entry by speaking its name, or dial any phone number by speaking its digits.

- 1 Press and hold the external *voice command key* on the side of your phone. The phone loads the voice recognition software, then prompts you to say a command or name.

- 2 Wait for the beep, then say the name of an entry as it appears in your contact list. Your phone confirms the name and makes the call.

or

Say “Dial Number.” Your phone prompts you to speak the digits in the phone number. Speak the digits. Your phone confirms the number and makes the call.

Tips:

- You can say a contact’s name and number type together. For example, say “John Smith mobile” to call the mobile number stored for John Smith.
- For voice command help, press the voice command key on the side of your phone, then press **Help**.

voice activate phone functions

You can use voice commands to open applications and perform many basic phone functions.

- 1 Press and hold the external voice command key on the side of your phone. The phone prompts you to say a command.
- 2 Wait for the beep, then say a command from the list.

voice commands
<i>“contact name”</i>
“Dial Number”
“Send Message To <i>contact name</i>”
“Check Calendar”
“Check New Message”
“Check New Email”
“Add New Contact”
“Talking Phone”
“Check Battery”

voice commands
"Check Signal"
"Check Time"
"Check Date"
"Open Setup"
"Open Recent Calls"
"Open Theme"
"Open Camera"
"Open Web Access"
"Set Airplane"
"Set Airplane Off"
"Set Ring"
"Set Normal"
"Set Vibrate"
"Set Silent"

Tip: Press and release the voice command key on the side of your phone to see the list of voice commands.

talking phone

Set your phone to recite incoming caller ID information, read the names of menu features or contact list entries, read messages you receive, and provide audio feedback for phone functions.

Find it:  >  Settings > Phone Settings > Talking Phone

Shortcut: Press and hold the external voice command key on the side of your phone. When the phone prompts you to say a command, say "Talking Phone."

handsfree speaker

During a call, press **Options** > **Speaker On** to turn on the handsfree speaker. Your display shows the speakerphone indicator until you turn it off (press **Options** > **Speaker Off**) or end the call.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't

concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your phone is still using the original codes, you should change them:

Find it:  >  **Settings** > **Security** > **Change Passwords**

You can also change your **SIM PIN** codes or call barring password.

If you forget your unlock code: At the **Please verify the Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  to enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock external keys

You can lock the external phone keys when the phone flip is closed, to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

To **manually lock** the external keys: Close the phone flip, then press and hold the side select key. The external keys remain locked until you open the phone flip.

To **automatically lock** the external keys when the phone is idle and the phone flip is closed:

Find it:  >  **Settings** > **Security** > **External Key Lock**
> **Timer**

You can set the time delay for locking the external keys (2 seconds, 4 seconds, or 8 seconds). The keys lock when you close the phone flip, and unlock when you open the phone flip.

To **turn off** the automatic lock feature:

Find it:  >  Settings > Security > External Key Lock
> Timer > Off

To **unlock** the external keys: Press and hold the side select key.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Find it:  >  Settings > Security > Phone Lock > Lock Now

To **automatically lock** your phone whenever you turn it off:

Find it:  >  Settings > Security > Phone Lock
> Lock at Power On > On

Note: You can make emergency calls when the phone is locked (see page 38).

personalize

profiles

You can quickly change your phone's alert style or *profile* to match your activity or environment. Each profile uses a different set of ringtones or vibrations for incoming calls and other events. The alert profile indicator shows at the top of the home screen:

 Ring Only

 Ring & Vibrate

 Vibrate Only

 Vibrate then Ring

 Silent

To change your profile: From the home screen, press the external volume keys on the side of your phone. Alternatively, from the home screen press **Options** > **Change Alert Style** or **Change Profile**.

The **Silent** profile silences your phone until you set another profile.

Shortcut: From the home screen, press and hold  to quickly set the profile to **Vibrate**.

change alert style settings

You can change the ringtones that a standard alert style uses to notify you of incoming calls and other events. Additionally, you can change the alert style's ring volume, keypad tone volume, and media playback volume settings. For dual-line-enabled SIM cards, you can set different ringtones to identify incoming calls on line 1 or line 2.

Note: You can't edit the **Silent** alert style, or change some settings for some alert styles.

Find it:  >  Settings > Profiles > Alert Style

> *alert style*

- 1 Press  left/right to select the **alerts** tab , **volume** tab , **messages** tab , or **settings** tab .
- 2 Press  up/down to scroll to the alert or volume setting you want to change, then press .
- 3 Select the setting value you want.
- 4 Press **Back** to exit and save your changes.

To **reset** the default settings for all alert styles:

Find it:  >  Settings > Profiles, press **Options** > **Reset**

create a new profile

To create a **new** profile with the ringtones and volume settings you specify:

Find it:  >  Settings > Profiles > Alert Style

> *alert style*

- 1 Change alert style settings as described in the previous section.
- 2 Press **Options** > **Save as Profile**.
- 3 Enter a name for the profile, then press **Save** to save it.

To create **additional** profiles:

Find it:  >  Settings > Profiles, press **Options** > **Create Profile**

Note: Profile alert settings also can be set by the theme. When you apply a new theme, you can choose to apply the theme's alert settings to the current profile. Selecting this option **changes** the current profile to use the theme alert settings.

edit or delete profiles

To **edit** a profile:

Find it:  >  Settings > Profiles, scroll to the profile, press **Options** > **Edit**

Note: You can't edit the **Silent** profile, or change some settings for some profiles.

To **delete** a user-defined profile:

Find it:  >  **Settings** > **Profiles**, scroll to the profile, press **Options** > **Delete**

restore alert style settings

To delete all user-defined profiles and restore your phone's original alert style settings:

Find it:  >  **Settings** > **Profiles**, press **Options** > **Restore Sound Settings**

time & date

Your phone can automatically update the time and date. It uses the time and date for the **Calendar**.

To **synchronize** time and date with the network:



Find it:  >  **Settings** > **Phone Settings** > **Time & Date** > **Auto-Update Time** > **On**

To **manually** set the time and date:

Find it:  >  **Settings** > **Phone Settings** > **Time & Date** > **Auto-Update Time** > **Off**, then > **Time and Date**

To adjust time and date, press  left/right to scroll to a setting, then press  up/down to change it. Press **Set** to save your settings.

To show a **12-hour or 24-hour** digital clock in the home screen:

Find it:  >  **Settings** > **Phone Settings** > **Time & Date** > **Time Format** > **12 Hour Clock** or **24 Hour Clock**

To set the **date format** in the home screen:

Find it:  >  **Settings** > **Phone Settings** > **Time & Date** > **Date Format**

To set your **time zone**:

Find it:  >  **Settings** > **Phone Settings** > **Time & Date**
> **Time Zone**, then select a city in your time zone

Shortcut: Press keypad keys to enter the first letters of the city you want.

themes

Use a phone *theme* to personalize the look and sound of your phone. Most themes include a wallpaper image, screensaver image, and ringtones.



To **apply** a theme:

Find it:  >  **Settings** > **Themes** > *theme*

To **download** a theme, see page 47.

To **delete** a theme:

Find it:  >  **Settings** > **Themes**, scroll to the theme, press **Options** > **Manage** > **Delete**

Note: You can delete only downloaded themes or custom themes you create.

modify a theme

Find it:  >  **Settings** > **Themes**, scroll to the theme, press **Options** > **Edit**

- 1 Press  left/right to select the **sounds** tab  or **images** tab .
- 2 Press  up/down to scroll to the setting you want to change, then press .
- 3 Scroll to the image or sound file you want, then select it.
- 4 Press **Save** to save your theme changes.

The **Wallpaper** appears as a background image in your home screen.

The **Screen Saver** appears in the display when no activity is detected for a specified time. To set the delay interval, see the following section.

Skins set the look and feel of your phone's display.

To **reset** the standard settings for a modified theme:

Find it:  >  Settings > Themes > *theme*, press Options > Manage > Reset

To **restore** the default theme on your phone:

Find it:  >  Settings > Themes, press Options > Manage > Restore to Default

create a new theme

Find it:  >  Settings > Themes, press Options > Create New or Create a Copy

display appearance

To set your display **brightness**:

Find it:  >  Settings > Phone Settings > Display Settings > Brightness

To save battery life, the **display** can turn off when you're not using your phone. To set the display timeout delay interval:

Find it:  >  Settings > Phone Settings > Display Settings > Display Timeout

To turn the display **screensaver** on or off:

Find it:  >  Settings > Phone Settings > Display Settings > Screensaver > On or Off

Tip: To extend battery life, turn off the screensaver.

home screen shortcuts

From the home screen, you can press the navigation key  up, down, left, or right as shortcuts to your favorite features. You can change the shortcuts to suit your needs.



To **change** navigation key shortcut icons in the home screen:

Find it:  >  **Settings** > **Home Screen** > **Navigation Keys**
> **Up, Down, Left, or Right**

Select a direction, then choose the feature you want to open when you press  in that direction.

To **show or hide** navigation key shortcut icons in the home screen:

Find it:  >  **Settings** > **Home Screen** > **Navigation Keys**
> **Icon Display** > **Show or Hide**

Note: You can press  to select the features in the home screen even when the icons are hidden.

main menu appearance

You can personalize the main menu to appear as a grid of graphic menu icons, a text-based list, or spinning menu icons that you can scroll through by pressing  left or right:

Find it: From the main menu, press **Options** > **View By**
> **Grid** or **List** or **Spinner**

rearrange main menu

You can change the order of the main menu features.

From the main menu, press **Options** > **Reorder**, scroll to the feature you want to move, press **Grab**, scroll to the destination location, press **Insert**.

answer options

You can use different ways to answer an incoming call.

To turn on or turn off an answer option:

Find it:  >  Settings > Call Settings > In-Call Setup

> Answer Options

options	
Any Key Answer	Answer by pressing any key.
Open to Answer	Answer by opening the phone flip.

Note: You can always press  to answer a call.

calls

To make and answer calls, see page 15.

turn off a call alert

Press the external volume keys on the side of your phone to turn off the ringer before answering a call.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  in the home screen to see the **Dialed Calls** list, then press  left/right to see the other call lists.

Find it:  >  **Recent Calls**

- 1 Press  left/right to select a call list: **All Calls**, **Dialed Calls**, **Answered Calls**, **Missed Calls**, or **Frequent Calls**.
- 2 Press  up/down to scroll to a phone number.

Icons indicate if the call was incoming , outgoing , or missed . A check mark next to the icon indicates a connected call.

- To call the number, press .
- To see call details (like time and date), press .
- Press **Options** to perform other operations on the number (send a message, save to contacts), or to set recent call options.

redial

- 1 Press  from the home screen to see the **Dialed Calls** list.
- 2 Scroll to the number you want to call, then press .

If you hear a **busy signal** and see **Call Failed**, press  or **Retry** to redial the number. When the call goes through, your phone shows **Connected** and connects the call.



return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

When you see the **X Missed Calls** message, press  to see the **Missed Calls** list. Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call.



Your phone shows the caller's name and picture when they're stored in your contact list, or **Incoming Call** when caller ID information isn't available.

Note: Picture IDs aren't available for contacts stored on the SIM card.

Tip: Want to know who's calling without even looking at your phone? To give one of your contacts a special ringtone, see page 72.

To show or hide your phone number for the next outgoing call, enter the number you want to call, then press **Options** > **Show ID** or **Hide ID**.

To show or hide **your phone number** for all calls:

Find it:  >  **Settings** > **Call Settings** > **In-Call Setup** > **My Caller ID** > **All Calls** > **Show ID** or **Hide ID**

emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call at any time, even when your phone is locked or the SIM card is not inserted.

Note: Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications such as medical emergencies.

To make an emergency call: Turn your phone on, exit any open application such as games, dial the emergency number, then press the *send key*  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your phone package may include additional information about using this feature.

When you **receive** a voicemail message, your phone display shows **New Voicemail** and the new message indicator .

To **check** voicemail messages:

Find it:  > **Call Voicemail**

Shortcut: Your service provider may store your voicemail phone number in speed dial location #1. If so, you can press and hold **1** in the home screen to listen to your voicemail message(s).

entertainment

music player

Copying and syncing music between your phone and computer has never been easier, with Microsoft® Windows® Media Player 11.

To listen to music on your phone, you need to:

- 1 Load music on your computer.
- 2 Transfer music from the computer to your phone.
- 3 Use the music player to play and manage music files on your phone.

Note: The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

1. load music on your computer

To create a music library on your computer, you can purchase Windows Media DRM-protected music files from supported on-line music stores (such as Urge, Yahoo, and Napster).

You can also **load song files from a music CD** onto your computer:

- 1 Insert the music CD in your computer's CD drive.
- 2 Launch Windows Media Player 11 (or your computer's media player program).
- 3 Copy the music CD to the media player library (also called *ripping* the CD).

If your computer is connected to the Internet, the media player may retrieve CD information such as song titles, album name, artist name, and album artwork. This information will display in your phone's music player.

set default format and bit rate for Windows® Media Player 11

Windows Media Player 11 lets you adjust format and bit rate settings, to optimize sound quality, or to increase the number of song files you can store on your phone.

Windows Media Audio format offers the optimal balance between file size and sound quality. Song files in this format tend to require more storage space than files that use Windows Media Audio Pro format.

Windows Media Audio Pro format is designed for use in portable devices with limited storage capacity. The format provides improved sound quality at lower bit rates.

MP3 format is the most popular format for distributing music on the Web. This format offers high sound quality at a reasonable file size.

To set the default file format and bit rate:

- 1 Insert the music CD in your computer's CD drive.
- 2 Launch Windows Media Player 11.
- 3 Select the Rip tab in Windows Media Player 11.
- 4 Click the Rip tab down arrow, then choose Format > Windows Media Audio, Windows Media Audio Pro, or mp3.

- 5 Click the Rip tab down arrow again, then choose Bit Rate > *bit rate*.

convert iTunes AAC files to MP3 files on your computer

Use the iTunes desktop application to convert standard iTunes AAC files to MP3 files that are compatible with Windows Media Player 11.

Note: The iTunes desktop application can only convert AAC files ripped from a music CD. It can't convert music files purchased from the iTunes store.

- 1 Open the iTunes desktop application on your computer.
- 2 Select Edit > Preferences, then click the Advanced tab and click Importing.
- 3 Open the Import Using pop-up menu, then select the MP3 Encoder option. Click OK to save your settings.

- 4 Select one or more songs in your iTunes music library, then choose Advanced > Convert Selection to MP3.

The converted MP3 file copies appear in your computer's music library alongside the original AAC files.

2. transfer music to your phone

Use Windows Media Player 11 to transfer music from the computer to your phone. (If necessary, you can download Windows Media Player 11 at www.microsoft.com/windowsmedia).

Note: Windows Media Player 11 requires Windows XP™ or later to run. If you are using an earlier version of Windows OS on your computer, see "manually transfer music to your phone or memory card" on page 44.

on your phone

Press  >  **Settings** > **Connections** > **USB Setting**
> **Media Synchronization**

Attach the Motorola Original USB cable to the mini-USB port on your phone and to an available USB port on your computer. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.



on your computer

Open Windows Media Player 11. Your phone appears in the upper right corner of the Windows Media Player 11 screen, and music files stored on the phone are listed on the left side of the screen.

- 1 Select the Sync tab in Windows Media Player 11.
- 2 Drag and drop songs or playlists onto the Sync List on the right side of the Windows Media Player 11 screen.

- 3 Click Start Sync to copy the songs onto the phone.
- 4 When you finish, disconnect your phone from the computer.

3. play music

To play music on your phone:

Find it:  >  **Fun&Apps** > **Media Finder** > **Music Library**
> *category* > *song name*


Select a song or playlist from the following categories:
Recently Played, **Shuffle Songs** (play all songs in random order),
All Songs, **Playlists**, **Artists**, **Albums**, **Genres**, or **Composers**.

flip closed

When a song or playlist starts to play, you can close the phone flip to listen to the music. Press the side select key to pause/play the song or playlist when the flip is closed. Press the volume keys to adjust the music volume.

flip open

Use the navigation key to control song playback when the phone flip is open.

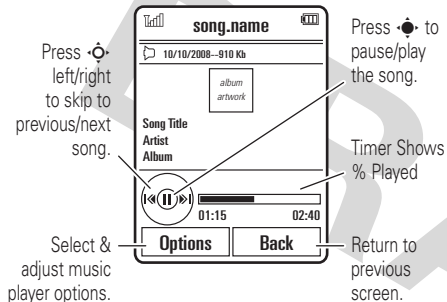

During a song, the music player shows the song title, artist, album, and artwork, if available.

Note: If you receive a call during a song, the song pauses until the call is over.

When a song is playing, press **Options** to select music player options:

options	
Hide	Hide the music player while music plays. To see the music player again, go to the home screen, then press <Up> up.
Manage	Show song Properties , such as file name, type, and size.
Delete	Delete the song file.
Send to	Send the song in a message or email, or send it to another device over a Bluetooth® connection. If the song is stored in phone memory, you can send it to the memory card installed in your phone.
Apply to	Add the song to a playlist or make it a ringtone.

options	
Use Bluetooth/ Use Handset	To send the audio to a Bluetooth® headset, turn on Bluetooth power, then select Use Bluetooth to connect to a recognized Bluetooth headset or search for a new headset. When a Bluetooth audio connection is active, select Use Handset to drop the Bluetooth connection and switch the audio back to the phone. Note: This option appears only when Bluetooth power is turned on.
Setup	Customize settings.

manually transfer music to your phone or memory card

Without using Windows Media Player 11, you can manually copy or sync music files from the computer to phone memory, or to an optional microSD memory

card in the phone. (To insert a memory card, see page 11).

Before you copy files to your phone, make sure the files are in a format that the phone recognizes. Your phone's music player can play the following types of audio files: AAC, AAC+, MP3, WAV, WMA, Real Audio G2/8/10.

on your phone

Press  >  **Settings** > **Connections** > **USB Setting**
> **Memory Card**

Attach the Motorola Original USB cable to the mini-USB port on your phone and to an available USB port on your computer. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.



on your computer

Your phone and memory card appear as two separate removable disks on your computer.

- 1 Find where your phone and memory card appear as Removable Disk icons. On a Windows PC, this is the My Computer window. On a Macintosh® computer, it's on the desktop.
- 2 Double-click the Removable Disk icon for your phone or memory card.
- 3 To copy the desired files onto the phone or memory card, drag and drop them onto the appropriate removable disk icon.
- 4 When you finish, remove the phone safely from your computer:
 - **If you are using a PC**, click the Safely Remove Hardware icon in the system tray at the bottom of your computer screen. Then select USB Mass Storage Device.

- **If you are using a Mac**, select and drag the Removable Disk icon to the Trash.

create a playlist

create a playlist on your computer

Use Windows Media Player 11 (or your computer's media player program) to create a playlist of music files stored on the computer.

On your phone, press  >  **Settings** > **Connections** > **USB Setting** > **Memory Card**.

Connect your phone to the computer through a USB cable connection, then drag and drop the playlist onto the phone.

create a playlist on your phone

Find it:  >  **Fun&Apps** > **Media Finder** > **Music Library** > **Playlists**, press **Options** > **Create New Playlist**

- 1 Enter a name for the playlist, and press **Save**.

- 2 Scroll to the playlist, and press  to select it.
- 3 Press **Options**, scroll to **Add Songs**, and press  to select it.
- 4 Navigate to the songs you want to add, and press  to select them.
- 5 Press **Add** to add the selected songs to the playlist.
- 6 Repeat the procedure to add more songs, or press **Back** to return to the **My Media** menu.

play a playlist

Find it:  >  **Fun&Apps** > **Media Finder** > **Music Library**
> **Playlists**, scroll to the playlist, press **Options** > **Play**

customize the music player

Find it:  >  **Fun&Apps** > **Media Finder** > **Music Library**,
press **Options** > **Setup**

You can select the following options:

options	
Shuffle	Play songs in a random order.
Equalizer	Optimize audio settings for the type of music you play.
Auto- Repeat	Replay the song or playlist when the last file finishes playing.
Stereo Effects	Set Spatial Audio and Bass Boost to customize sound.
Internet Connection	Set your Internet connection preferences. 

When you scroll to a song in a list and press **Options**, you may see additional options for the song and list, such as **Delete**, **Send to**, and **Apply to**.

close the music player

From the music player screen or home screen, press  to close the music player.

browser

Use your phone's full HTML browser to surf to your favorite Web sites, upload videos to a video blog, and download files and applications to your phone. Log on to your Internet-based email account to check your email on the go.

To **launch** the browser:

Find it:  >  Web Access > Browser

Press  up/down/left/right to scroll through Web pages. Scroll to a link and press  to select it.

Press **Back** at any time to return to the previous screen.

Some Web pages may contain a text entry window for exchanging information with a Web site. Scroll to the window, select it, and enter text as usual (for information about entering text, see page 20).

To **go to a Web page**, press **Options** > **Go to Page**, enter the Web address, then press **Go**.

To **bookmark** the current Web page, press **Options** > **Active Page** > **Add Bookmark**.

To go to a **bookmarked Web page**, press **Options** > **My Bookmarks** > *bookmark*.

To **upload** a video to a video blog site, see page 53.

To **download** a media file, theme, or Java™ game or application to your phone, go to the page that links to the file, scroll to the link, and select it.

To **exit** the browser, press **Options** > **Exit**.

perform a Google search

Use your phone's browser to perform a Web search by using the Google Web site.

Find it: Press 

- 1 Press **Options** > **Go to Page**.
- 2 Enter the Web address **www.google.com** and press **Go**.
- 3 Press  to select the Google text entry window.
- 4 Enter a search topic in the text entry window.
- 5 Press  down to scroll to the Google Search button, and press  to select it.

The browser displays the results of your search.

check your email

Check your personal Web-based **email** account (like Hotmail, Gmail, or Yahoo).


Find it:  >  **Web Access** > **Browser**

- 1 Press **Options** > **Go to Page**.
- 2 Enter the Web address for your Web-based email account, then press **Go**.

camera

take a photo

Find it: > Fun&Apps > Camera

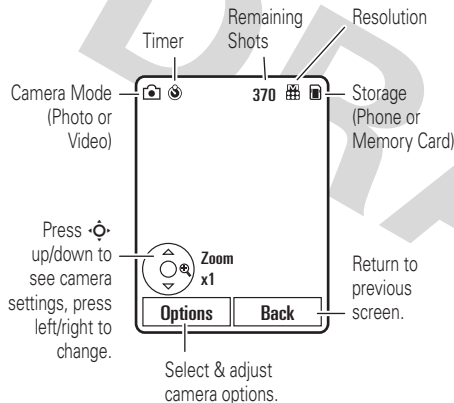

Shortcut: From the home screen, press the side select key to activate the camera.

To take the photo in the viewfinder, press .

- To store the photo, press .
- To send the photo in a message, press **Send** (see page 56).
- To discard the photo, press t .
- To select other photo options, press **Options**. You can choose to **Save Only**, **Discard**, **Send to** (message, email, or Bluetooth connection), **Apply to** (wallpaper, screensaver, new or existing contact), **Edit**, or **Print via** (Bluetooth connection, USB connection, or memory card).

view a photo

To view a stored photo that you've taken:

Find it: > Fun&Apps > Media Finder > Pictures > Captured Pictures > *photo*

auto-send

You can set up your phone to automatically send the photos you take to a list of contacts you specify.

To use auto-send, you first must activate the auto-save feature:

Find it:  >  Fun&Apps > Camera, press **Options**
> Camera Settings > Auto-Save > Enable

Then activate auto-send:

Find it:  >  Fun&Apps > Camera, press **Options**
> Camera Settings > Auto-Send > Enable

To specify the message recipients for the photos you take:

Find it:  >  Fun&Apps > Camera, press **Options**
> Camera Settings > Message Recipients

Tip: To send your photo in a picture message, the picture resolution must be set to **X-Small**, **Small**, or **Medium**.

To set resolution, press  >  Fun&Apps > Camera, press **Options** > Camera Settings > Picture Settings > Resolution.

self portrait

When the camera viewfinder is active, you can close the phone flip to show the viewfinder image in the external display. Press the side select key (see illustration on page 2) to take a photo. Your phone automatically stores photos you take when the phone flip is closed.

camera settings

When the viewfinder is active, press **Options** to select camera options:

options	
Capture	Take a photo.
Go To My Media	See, edit, and delete stored pictures and photos.


options	
Video Mode	Switch to the video camera.
Auto-Timer	Set a timer to take a photo.
Multi-Shot	Quickly take multiple photos.

options	
Camera	Customize camera settings:
Settings	• Review Time • Tag • Default Name • Storage Location • Auto-Save • Auto-Send • Message Recipients • Picture Settings • Resolution • Shutter Tone • Quality • Video Settings • Resolution • Capture Tone • Quality • Video Length

video

record a video

Find it: > Fun&Apps > Video Camera

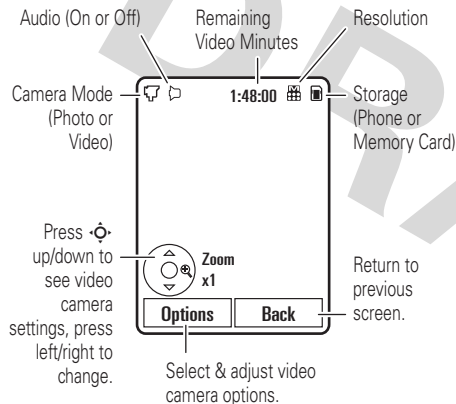

1 To begin video recording, press .

2 Press **Stop** to stop video recording.

- To store the video, press .
- To send the video in a message, press **Send**.



- To discard the video, press the clear/back key .
- To select other video options, press **Options**. You can choose to **Save**, **Discard**, **Send to** (message, email, or Bluetooth connection), or **Preview** the video.

Tip: To send your video in an MMS text message, the video length must be set to **MMS Short** or **MMS Long**. To set length, press > Fun&Apps > Video Camera, press **Options** > **Camera Settings** > **Video Settings** > **Video Length**.

When the video camera viewfinder is active, press **Options** to set video recording options:

options	
Capture	Begin video recording.
Go To My Media	See, edit, and delete stored videos.
Picture Mode	Switch to the photo camera.
Audio On/Off	Turn audio recording on/off.
Camera Settings	Customize camera settings (see page 51).

upload video to a blog

Upload a video you've recorded to your blog:

- 1 Launch your phone's browser.
- 2 Go to a video blogging service Web site.
- 3 Log in to your account.
- 4 Scroll to **Upload Videos** and press .
- 5 Follow the browser prompts to scroll to the video you want to upload, then press .
- 6 Scroll to **Upload** and press .


Your phone uploads the video to the blog.

play a video

Your phone can play the following types of video files:
MPEG4 + AAC, H.263 + AAC, and Real Video + Audio.

Find it: > Fun&Apps > Media Finder > Videos

> Captured Videos > video

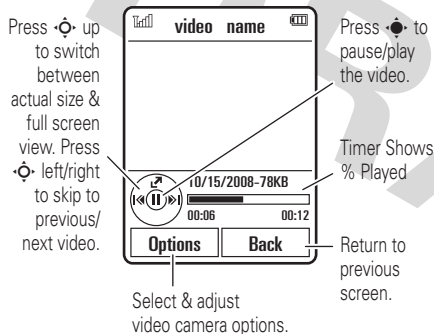

Note: Your phone's options may vary. Most options apply only to user-recorded videos, and are not available for pre-installed videos.

options	
Slideshow	Show a preview of each video in sequence.
Manage	Show video Properties , such as file name, type, and size.
Delete	Delete the video.
Zoom	Show the video at actual size, or scale the video to fit the viewing area.
Send To	Send the video in a message or email, or send it to another device over a Bluetooth® connection.

When a video is playing, press **Options** to set video playback options.

options	
Use Bluetooth/ Use Handset	To send the audio soundtrack to a Bluetooth® headset, turn on Bluetooth power, then select Use Bluetooth to connect to a recognized Bluetooth headset or search for a new headset. When a Bluetooth audio connection is active, select Use Handset to drop the Bluetooth connection and switch the audio back to the phone. Note: This option appears only when Bluetooth power is turned on.
Setup	Adjust video settings.

messages

text messaging

send a message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and put text and media objects on each page. You can send a message to other compatible phones, or to email addresses.



Find it: > Create Message

- 1 Press keypad keys to enter text on the page (for more information about text entry, see page 20).

To insert a **picture, sound, or other media object** on the page, press **Options > Insert**. Select the file type and the file. (**Note:** File size restrictions

may apply to pictures and videos sent in a text message.)

To insert **another page**, press **Options > Insert > Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press **Options > Sending Options** to set message options (such as **Subject** and **Priority**).
- 3 When you finish setting message options, press **Done**.
- 4 Press **Send To** to select message recipients. You can:
 - Select one or more entries from your contact list (press  to scroll to an entry, and press  to select it).

- Enter a new number or email address (press **Options** > **Enter Number** or **Enter Email**).

5 Press **Send** to send the message.

Your phone might tell you that this is a picture message, if it contains multiple pages or media objects. Some phones or networks don't support picture messages. Press **Yes** to send the message.

To save or cancel the message, press **Options** > **Save to Drafts** or **Cancel Message**.

receive a message

When you receive a message, your phone plays an alert, and the internal display shows **New Message** with the new message indicator .

To **read** the message, press **View**. If the message contains media objects:

- Pictures and animations show as you read the message.
- Sound files play as you read the message. Press the external volume keys on the side of your phone to change the sound volume.
- Attached files are added to the end of the message. To open an attachment, select the file indicator or file name.

To **answer** the message, press **Options** > **Reply**.

advanced message features

features	
send a prewritten quick note	
 > Templates > Text Templates > <i>quick note</i> , press Options > Send	
To create a new quick note:	
 > Templates > Text Templates , press Options > Create Template	
use a picture message template	
Open a picture message template with pre-installed media:	
 > Templates > Picture Msg Templates	
read new message or email	
When your display shows New Message , press Read .	

features	
read old messages	
 > Inbox	
Icons next to each message show if it is read  , unread  , urgent  , or has an attachment  .	
Press Options to perform various operations on a message.	
store message objects	
Go to a picture message page, then press Options > Store .	
create folder	
Create a personal folder to store your messages.	
 > Folders , press Options > Create Folder	

features

browser messages



Read messages received by your browser:

When your display shows **New Message**, press **View**.

To activate browser messages and adjust browser message settings:



, press **Options > Settings > Browser Messages**

mobile email

Your phone has mobile email capabilities:

Find it:  >  **IM&Email > Mobile Email**

> *email service provider*

You can use an existing email account for the listed providers, or create a new account.

To create a **new account**, select a provider and follow the prompts to set up your mobile email account.

instant messaging

Use instant messaging to share messages with your friends in real time.

Find it:  >  **IM&Email > IM**, scroll to your IM account, press **Log In**

If you don't have an IM account, select **[New Account]** to create one.

To **find others** online, select **Contact List** to see a list of other users.

To **start a conversation**, scroll to a name in the **Online Contacts** list and press **Send IM**.

To **open an active conversation**, scroll to a name in the **Conversations** list and press **View**.

To end a conversation, press **Options > End Conversation**.

To **log out** from your instant messaging session, press **Options > Log Out**.

create or edit an IM account

To create a new IM account:

Find it:  >  IM&Email > IM > [New Account]

To edit an existing IM account:

Find it:  >  IM&Email > IM, scroll to an account,
press **Options** > **Edit Account**

connections

file manager

Manage music and sound files, photos, videos, and other files stored on your phone, and on an optional removable microSD memory card.



Find it:  >  Office Tools > File Manager

Select a folder or **Memory Card** to see its contents.

To **play** a sound file or voice note, or **view** a photo or video, just scroll to the file and select it.

To **edit** a file: Scroll to the file and press **Options > Manage** to copy, move, or rename it. Other options let you delete, send, or apply the file. You can't perform some operations on some copyrighted or pre-installed files.

To **copy files** between your phone and a computer, you can use a cable connection (see following section) or a Bluetooth® connection (see page 64).

format memory card

To **format** the memory card or see memory card **properties** (such as name and available memory):

Find it:  >  Office Tools > File Manager

- 1 Press  to scroll to the memory card.
- 2 Press **Options > Memory Card > Format** or **Properties**.

move or copy files between the phone and memory card

Caution: When you **move** a file to a new location, the file is **deleted** from its original location.

Find it:  >  Office Tools > File Manager

- 1 Scroll to the file you want to move or copy.
- 2 Press **Options** > **Manage** > **Move** or **Copy**.


Note: The **Move** and **Copy** options do not appear if the file is copyright-protected.

- 3 Scroll to the destination location, then press **Place**.

cable connections

 To transfer data between your phone and a computer, insert the

mini-USB connector plug from a USB cable into your phone's mini-USB port. Connect the other end of the cable to the computer.

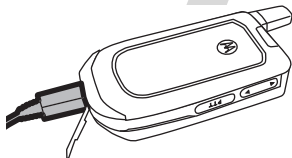

Note: A Motorola Original USB cable and supporting software may be included with your phone. These tools also are sold separately. Check your computer to determine the type of cable you need.



To use your phone as a **modem**: Use the modem connection setting on your phone (press  >  **Settings** > **Connections** > **USB Setting** > **Modem**). Connect your phone to the computer.

To **transfer contact list entries and calendar entries** between your phone and computer: Run the optional Motorola Phone Tools accessory application on your computer. The Phone Tools software automatically switches your phone to the proper connection setting required to sync your phone. See the Phone Tools user's guide for more information.

To make **data calls** through a computer: Use the modem connection setting on your phone (press  >  **Settings** > **Connections** > **USB Setting** > **Modem**). Connect

your phone to the computer. Use the computer application to place or answer the call.

To create a **new data connection** on your phone, press  >  **Settings** > **Connections** > **Data Connections** > **Add a Connection**).

To **copy files** between your phone and computer, see the instructions for manually transferring music files to the phone on page 44.

To **print** an image over a USB PictBridge connection: Use the print connection setting on your phone (press  >  **Settings** > **Connections** > **USB Setting** > **USB Printing**).

Connect your phone to a PictBridge-compatible printer. Select the image(s) you want to print, then press **Options** > **Print via** > **USB**.

Bluetooth® wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with



an optional Bluetooth headset or Bluetooth car kit to make handsfree calls; connect with a set of Bluetooth stereo headphones to listen to music stored on your phone; connect with a computer that supports Bluetooth connections to exchange files; connect with a printer that supports Bluetooth connections to print images; use your phone as a Bluetooth wireless modem to connect to the Internet.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

turn Bluetooth power on or off

Your phone automatically turns Bluetooth power on when you use a Bluetooth feature.

To turn Bluetooth power on or off at any time:

Find it:  >  **Settings** > **Connections** > **Bluetooth**, press **Options** > **Manage** > **Setup Bluetooth** > **Bluetooth Power** > **On**

Note: To extend battery life and maximize Bluetooth security, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not connect to another device until you use a Bluetooth feature again, or set Bluetooth power back to **On**.

use a Bluetooth headset or handsfree car kit

Before you try to connect your phone to a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the device user's guide). You can connect your phone with only one device at a time.

Find it:  >  **Settings** > **Connections** > **Bluetooth**, press **Options** > **Search For Device** > **Headset**

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list.
- 2 Press  to connect with the highlighted device.

copy files to another device

You can copy a media file, contact, calendar event, or bookmark to another phone or computer that supports Bluetooth connections.

Note: You can't copy some copyrighted objects.

Before you try to copy a file to another device, make sure the receiving device is **on** and **ready** in discoverable mode. Also, make sure the device is not busy with another Bluetooth connection.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Send To > Bluetooth** for an image or sound file.
 - **Send Contact Via > Bluetooth** for a contact.
 - **Share Event Via > Bluetooth** for a calendar event.
 - **Share Page Via > Bluetooth** for a bookmark.

- 3 Select a recognized device name.

or

Select **[Search For All Devices]** to search for new devices, then select the device where you want to copy the object.

- 4 Press **Options > Send**.
- 5 If necessary, enter the device passkey (such as 0000), and press **OK** to connect to the device.

receive files from another device

Before you try to receive a file from another device, make sure your phone's Bluetooth power is **on** (see page 63).

Place your phone near the device, and send the file from the device.

If your phone and the sending device were not previously paired, place your phone in discoverable mode so the sending device can locate it (press .

>  **Settings > Connections > Bluetooth**, press **Options > Find My Device On 3 Minutes**). The Bluetooth indicator  in the home screen flashes when your phone is in discoverable mode.

Your phone notifies you when file transfer is complete, and saves the file.

send a photo to a printer

You can send a photo to a printer that supports Bluetooth connections.

Note: You can print A4, US Letter, and 4x6 size pages. To print another size, copy the image to a linked computer and print it from there.

- 1 On your phone, take a new photo or scroll to a stored image that you want to print, then press **Options > Print via > Bluetooth**.

Note: If you see **Service Not Supported** when you try to print, select **Send To > Bluetooth** instead. (The **Send To**

option does not print the image name or date stamp.)

- 2 Select a recognized printer name, or **[Search For Printers]** to search for another printer where you want to send the image.

Note: If a printer is already listed in the **My Printers** list, press  right and select **Search for All Printers** to search for another printer.

- 3 If available, modify print options.

advanced Bluetooth features

Note: A device is *recognized* after you connect to it once (see page 64).

features

pair with recognized device

Press  >  **Settings** > **Connections** > **Bluetooth**, press  left/right to select the **My Devices** list, press  up/down to scroll to the device name, press  to connect.

drop connection with device

Scroll to the device name and press **Options**
> **Manage** > **Disconnect Device**.

features	
remove device from device list 	
Scroll to the device name and press Options > Manage > Remove Device .	
Note: You can't remove a device from the list while your phone is connected to the device.	
switch audio to Bluetooth headset or Bluetooth car kit during call 	
Press Options > Use Bluetooth .	
To switch audio back to the phone, press Options > Use Handset .	
edit properties of recognized device 	
Scroll to the device name, press Options > Manage > Edit Device .	

features	
set Bluetooth options 	
Press  >  Settings > Connections > Bluetooth , press Options > Manage > Setup Bluetooth .	

phone updates

Sometimes, we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated at: www.hellomoto.com/update

Note: Software updates do not affect your contact list or other personal entries or files. If you receive a software update but choose to install it later, see page 78.

other features

advanced calling

To use voice commands for calling, see page 24.

features

speed dial

Your phone can store nine phone numbers that you can call with a single keypress. To **store** a speed dial phone number:

 >  **Settings** > **Call Settings** > **Speed Dial**
> *speed dial location*

To **call** a speed dial number, press and hold the single-digit speed dial number for one second.

features

international calls



If your phone service includes international dialing, press and hold **0** to insert your local international access code (indicated by +). Then, press number keys to dial the country code and phone number.

hold a call

Press **Options** > **Hold** to put all active calls on hold.

mute a call

Press **Options** > **Mute** to put all active calls on mute.

features

call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Press  to answer the new call.

- To switch between calls, press **Switch**.
- To connect the two calls, press **Link**.
- To end the call on hold, press **Options > End Call On Hold**.

To turn call waiting on or off:

 >  **Settings > Call Settings > In-Call Setup > Call Waiting > On or Off**.

conference call



During a call:

Dial next number, press , press **Options > Link Calls**

features

transfer a call



During a call:

Options > Transfer Call, dial transfer number, press 

call forwarding



Set up or cancel call forwarding:

 >  **Settings > Call Settings > Call Forward**

call barring



Restrict outgoing or incoming voice calls or data calls:

 >  **Settings > Security > Barred Services**

TTY calls



Set up your phone for use with an optional TTY device:

 >  **Settings > Phone Settings > TTY Settings**

features

change phone line



If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number:

 >  **Settings** > **Call Settings** > **In-Call Setup** > **Active Line**

The active line indicator shows the active phone line (see illustration on page 20).

features

fixed dial



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Note: You must enter your SIM PIN2 code to turn fixed dialing on or off. If you forget your PIN2 code, contact your service provider.

Turn fixed dialing on or off:

 >  **Settings** > **Call Settings** > **Fixed Dialing** > **On or Off**

Use the fixed dial list:

 >  **Fun&Apps** > **Organizer** > **Dialing Services** > **Fixed Dial**

DTMF tones

Activate DTMF tones:

 >  **Settings** > **Call Settings** > **In-Call Setup** > **DTMF**

To send DTMF tones during a call, just press the number keys.

contacts

For basic contact list features, see page 15.

features
add new contact > Contacts , press Options > Create Contact Press left/right to select the details tab , address tab , ID tab , or notes tab . Press up/down to scroll to information you want to change, then press to select it.
call contact > Contacts , scroll to the contact, press to call Note: If a contact has multiple phone numbers or email addresses, press left/right to select the number or email address you want.

features
send message to contact > Contacts , scroll to the contact, press Options > Send Message
add additional phone number or email address to contact > Contacts , scroll to the contact, press Options > Edit Contact , press left/right to select the details tab , press up/down to scroll to an empty Number or Email field, press to select it. Note: This option isn't available for contacts stored on the SIM card.

features

set picture ID for contact

Assign a photo or picture (*picture ID*) to show in the display when you receive a call from a contact:

•◂ > ☎ **Contacts** > *entry*, press **Options** > **Edit Contact**, press ◂◃ left/right to select the **picture** tab , press ◂◃ up/down to scroll to **Picture**, press •◂ to select it

Note: This option isn't available for contacts stored on the SIM card.

features

set ring ID for contact

Assign a distinctive call alert (*ring ID*) for a contact:

•◂ > ☎ **Contacts**, scroll to the contact, press **Options** > **Edit**, press ◂◃ left/right to select the **ID** tab , press ◂◃ up/down to scroll to **Ring ID**, press •◂ to select it

Note: This option isn't available for contacts stored on the SIM card.

assign contact to category

•◂ > ☎ **Contacts**, scroll to the contact, press **Options** > **Edit Contact**, press ◂◃ left/right to select the **details** tab , press ◂◃ up/down to scroll to **Category**, press •◂ to select it

Note: This option isn't available for contacts stored on the SIM card.

features

set category view

☛ > ☑ Contacts, press **Options** > **Filter By**

You can show contacts in a predefined category (**Most Frequent**, **Family**, **Friends**, **Work**), or contacts in a category that you create (select **Create Category**).

create group mailing list

Assign contacts to a group message list or email list:

☛ > ☑ Contacts, press **Options** > **Create New** > **Message List** or **Email List**

Note: This option isn't available for contacts stored on the SIM card.

features

show contact photos

Show contacts with picture ID photos, or as a text list:

☛ > ☑ Contacts, press **Options** > **Setup** > **Default View** > **Thumbnail** or **List**

set contact list sort order

☛ > ☑ Contacts, press **Options** > **Default Sort Order** > **First Name** or **Last Name**

create and use private contacts

Identify one or more contacts as private contacts. You must enter your six-digit security code to see the private contacts on your contact list.

☛ > ☑ Contacts, press **Options** > **Setup** > **Private Contacts**

features

import contacts to phone memory

Import all contacts to phone memory, from the SIM card or from another location:

••• >  **Contacts**, press **Options** > **Import Contacts** > **SIM Card** or **File Manager**

manage SIM card contacts

••• >  **Contacts**, press **Options** > **Setup** > **SIM Card Manager**

Delete contacts stored on your SIM card, or import contact to the SIM card from phone memory, or from another location.

features

send contact(s) to another device

Send one or more contacts to another phone, computer, or device:

••• >  **Contacts**, scroll to the contact, press **Options** > **Share**, press ••• to select the current contact, press ••• up/down to scroll to **Bluetooth**, **Messaging**, or **Email** transfer method, press **Select** to select it

To send multiple contacts, press **Options** > **Share** > **Multiple Contacts** (instead of the current contact).

delete contact(s)

Delete one or more contacts from your contact list:

••• >  **Contacts**, scroll to the contact, press **Options** > **Delete**, press ••• to select the current contact, press **Yes** to confirm deletion

To delete multiple contacts, press **Options** > **Delete** > **Multiple Contacts** (instead of the current contact).

advanced personalizing

features
language Set menu language:  >  Settings > Phone Settings > Language
clock view Show an analog or digital clock in the home screen, or turn off the clock: From the home screen, press Shortcuts > Customize Home > Clock Style .
date view Show or turn off the date in the home screen: From the home screen, press Shortcuts > Customize Home > Date .

features
reset settings Reset default settings for all options except the unlock code, security code, and lifetime timer:  >  Settings > Phone Settings > Reset > Reset All Settings
delete data Caution: This option erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it. This option does not delete SIM card information:  >  Settings > Phone Settings > Reset > Delete All Data

features

delete SIM card information

Caution: This option **erases all information you have entered** (including contacts and calendar entries) **and content you have downloaded** (including photos and sounds) stored on your SIM card. After you erase the information, you can't recover it.

 >  Settings > Phone Settings > Reset
> Delete Memory Cards

call times

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times



See call timers:

 >  Call Log, press Options > Call Times

features	
in-call timer 	
Show call time information during a call:	
 >  Settings > Call Settings > In-Call Setup > In-Call Timer	
data times 	
See data call timers:	
 >  Call Log , press Options > Data Times	
data volumes 	
See data volume meters:	
 >  Call Log , press Options > Data Volumes	

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be

prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features	
auto answer (headset) 	
Automatically answer calls when connected to a car kit or headset:	
 >  Settings > Phone Settings > Headset Settings > Auto-Answer	
voice dial (headset) 	
Enable voice dial with headset send/end key:	
 >  Settings > Phone Settings > Headset Settings > Voice Dial	

network

features
network settings 
See network information and adjust network settings:  >  Settings > Network
software update 
Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can install it immediately, or defer installation until later. To install a deferred software update:  >  Settings > Phone Settings > Software Update > Install Now

personal organizer

features
set alarm  >  Fun&Apps > Organizer > Alarm Clock Shortcut: From the home screen, press Shortcuts > Set Alarm .
turn off alarm When the display shows an alarm: To turn off the alarm, press Dismiss or  . To set an eight-minute delay, press Snooze .
set calendar default view  >  Fun&Apps > Organizer > Calendar , press Options > Calendar Setup > Default View

features
add new calendar event ⌚ >  Fun&Apps > Organizer > Calendar, select the day and the start time, press ⌚, enter event details You can set a music file, voice note, or video as a calendar event reminder. When creating a calendar event, select Alarm Style > <i>alarm type</i>, scroll to the file (or create a new file), press Insert.
see calendar event ⌚ >  Fun&Apps > Organizer > Calendar > event To edit event details, press Options > Edit.
calendar event reminder When the display shows and sounds an event reminder: To see reminder details, select Open Event. To close the reminder, press Dismiss.

features
send calendar event to another device Send a calendar event to another phone, computer, or device: ⌚ >  Fun&Apps > Organizer > Calendar > event, press Options > Share Event via > Bluetooth or Message
manage downloaded files Manage files and applications that you've downloaded onto your phone from the browser or over a Bluetooth® connection: ⌚ >  Settings > Download Manager
world clock Show time and date information for multiple cities around the world: ⌚ >  Fun&Apps > Organizer > World Clock

features

task list

Create a checklist of tasks you need to perform, and set your phone to notify you when task deadlines arrive:

 >  Fun&Apps > Organizer > Task List

notes

Write and store notes on your phone:

 >  Fun&Apps > Organizer > Notes

features

record voice note

Record a voice note reminder to yourself, or record a phone call in progress:

 >  Fun&Apps > Voice Notes, press  to start recording, press **Stop** to stop recording

To save the voice note, press **Save**.

To perform various operations on the voice note, press **Options**.

Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

features
play voice note Play back a voice note you've recorded:  >  Fun&Apps > File Manager > Voice Notes > <i>voice note</i>
calculator  >  Fun&Apps > Organizer > Calculator
currency converter  >  Fun&Apps > Organizer > Calculator, press Options > Set Exchange Rate, enter exchange rate, press Set, enter amount, press Options > Convert Currency

security

features
SIM PIN Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows SIM Blocked. Lock or unlock the SIM card:  >  Settings > Security > SIM Lock
lock application  >  Settings > Security > Application Lock

features

manage certificates



Enable or disable Internet access certificates stored on your phone:

 >  **Settings > Security > Certificates**

Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games

features

start a game or application



Start a Java™ game or application:

 >  **Fun&Apps > Games & Apps > *game or application***

airplane mode

Turn off your phone's calling features in locations where wireless phone use is prohibited. This lets you use the music player and other non-network features while you are on an airplane, without interfering with airplane communications.

 >  **Settings > Phone Settings > Airplane Mode > On**

To reactivate your phone's calling features, turn off airplane mode.

service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the

maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.32 W/kg, and when in the PTT mode, as described in this user guide, is 0.24 W/kg. The SAR value for this product in its body-worn use) is 0.80 W/kg. (Note: Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

Approval Number from your product's label in the "Search" bar on the Web site.

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

IMEI: 350034/40/394721/9

CE 0168

Type: MC2-41H14

Product
Approval
Number

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the Product

OPEN SOURCE SOFTWARE INFORMATION

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device you may email your request to ossmanagement@motorola.com.

Optionally, you may choose to send your request in writing to:

MOTOROLA, INC.
OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com to serve as a portal for interaction with the software community-at-large.

To see additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, follow these instructions:

- 1 From the phone Main Menu, select **Fun&Apps**.
- 2 From **Fun&Apps**, select **File Manager**.
- 3 From **File Manager**, select **OpenSource** folder.
- 4 Highlight **OpenSourceNotices.html** and press **Select**. This will launch the browser and open the notices document.

DRAFT



MOTOROLA

Important Safety and Legal Information

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2007.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder,

holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola—or if you hang your mobile device from a lanyard around your neck—keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue use if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- Do not place a mobile device in the airbag deployment area.

Responsible driving practices can be found in the "Smart Practices While Driving" section in this user's guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.

Symbol	Definition
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries and Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the “Battery Use & Battery Safety” section in this user’s guide.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the

lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Product Registration

Online Product Registration:

direct.motorola.com/hellomoto/Motosupport/source/registration.asp

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation

or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

“Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.”

There is no special handling required by consumers.

Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device’s keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device which updates the device’s security, install it as soon as possible.

- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, see the section entitled “master clear” or “delete data” in this user’s guide.

Note: For information on backing up your mobile device data before erasing it, go to www.motorola.com and then navigate to the “downloads” section of the consumer Web page for “Motorola Backup” or “Motorola Phone Tools.”

- **Understanding AGPS**—In order to comply with emergency caller location requirements of the FCC, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Smart Practices While Driving

Drive Safe, Call SmartSM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.



- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

A

- abc mode 22
- accessories 10, 63, 77
- active line indicator 20
- active line, change 70
- airplane mode 18, 26, 82
- alarm clock 78
- alert
 - set 24, 29, 32
 - turn off 23, 36
- alert profile 29
- alert style profiles 19
- answer a call 15, 35
- audio file formats 44

B

- battery 14

- battery indicator 20
- battery life, extend 12, 33, 64
- blog 53
- Bluetooth indicator 19
- Bluetooth wireless 63
- bonding. See Bluetooth wireless
- brightness 33
- browser 47, 48, 59, 79
- browser messages 59

C

- cables, using 62
- calculator 81
- calendar
 - add event 79
 - send event 79
 - set view 78
- call
 - answer 15, 35
 - end 15
 - make 15, 16
- call alert 72
- call barring 27, 69
- call forward indicator 20
- call forwarding 69
- call timers 76, 77
- call waiting 69
- caller ID 37, 72
- camera 2, 49, 52
- car kit 77
- center key 1, 10
- certificate management 82
- clear/back key 1, 21
- clock 31, 75

codes 27, 28
conference call 69
contact list
 add entry 15, 71
 dial entry 16
 filter 73
 picture ID 37
 search 16
 send contact 74
 view 73

D

data call 77
date 31, 75
delete data 75
delete text 21
dial a phone number 15, 16, 70
dialed calls 36
display 3, 18, 33, 75
download files 47
download manager 79

download media objects 58
drafts folder 57
DTMF tones 70

E

earpiece volume 23
email address 15, 71
email, read 58
emergency number 38
end a call 15
end key 15
Enter Unlock Code message 27
export regulations 102
external display 2, 24

F

feature icons 34
file manager 61
filter contacts 73
fixed dial 70
flip 15, 24, 35

folder, create 58
forward calls 69

G

group mailing list 73

H

handsfree speaker 2, 26
headset 77
hearing aids 100
hold a call 68
home screen 3, 18, 34, 75

I

IM 59
IM indicators 19
in-call indicator 20
Incoming Call message 37
instant messaging. See IM
international access code 68

K

keypad 35

keypad volume, adjust 29, 30

L

language 75

lanyard hook 2

linking. See Bluetooth wireless

location indicator 19

lock

 application 81

 external keys 27

 phone 28

 SIM card 81

Low Battery message 20

M

main menu, personalize 34

make a call 15, 16

media playback 29, 30

media volume, adjust 29, 30

memory card 61

menu 3, 18, 34

menu icons 18, 34

menu key 10

menu, personalize 34

message

 read 57, 58

 send 56

message indicator 19, 57

message key 1

message templates 58

mini-USB port 1, 2, 14, 62

Missed Calls message 37

mobile email 59

MP3 sound files 39

music player 39

mute a call 68

N

navigation key 1, 10

network settings 78

notes 80

numeric entry mode 23

O

open to answer 35

optional accessory 10

optional feature 10

P

pairing. See Bluetooth wireless

passwords. See codes

perchlorate label 103

personalize 75

phone number

 store 15, 71

 your number 17, 70

photo, take 49

picture ID 37, 72

picture message 58

PIN code 15, 27, 81

PIN2 code 27, 70
power key 1, 15
predictive text entry 21
printing 63, 65
profile indicator 19
profiles 19, 29

Q

quick note 58

R

received calls 36
recent calls 36
redial 37
reset settings 75
resolution 51
return a call 37
ring ID 72
ring style 24
ringer ID 37
ringer volume, adjust 29, 30

ringtone 29, 32, 43

S

safety information 90
safety tips 104
screensaver 32, 33
security code 27
send key 1, 15
side select key 1, 2, 24
signal strength indicator 19
silent profile 24, 29
SIM Blocked message 81
SIM card 11, 15, 27, 70, 81
SIM card, delete information 76
skin 32
smart key 24
soft keys 1, 18
software update 67, 78
speakerphone 77
speed dial 68
store phone numbers 15, 71

store your phone number 17
symbol entry mode 23

T

task list 80
text edit 21
text entry 20
text entry mode 22
text messaging 56
theme 32
time 31
timers 76, 77
transfer a call 69
TTY device 69
turn on/off 15

U

unlock
 application 81
 external keys 27
 phone 15, 27, 28

SIM card 81
unlock code 27, 28
USB cables 62

V

vibrate profile 24, 29
video 52
video blog 53
video file formats 54
voice command key 1, 2, 24
voice commands 24
voice dial 24, 77
voice note 80, 81
voicemail 38
voicemail message indicator 38
volume 23, 29, 30
volume keys 1, 2, 23

W

wallpaper 32
warranty 96

110 index

Web pages 47, 48
WHO information 101
word text entry mode 21
world clock 79

Y

your phone number 17

U.S. patent Re. 34,976