

INSTRUCTION MANUAL

A representative version of the user's manual follows:

At a glance

 
Congratulations

DROID XOOM by Motorola leads a revolution in mobile computing.

- Enjoy full length movies in mind-blowing 1080 HD that's richer and clearer than ever before. It's like ripping your HDTV off the wall and taking it with you.
- Experience out of this world entertainment wherever you go. Books, music, and movies, all available wherever, whenever.
- Stay in the loop, always. Access information from all your different sources—check your Gmail or exchange email, view your calendars, even send out appointments or meeting notices.
- If you're a gamer, you're no longer tied to your console. With NVIDIA powering rich graphics at lightning fast speeds, you'll get intense, supercharged performance.

Caution: Before charging or using your device for the first time, please read "Safety, Regulatory & Legal" on page 59. Once your phone is up and running, press Menu  > **Settings** > **About phone** > **Safety & regulatory** to read the full information.

Your device



Note: Your device might look a little different.

Home screen

You'll see the home screen when you turn on the tablet or touch Home  from a menu.



With a touch or a swipe you can see more home screen panels, select apps and widgets, scroll through lists, zoom in and out, and more. (See “Android on your tablet” on page 5.)

Featured apps

- **Google Editions**—Buy books directly from Google and other online retailers—including independent bookstores—and add them to an online library tied to your Google account.

[Other content pending—depending on apps availability.]

More

- **Answers:** Touch **Launcher icon**  **Apps > Help Center.**

You can also flick your home screen left or right to see the Getting Started and Tips & Tricks widgets.

- **Updates:** Updates, online help and more at www.motorola.com/mydroidxoom.
- **Accessories:** Find accessories for your device at www.motorola.com/products.

Notes:

- All screens in this guide are simulated. Actual displays may vary.
- This device supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.
- Instructions to perform tasks in this guide may change depending on the software version on your device.
- Unless specified otherwise, all instructions to perform tasks in this guide assume that you are starting from the home screen.

Contents

Let's go	3
Android on your tablet	5
Text entry	13
Web	15
Photos & videos	16
Music	23
email	25
Google Maps™	27
Google Latitude™	29
Tips & tricks	30
e-books	31
Bluetooth® wireless	32
Wi-Fi™	33
Memory card & file management	35
Tools	36
Management	37
Security	38
Troubleshooting	40
Safety, Regulatory & Legal	41

Let's go

let's get you up and running

Charge your tablet



Caution: Please read the battery use and safety text in the important legal and safety information packaged with your phone.

 
Tip: To save battery life, see "Battery tips" on page 30.

Power on & go

- 1 Press and hold Power/Lock  on the back of your tablet to turn it on.



- 2 Follow the screens to select a language and a location service, then set the date and time.



- 3 Touch **Activate** to activate your mobile service now (if not already activated), or touch **Skip** to set up a Wi-Fi connection.

Note: See the next section “Wi-Fi™ connect” for Wi-Fi setup instructions.

- 4 Follow the setup wizard to create or log in to your Gmail account.

Record your Google account information for future reference.

 
Username: _____@gmail.com

Password: _____

Note: If you have an existing Gmail account, your contacts from that account are synced to your device. Whenever you choose to select all contacts for the one you want, your tablet shows every contact, in every groups.

Wi-Fi™ connect

If you want to use a Wi-Fi network for even faster Internet access, touch the Quick Settings Menu and drag upward.



Touch **Settings > Wireless & networks > Wi-Fi settings**. Then touch **Wi-Fi** to search for and connect to wireless networks.

There's more in “Wi-Fi™” on page 33.

Key tips

Sleep & wake up

To save your battery, prevent accidental touches. or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power/Lock . To wake up the touchscreen, just press Power/Lock  again.



 
Lock screen

To lock the screen, press Power/Lock . or let the screen time out (don't press anything).

To unlock the screen, press Power/Lock . Then, drag  to the right.

Change volume

Press the volume keys to adjust the volume.



Android on your tablet

a few essentials

Touch tips

Here are some tips on how to navigate around your DROID XOOM by Motorola.

Touch

To choose an icon or option, *touch* it.



Touch & hold

To open special options, *touch and hold* an icon or other item.



Drag

To scroll through a list or move slowly, *drag* across the touchscreen.

Tip: When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A - Z.



Flick

 
To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.

Zoom

Get a closer look at maps or web pages. To zoom in, *double-touch* (tap twice, quickly) the screen. To zoom out, *double touch* the screen again.

You can also zoom in or out by pinching your fingers together or moving them apart on the screen.




Rotate the screen

In many apps, the touchscreen adjusts to display in landscape mode when you turn the phone sideways. Touch the Quick Settings Menu and drag upward, then touch **Settings > Display > Auto-rotate screen**.

Home screen

 The *home screen* gives you all your latest information in one place.




Note: Your home screen might look a little different.

The home screen extends left and right to give you more room for adding shortcuts, widgets, and more.



Navigation icons


Several icons appear at the bottom of the home screen and all other screens.

 

- Back —Return to the previous screen.
- Home —Return to the home screen.
- Recent apps —Display up to the last eight apps you used most recently. Touch a displayed app to open it.

Notifications

 Your home screen displays notifications such as status, email, or calendar or event reminders.



Touch a reminder to see details.

 
Use & change your home screen

On your home screen, *shortcuts* are icons that open your favorite apps, Web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates.

Click the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, touch it. Touch Home  to return to the home screen.

- To **add** a widget, touch  > **Widgets**. To add a shortcut, touch  > **App shortcuts** or  > **More**. Touch an object and drag it into one of the home screen panels outlined at the top of the screen. (Flick left and right to see all available widgets.)



You can add a folder to organize your shortcuts.

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another location, another panel, or to the trash at the top of the screen.

Personalize

Sounds: Open the Quick Settings Menu, then touch **Settings > Sound**

 
Display settings:

- To set display brightness, open the Quick Settings Menu and touch **Settings > Display > Brightness**.
- To set orientation, open the Quick Settings Menu and touch **Settings > Display > Auto-rotate screen**.
- To set animation, open the Quick Settings Menu and touch **Settings > Display > Animation**.

Note: Some apps are designed so that your tablet can “animate” them by rotating, fading, moving, and stretching one or more images.

Search

To search, touch Search , then use the search window that appears.



To search by **voice**, touch , then speak your keyword(s) when prompted.

To **type** your search, touch the search window, then enter your keyword(s) and touch .

To **change** search settings, touch .


Quick tips

If ever you're not sure what to do next, try one of these:

To...	
Get the details —Open a text message or items in lists.	Touch the message or item.
See screen menu —Open a menu for the current screen.	Touch Menu 
See item options —Open an options menu (if available) for an item on the screen.	Touch & hold the item.
Start again —Go back to the home screen.	Touch Home 
Wake up your tablet —Turn on a sleeping touchscreen.	Press Power/Lock 

Apps

 You can find all of your apps in one place. From the home screen, touch **Launcher icon**  **Apps**.



Want more? No problem: To download more apps, touch **Launcher icon**  **Apps** >  **Market**.

Your tablet can tell you when there's an updated app or other software. To install the update, just follow the instructions on your screen.

Browse & install apps

Get all the fun games and cool apps you want! Android Market™ provides access to applications developed by

developers worldwide, so you can find the app you want. If you need help or have questions about Android Market, touch Menu  > **Help**.

Find it: Launcher icon  Apps >  Market

Scroll to and touch the app you want to install. Then, touch **Install** (if app is free) or **Buy**.

Manage & restore apps

Find it: Menu  > **Settings** > **Applications** > **Manage applications**

Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear cache**, or other options.

To reinstall apps from Android Market, touch **Launcher icon**  Apps >  Market > **My downloads**. Previously installed apps are listed and available for download.

Important customer information

Please be advised that many services and applications offered through this unique device are provided by Google™ and various application developers. If you use, link to or download a Google service, or an application such as a non-Verizon Wireless location based GPS-type service, chat room, marketplace or social network from this device, you should carefully review the terms of such service or application. If you use any of these non-Verizon Wireless services or applications, personal information you submit may be

read, collected, or used by the service or application provider and/or other users of those forums.

 
Motorola, Inc. and Verizon Wireless are not responsible for your use of those applications or information you choose to submit or share with others. Specific terms and conditions, terms of use, and privacy policies apply to those applications and services. Please review carefully any and all terms and conditions applicable to those applications and services including those related to any location-based services for any particular privacy policies, risks or waivers.

Your Verizon Wireless customer agreement terms and conditions and certain other specifically identified terms govern your use of any Verizon Wireless products and services.

Settings

Open the Quick Settings Menu to see quick settings for brightness, sound, orientation, airplane mode,

network, and Bluetooth wireless. Just drag upward from the bottom of the home screen.



To see and modify *all* settings for your tablet, touch **Settings**



[Update my tablet](#)

You can check, download, and install tablet software updates using your tablet, or using your computer:

- Using your tablet:

You may get an automatic notification of an available update on your tablet. Simply follow the instructions to download and install.

To manually check for updates, touch Menu 
> **Settings** > **About tablet** > **System updates**.

Your tablet downloads any updates over your mobile network. Remember, these updates can be quite large (25MB or more) and may not be available in all countries. If you don't have an unlimited data plan, or mobile network updates are not available in your country, you can update using a computer.

- Using your computer:

On your computer, go to www.motorola.com/myXOOM and check the "Software" links. If an update is available, simply follow the installation instructions.

 
Text entry

keys when you need them

Touchscreen keyboard

You can open a keyboard on your screen by touching a text field. To close the keyboard, touch Back .

Different keyboards open for different text entry screens. For example, this keyboard opens when you create an email message:



Input methods

To select an input method, touch and hold a text entry area on the screen to open the **Edit text** menu. Touch **Input method**, then touch the method you want:

Multi-touch keyboard

Enter text a letter at a time. As you type, your phone suggests words from your dictionary and chosen language. Your phone also automatically enters apostrophes in some words, like “dont.” You can also touch two keys at the same time, such as Shift  with a letter.

Typing tips

To...	
Enter numbers and special characters.	From the letters keyboard, touch  . (Key changes to  .) Touch  to see more special characters. Touch  to return to numbers.
Enter one capital letter.	Touch Shift  .
Enter only capital letters.	Touch and hold Shift  . Touch again to revert to lowercase.
Cut or Copy selected text	Touch and hold text, then touch Cut or Copy .

To...

Paste cut or copied text

Touch and hold location to paste, then touch **Paste**.

Delete a character (hold to delete more)

Touch Delete .

To change text entry settings, touch the keyboard icon at the lower right of the screen, then touch **More**.

Web

you don't need a PC, surf the web with your phone

Quick start: [Browser](#)

Find it: **Launcher icon**  Apps >  **Browser**



Note: If you can't connect, contact your service provider.

Connect

Your phone uses the mobile phone network (over the air) or a Wi-Fi connection to automatically access the Web.

Note: Your service provider may charge to surf the Web or download data.

To use a wireless network, press Menu  > **Settings** > **Wireless & networks**. Touch **Wi-Fi** to turn it on and touch **Wi-Fi settings** to search for nearby wireless networks. Touch a network to connect.

Select links

When you touch a link, your phone outlines it and goes to that page. If you touch and hold the link, your phone shows options, like **Open in new window** or **Bookmark link**.



Play web videos

The  icon on a web page or link indicates that a video is available. Just touch  to begin playback. Double-tap the video during playback to enlarge it for better viewing.

Browser options

Press Menu  to see browser options:

options	
New Window	Open a new browser window.
Bookmarks	See your bookmarks.

options	
Windows	View the browser windows that are currently open.
Refresh 	Reloads the current page.
Back/Forward	Navigate to previously viewed pages.
More	Shows additional browser options.

Photos & videos

see it, capture it, share it!

Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

BLOCKBUSTER videos

Blockbuster On Demand is a service that allows you to purchase or rent and download video assets from your mobile phone. To use this service, you need a Blockbuster account and a connection to a Wi-Fi network.

You can play rented videos on your mobile phone.

You can play purchased videos on your phone and on PCs or TVs that are connected to a TiVo® DVR, a Blu-ray player, or 2Wire™ media platform.

Just click on the free Blockbuster app:

Find it: Launcher icon  Apps >  **Blockbuster**

The app completes an upgrade procedure, which may take a few minutes. When the upgrade is complete, you will be prompted to activate your phone:

- If you don't have a Blockbuster account, touch **Activate Using Device** or **Activate Using PC**. When you activate the device, you will be prompted to add credit card information for your payment option.

- If you already have a Blockbuster account, touch Enter PIN, then enter your account information.

Now you can browse or search Blockbuster.com to find the videos you want to rent or purchase.

YouTube™ videos

Find it: Launcher icon  Apps >  YouTube



The YouTube user-generated content Web site lets you share videos with YouTube users everywhere. You don't need a YouTube account to browse and view videos.

Note: If you don't have a YouTube account, visit www.youtube.com to find out more. To create an account or sign in, go to "Log in or create account" on page 18.

Watch YouTube videos

Watch YouTube Videos

See popular video categories, like **Featured**, **Most viewed**, and **Top rated**. Touch a category, then touch the video to start playing it. To see more video categories, touch Menu  > **Categories**. To see a video in high quality, touch Menu  > **Settings** > **High quality video**.

Search for videos

Find it: Launcher icon  Apps >  YouTube > Menu  > **Search**

Enter text, then touch **Search**. To clear your search history, touch Menu  > **Settings** > **Clear search history**.

Share videos

Send someone a link to a video that you are watching.

- 1 Touch the video to select it.
- 2 Touch Menu  > **Share**.
- 3 Address and complete your email, then touch **Send**.

[Log in or create account](#)

Find it: Launcher icon  Apps >  YouTube

> Menu  > **My account**

- 1 To create your YouTube account, touch the “Don’t have a YouTube account? Touch here to create one” link.

If you already have a YouTube account, enter your username, password and touch **Sign in**.

- 2 For a new account, enter a username, and complete the fields, then touch **I accept**.

[Upload videos](#)

Find it: Launcher icon  Apps >  YouTube

> Menu  > **Upload**

- 1 Touch the video you want to upload. You can change the video title, description, set the access, and add tags.
- 2 Touch **Upload**.

[Take & share photos & videos](#)

[Photos](#)

Take that family photo, and post it online for everyone to see.

Note: To get the clearest photos, wipe the lens clean with a soft, dry cloth before you take a photo.

Find it: Launcher icon  Apps >  Camera.



To take the photo, touch .

Photo modes—You can make adjustments to optimize your shot. Touch a button on the right side of the screen to make changes (touch the screen to turn on the buttons if necessary):

- —Set flash: **Auto**, flash **On** or **Off**.
- —Adjust for ambient light: **Auto**, **Incandescent**, **Daylight**, and **Fluorescent**.

- —Set special effects: **None**, **Mono**, **Daylight**, **Sepia**, **Negative**, **Solarize**, and **Posterize**.
- —Select the camera lens on the **Back** or **Front** of the tablet.
- —Select **Store location**, **Focus mode**, **Exposure**, **Picture size**, **Picture quality**, or **Scene Mode**.

Photo options—Until you exit the viewfinder, photos that you take are displayed as thumbnails. Touch a thumbnail to access these options:

- To **start a slideshow** of all of the thumbnails, touch .
- To **send** the photo in a message, transfer it using Bluetooth® wireless, or post it online, touch .
- To **delete** the photo, touch .
- To **see detailed information** about the photo, touch **Details**.
- To **rotate** photo, touch **Rotate Right** or **Rotate Left**.
- To **set** the photo as a wallpaper or contact photo, touch > **Set picture as** > **Contact Photo** or **Wallpaper**.
- To **crop** the photo, touch > **Crop**.

Videos

Find it: **Launcher icon** **Apps** > **Camera**, then slide the toggle (in the lower right corner) up to .

Note: To get the clearest videos, wipe the lens clean with a soft, dry cloth before you record a video.



To record the video, touch . Touch to stop the recording.

Video modes—You can make adjustments to optimize your video. Touch one of the buttons on the right side of the viewfinder to make changes (you may need to touch the screen to make the buttons appear):

- ?? (not functioning on my sample Everest).

Camcorder options—Immediately touch the captured video to view options:

- ?? (not functioning on my sample Everest).

[View your photos & videos](#)

Find it: Launcher icon  Apps >  **Gallery**

Touch an option for the photos or videos you want to access:



- *Camera*—All of the photos on your table.
- ??.

- *Folders*—Photos and videos grouped by the folders where they're saved.

Select and view—Touch the **Gallery** option (such as **Camera roll** or **Folders**) you want. Next, touch a folder name or tag name if necessary. Photos and videos are displayed as thumbnails. Touch a thumbnail to select it for viewing or playback.

When you select a thumbnail, it is enlarged to normal viewing size. Videos are paused at the beginning. Touch the play  and pause  buttons on the screen to control video playback.

Note: To see the buttons while the video is playing, touch the display.

[Share photos & videos](#)

Find it: Launcher icon  Apps >  **Gallery**

To send a photo or video in a message or post it online:

- 1 Touch the **Gallery** option (such as **Camera roll** or **Folders**) you want. Next, touch a folder name or tag name if necessary.
- 2 Touch and hold a photo or video, then touch **Share**.
- 3 Choose how you want to share—like **Bluetooth** or **Email**.

[Manage photos & videos](#)

Find it: Launcher icon  Apps >  **Gallery**

- 1 Touch the **Gallery** option (such as **Camera roll** or **Folders**) you want. Next, touch a folder name or tag name if necessary.
- 2 Touch and hold a photo or video, then select **Quick upload**, **Share**, **Edit**, **Delete**, and **More (Set as, Print)**.

Tip: To copy photos to/from a computer, go to “USB connection” on page 35.

Media share

Find it: **Launcher icon**  **Apps** >  **Media Share**

Media Share gives you an easy way to share your media content—photos, videos, and tunes—with friends and family.

Share your media via DLNA devices: The **Media Share** wizard guides you through the easy setup steps.

Share photos & videos: Share any photos or videos on your phone, even the ones you created. Or, if you want, see your photos and videos in HD quality on an HDTV or monitor.

More tunes: Enjoy favorites from your phone playlist on your home sound system. Or get music from your portable music player and add it to your phone’s music library.

Connect

You must be connected to a Wi-Fi network or another device:

- Connect to your computer with a USB cable (see “USB connection” on page 35).
- Connect to a Wi-Fi network or use your own Wi-Fi hotspot (see “Wi-Fi™” on page 33).

Media Share will lead you the rest of the way.

Options

Note: If you’re using a Wi-Fi connection, you must allow access to other devices to download media from your phone to share your files. If you want to access media files on other devices, they must allow access.

After you open **Media Share**, touch the **Media Share** feature you want to use.

- **Share media**—Allow other devices to access media files on your phone. Without downloading any media from your phone, other people can view your pictures or videos, or play your songs, on their own devices.
- **Sync media**—Sync the media files on your tablet with other devices.
- **Copy media**—Copy a picture from one tablet to another.

 
- **Play media**—Select media for playback on another device in a Wi-Fi network.

DLNA

DLNA lets you expand the ways you can enjoy your photos and videos on a DLNA Certified computer, HDTV, or monitor, using your own Wi-Fi network.

Make sure your phone is connected to an active Wi-Fi network (see “Wi-Fi™” on page 33) and has access to a DLNA Certified device.

- 1 Touch **Launcher icon**  **Apps** >  **DLNA**.
- 2 Touch **Play media**, **Copy media to server**, **Copy media to phone**, or **Share media**. Then follow the instructions you see on your phone.



HD viewing

You can create your own HD videos to view on your wide screen HDTV or monitor in the comfort of your home.

HDMI



Note: You can view only user-generated content—your own photos and recorded videos. You cannot view commercial content—photos or videos that you purchased and downloaded

 
- 1 Connect an HDMI cable from the HDMI port on your phone (see “Your device” on page 1) to an HDMI port on the TV monitor.
- 2 Touch **Launcher icon**  **Apps** > **Media Share** > **Start** > **Television** > **Play**.

Music

when music is what you need...

Touch and play—instant music. Just open your music library, then select what you want to play.

Find it: **Launcher icon**  **Apps** >  **Music**



Tip: When a song is playing, you can add it to a playlist by touching Menu  > **Add to playlist**.

Your tablet can play many types of files: AAC, AMR, MP3, WAV, WMA, AAC+, and MIDI.

Note: DRM-protected files are NOT supported.

Set up music

Transfer music from your Microsoft™ Windows™ PC or Apple™ Macintosh™ computer to your tablet by using a USB connection (see “USB connection” on page 35).

To transfer music, you'll need:

- USB data cable (included with your tablet).
- SD memory card (16GB—included with your tablet).

Your music is stored on your memory card. Your tablet supports removable microSD memory cards up to 32GB capacity. To make sure your memory card is installed, go to “Charge your tablet” on page 3.

Tip: To see the available memory on your memory card, open the Quick Settings Menu, then touch **Settings** > **SD card & Phone storage**.

What headphones can I use?

Your phone has a 3.5mm headset jack for wired stereo listening. You can go wireless with Bluetooth® stereo headphones or speakers (see “Bluetooth® wireless” on page 32).

Play music

Open your music library, then select what you want to play.

Find it: Launcher icon  Apps >  Music



Your music is stored by **New and recent**, **Albums**, **Artists**, **Songs**, **Playlists**, and **Genres**. Open the pulldown menu in the top left corner of the screen and select the option you want, then touch the song or playlist you want to play. Touch Menu  > **Party**

shuffle to randomly play all your songs, or touch **Search** to look for a song.



Music player controls

To control music playback:

- **Play/pause**—Touch .
- **Previous/next**—Touch .
- **Fast forward/rewind**—Touch and hold .
- **View playlist**—Touch .
- **Shuffle** all—Touch .
- **Repeat all songs**—Touch .
- **Volume**—Press the side volume keys.
- **View library**—Touch Menu  > **Library**.

- **Add to playlist**—Touch Menu  > **Add to playlist**.
- **Delete**—Touch Menu  > **Delete**.

Music player options

Any time you use the music player, touch , then select **Manage music**, **Library options**, **Shuffle all**, and **Search**.

Hide, wake, turn off

Touch Home  to use another app. Your music continues to play.

When you see  in the status bar, a song is playing. Flick down to see details. Touch the song to return to the music controls.

To turn off your music, touch .

Playlists

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create a new playlist.

To add a song to the playlist you're playing, touch Menu  > **Add to playlist** in the music player.

 
To edit, delete and rename playlists, touch and hold the playlist in the music library.

email

sometimes it's best to email . . .

Quick start: email

Find it: Launcher icon >  **Email**



Tip: To see more messages, flick or drag up.

Read & reply to email messages

Find it: Launcher icon >  **Email**

- Touch a message to open it and all of its replies.

- To respond to a message, just open it and enter your response in the text box at the bottom.
To forward a text message, touch and hold a message in the conversation, then touch **Forward message**.
- To open options, touch and hold a message.

Create email messages

Find it: Launcher icon >  **Email**

Choose a message type, such as **Text Messaging** or **Facebook**. Then, enter the recipient and message. In text messages and emails, touch Menu  for options like **Insert...** or **Attach Files**.

Receive & open email attachments

When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster viewing, and your tablet will show **Get HTML version**.

While viewing the attachment, touch it to save it, share it, and more.

Tip: To send and receive large attachments faster, use a Wi-Fi™ connection, in “Wi-Fi™” on page 33.

Set up email

The first time you turned on your tablet (see page 3), you logged in to your Gmail™ account. You can add any other email account that you set up.

To add other email accounts,  **Apps** >  **Email** > Menu , then touch **Manage accounts** > **Add account**. On the **Setup accounts** screen, touch **Email** and enter your email account information.

Email contacts

Find it: Launcher icon >  **Email** > >  > **Contacts**

Touch a contact to view it.

Create contacts—Touch  **Apps** >  **Email** > Menu  > **Add contact**.

Touch any entry area to open the touchscreen keyboard. When you're finished adding the contact, touch **Save**.

Search for contact—Touch and hold Menu  to open a touchscreen keyboard, then type a name. To scroll quickly through the list that appears, flick or drag the scroll bar.

Google Maps™

where you are, where you're going

Quick start: Google Maps

Where am I? What's around here? Don't worry—let Google Maps help you explore your surroundings and find what you're looking for.

Find it:  **Maps**



Note: The map image you see may be a little different.

Set your location sources

Set your tablet to determine your location using GPS satellite signals (highly accurate, but uses battery

power) or using the mobile network (less accurate, but conserves battery power).

To set your location, open the Quick Settings Menu and touch **Settings > Location & security > Use GPS satellites** and/or **Use wireless networks**.

Find your location

Note: Don't forget to set your location sources.

From the main Google Maps screen, touch Menu  > **My Location**. Your location is shown on the map as . The bigger the circle, the less accurate the location.

Find any location

- 1 Touch Menu  > **Search**.
- 2 Enter text in the search box, like an address, business, or city, then touch .

Tip: If it's an address you have visited before, select from the list shown.

- 3 Touch the search box to view all the results, then touch the one you want.

Get directions

Find your way with turn-by-turn directions. You can even have them spoken so you can keep your eye on the road.

- 1 Touch Menu  > **Directions**.
- 2 Enter a starting point address or touch  and select **My current location**, **Contacts**, or **Points on map**.
- 3 Enter an end point address or touch  and select **Contacts** or **Points on map**.
- 4 Select your mode of transport (car, public transport or walk), then touch **Go**. Your directions are shown as a list. To view your directions on a map, touch **Show on map**.
- 5 When you have finished, touch Menu  > **More** > **Clear map**.

Select map mode

Touch Menu  > **Layers** to select from **Traffic**, **Satellite**, **Latitude** or recent searches, viewed positions or directions.

Touch Menu  > **Layers** > **More layers** to select from **My Maps**, **Wikipedia**, or **Transit Lines**.

Touch **Clear Map** to clear your selections.

Map view

Shows a map, complete with names of streets, rivers, lakes, mountains, and borders. This is the default view.

Satellite view

Shows map on top of aerial photo.

Traffic view

If available in your area, real-time traffic conditions are shown on the roads as color-coded lines.



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Google Latitude™

where are your friends & family?

Join Google Latitude

Keep track of where your friends and family are on Maps. Plan to meet up, check that your parents got home safely, or just stay in touch.

Don't worry, your location is not shared unless you agree to it. You need to join Google Latitude, and then invite your friends to view your location or accept their invitations. When using Maps (in any mode except in Street View), touch Menu  > **Join Latitude**. Read the privacy policy and if you agree with it, touch **Agree & Share**.

Add & remove friends

Find it: Launcher icon  Apps >  Maps > Menu  > **Latitude**

To add friends:

- 1 Touch Menu  > **Add friends**.
- 2 Touch **Select from Contacts**, then touch a contact. Or, touch **Add via email address**, then enter an email address.
- 3 Touch **Add friends**.

If your friends already use Google Latitude, they'll receive an email request and a notification. If they have

not yet joined Google Latitude, they'll receive an email request that invites them to sign in to Google Latitude with their Google account.

To remove friends:

- 1 Touch Menu  > **Latitude** to show your friend's list, then touch a friend in your list.
- 2 Touch **Remove this friend**.

Share location

When you receive a request to share location details you can choose to:

- **Accept and share back**—See your friend's location, and your friend can see yours.
- **Accept, but hide my location**—See your friend's location, but they can't see yours.
- **Don't accept**—Location information is not shared between you and your friend.

Hide your location

To hide your location from a friend, touch Menu  > **Latitude** to show your friend's list. Touch your contact name, then touch Menu  > **Edit privacy settings** > **Hide your location**.

Turn off Google Latitude

Touch Menu  > **Latitude** to show your friend's list.

Touch Menu  > **Edit privacy settings** > **Turn off Latitude.**



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Tips & tricks

a few handy hints

General tips

- If you can't see the screen while wearing sunglasses, take them off. Screen brightness changes as your tablet senses the current lighting conditions.
- To return to home screen, touch Home .
- To sleep/wake your tablet, press Power/Lock .
- To set screen timeout, open the Quick Settings menu and touch **Settings** > **Display** > **Screen timeout**.
- To search, touch Search .
- To show the last few apps—as many as eight—touch and hold Home .
- To turn sound on/off, open the Quick Settings menu and touch **Settings** > **Sound** > **Silent mode**.
- To turn airplane mode on/off, press and hold Power/Lock  > **Airplane mode**.

Battery tips

Want to extend your battery life? Try these:

- To turn off Bluetooth power, open the Quick Settings menu and touch **Settings > Wireless & networks > Bluetooth**.
- To turn off Wi-Fi™, open the Quick Settings menu and touch **Settings > Wireless & networks > Wi-Fi**.

e-books

(content not available)



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

 
DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Bluetooth® wireless

lose the wires and go wireless

Quick start: Bluetooth wireless

Find it: Quick Settings Menu > **Settings** > **Wireless & networks** > **Bluetooth settings**

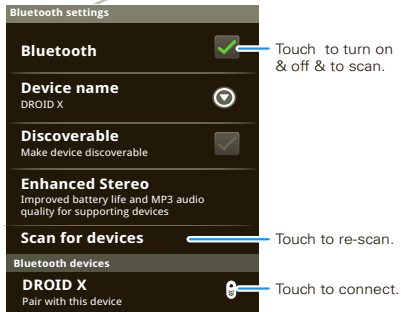

Turn Bluetooth power on or off

Find it: Quick Settings Menu > **Settings** > **Wireless & networks** > **Bluetooth**

Note: To extend battery life, turn Bluetooth power off when not in use.

Connect new devices

Note: This feature requires an optional accessory.

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, just turn on the device.

- 1 Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

- 2 Open the Quick Settings Menu and touch **Settings** > **Wireless & networks** > **Bluetooth settings**.
- 3 Touch **Bluetooth** to turn on and scan. If Bluetooth power is already on, touch **Scan for devices**.
- 4 Touch a device to connect.
- 5 If necessary, touch **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth indicator  appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Note: The Bluetooth Enhanced Audio setting is not recommended for older Bluetooth headsets as it may not deliver acceptable sound quality.

Reconnect devices

To automatically reconnect your tablet with a paired device, simply turn on the device.

To manually reconnect your tablet with a paired device, touch the device name in the **Bluetooth devices** list.

Disconnect devices

To automatically disconnect your tablet from a paired device, simply turn off the device.

To manually disconnect your tablet from a paired device, touch the device name in the devices list, then touch Menu  > **Disconnect**.

Edit properties

Open the Quick Settings Menu and touch **Settings** > **Wireless & networks** > **Bluetooth settings** > **Device name**. Enter a name and touch **OK**.

Wi-Fi™

 
home, office, or hotspot

Quick start: Wi-Fi

Find it: Quick Settings Menu > **Settings** > **Wireless & networks** > **Wi-Fi settings**

Note: Your tablet's Wi-Fi features and power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.

Use a wireless network for fast Internet access and to download data.

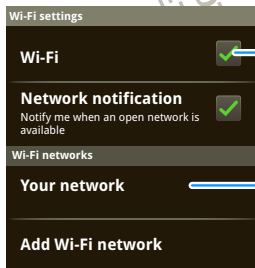

Touch to turn on & scan.

Touch to connect.

Turn Wi-Fi on or off

Find it: Quick Settings Menu > **Settings** > **Wireless & networks** > **Wi-Fi**

Note: To extend battery life, turn off Wi-Fi power when not in use.

Wi-Fi search & connect

To find networks in your range:

1 Open the Quick Settings Menu and touch **Settings** > **Wireless & networks** > **Wi-Fi settings**.

2 Touch **Wi-Fi** to turn on and scan. If Wi-Fi is already on, touch Menu  > **Scan**. Your tablet lists the networks it finds within range.

Tip: To see your tablet's MAC address or other Wi-Fi details, touch Menu  > **Advanced**.

3 Touch a network to connect.

4 If necessary, enter **Network SSID**, **Security**, and **Wireless password**, and touch **Connect**. When your tablet is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.

Wi-Fi hotspot

Note: You need to subscribe to Wi-Fi hotspot service to use this feature. Contact your service provider.

You can set up your tablet as a Wi-Fi hotspot to provide portable, convenient internet access to other Wi-Fi enabled devices.

Setup

Note: Risks can be associated with connecting to the public internet. It is highly recommended that you take steps to protect your computer from unauthorized access. To add encryption to your Wi-Fi hotspot:

Find it: **Launcher icon**  **Apps**

>  **3G Mobile Hotspot** >  > **Advanced** > **WiFi AP mode Settings**

Touch a setting to modify it:

- **SSID**—Enter a unique name for your hotspot and touch **Next**.
- **Security**—Select the type of security you want, and touch **Save**: **WEP**, **WPA**, or **WPA2**. Enter a unique password. Other users can access your Wi-Fi hotspot only if they enter the correct password.

Note: **WEP** is the weakest option because it is highly vulnerable to hacking. **WPA2** is recommended by IEEE.

- **Channel**—Select a channel that minimizes potential interference. You may need to try different channels after your hotspot is active for a time.

Touch **Save** when the settings are complete.

Activate hotspot

Find it: Launcher icon  Apps

>  **3G Mobile Hotspot** > **Tap to start Mobile Hotspot service**

When your Wi-Fi hotspot is active, other Wi-Fi enabled devices can connect by entering your hotspot's **SSID**, selecting a **Security** type, and entering the correct **Wireless password**.

Memory card & file management

copy photos, music, and more to your tablet

USB connection

You can connect your tablet to a computer with a USB cable.

Note: The first time you use a USB connection, your computer may indicate that drivers are being installed. Follow any prompts you see to complete the installation. This may take a few minutes.

- 1 With a memory card inserted, and your tablet showing the home screen, connect a Motorola micro USB data cable from your tablet's micro USB port to a USB port on your computer. Your tablet should show  in the status bar.

Note: Make sure to connect the tablet to a high power USB port. Typically, these are located directly on your computer.

- 2 On your tablet, flick down the status bar to see the USB connection options.
- 3 Touch an option:
 - **PC Mode**
 - **Windows Media Sync**—Use Windows Media Player on your PC to sync media content to and from your tablet.

- **Charge Only**—Use the connection only to charge a device.



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Tools

stay on top of things

Alarm clock

 
Find it: Launcher icon  Apps >  **Alarm& Timer**

To turn on an alarm, touch the check box.

When an alarm sounds, slide to **Dismiss** to turn it off or **Snooze** to delay for five minutes.

To add an alarm, touch Menu  > **Add alarm**, then enter alarm details.

To enable or disable an alarm, touch the check box.

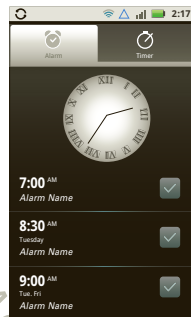

Calendar

Find it: Launcher icon  Apps >  **Calendar**

Your calendar events can be viewed in different ways: Touch Menu  > **Agenda**, **Day**, or **Week**. When you highlight an event, more details appear.



Add calendar events

From any view, touch Menu  **More** > **New event**. Enter the event start time and other details. You can even set a reminder so you don't forget about the event.

When you finish entering event details, touch **Save**.

Manage calendar events

To edit an event, touch and hold it, then touch **Edit event**. When you're done, touch **Save**.

To delete an event, touch and hold it, then touch **Delete event**.

To go to today, touch Menu  > **Today**.

Calculator

Find it: Launcher icon  Apps >  **Calculator**

Your calculator has basic and advanced views. To change views, touch Menu  > **Advanced panel/Basic panel**. To clear history, touch Menu  > **Clear history**.

Management

stay in control

Wireless manager

Find it: Quick Settings Menu > **Settings** > **Wireless & networks**

Manage all your wireless connections: Wi-Fi™, Bluetooth®, airplane mode, & mobile networks ("Network" on page 37).

Network

You should not need to change any network settings. Contact your service provider for help.

 
Open the Quick Settings Menu and touch **Settings** > **Wireless & networks** > **Mobile networks** to show options for roaming networks, network selection, operator selection, and access point names.

Security

help keep your tablet safe

Quick start: Security

Find it: Quick Settings Menu > **Settings** > **Location & security**

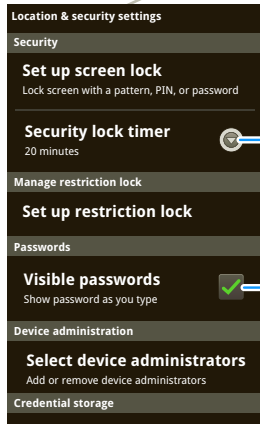

Set lock timer.

Turn on.

Screen lock

To prevent accidental touches, you can make the screen lock when it goes to sleep. Open the Quick Settings Menu and touch **Settings** > **Location & security** > **Change screen lock**, then select the lock type:

 
- **Pattern lock**—Draw a pattern to unlock.
- **PIN**—Enter a numeric PIN to unlock.
- **Password lock**—Enter a password to unlock.

Lock pattern

To set the lock pattern, open the Quick Settings Menu and touch **Settings** > **Location & security** > **Change screen lock** > **Pattern lock**.

Follow the instructions to draw your lock pattern.

When prompted, draw the pattern to unlock the tablet.

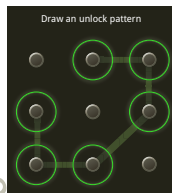

PIN lock

To set a PIN, open the Quick Settings Menu and touch **Settings** > **Location & security** > **Change screen lock** > **PIN**.

Enter a numeric PIN, then confirm it.

When prompted, enter the PIN to unlock the tablet.

Password lock

To set the password, open the Quick Settings Menu and touch **Settings > Location & security > Change screen lock > Set password**.

Enter a password (up to eight characters), then confirm it.

When prompted, enter the password to unlock the tablet.

Personalize your lock screen

To change your timeout, open the Quick Settings Menu and touch **Settings > Location & security > Security lock timer**. If you don't touch the screen or touch any keys for the amount of time you select, the screen locks automatically.

Lock & unlock

To lock the screen/tablet:

- Press Power/Lock .
- Let the screen time out (don't press anything).
- Switch off the power.

To unlock the screen/tablet, press Power/Lock , or switch on the tablet to display the lock screen.

Forgot your pattern or passcode?

If you forget your pattern or passcode, see your service provider.



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Troubleshooting

we're here to help

Crash recovery

In the unlikely event that your tablet stops responding to touches and key presses, try a quick reset. Remove the back cover and battery ("Charge your tablet" on page 3), then replace and switch your tablet on as usual.

Reset

To reset your tablet to factory settings and erase all the data on your tablet, open the Quick Settings Menu and touch **Settings > Privacy > Factory data reset > Reset tablet**.

Warning: All data on your tablet will be deleted. (Nothing on your memory card is deleted.)

Service & repairs

If you have questions or need assistance, go to <http://www.motorola.com/support>, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-734-5870 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Safety, Regulatory & Legal

Battery Use & Safety

Important: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the mobile device or battery come in contact with water.*** Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, have them checked by your service provider or contact Motorola, even if they appear to be working properly.*
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your mobile device or battery near a heat source.*** Excessive heat can damage the mobile device or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- **Don't dry a wet or damp battery with an appliance or heat source**, such as a hair dryer or microwave oven.

DOs

- **Do avoid leaving your mobile device in your car in high temperatures.***
- **Do avoid dropping the battery or mobile device.*** Dropping these items, especially on a hard surface, can potentially cause damage.*
- **Do contact your service provider or Motorola if your mobile device or battery has been damaged from dropping or high temperatures.**

* **Note:** Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions.

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection),

Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your product's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.

- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving Precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a handsfree device if available or required by law in your area.
- Enter destination information into a navigation device **before** driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
- End your call or other task if you cannot concentrate on driving.

Remember to follow the "Smart Practices While Driving" in this guide and at www.motorola.com/callsmart (in English only).

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected.



To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

Small Children

Keep your mobile device and its accessories away from small children.

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.

Symbol	Definition
	Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information.
	For indoor use only.
	Listening at full volume to music or voice through a headset may damage your hearing.

Radio Frequency (RF) Energy

Exposure to RF Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF Energy Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

- Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Specific Absorption Rate (IEEE)

Your model wireless phone meets the governmental requirements for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured to not exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed for the safety of all persons, regardless of age or health, and to account for any variations in measurements. The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The IEEE SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 watts per kilogram (W/kg), averaged over one gram of tissue. Tests for SAR are conducted using procedures accepted by the FCC and by Industry Canada with the mobile device transmitting at its highest certified power level in all tested frequencies. Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile device while operating can be below the maximum value. This is because the mobile device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a mobile device is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) submitted to the FCC and available for review by Industry Canada. The highest SAR value for this mobile device when tested for use at the ear is NA, and when worn on the body, as described in this guide, is 1.51 W/kg. Body-worn measurements can differ, depending upon available accessories and regulatory requirements. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

Information from the World Health Organization

"Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body."

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5. This Class B digital apparatus complies with Canadian ICES-003.

GPS & AGPS

Your mobile device can use *Global Positioning System* (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device.

Your mobile device can also use *Assisted Global Positioning System* (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.

Emergency Calls

When you make an emergency call, the cellular network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the phone for as long as the emergency responder instructs you.

Performance Tips

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices.

Navigation

When using navigation features, note that mapping information, directions and other navigational data may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic, and all other factors that may impact driving. Always obey posted road signs.

Smart Practices While Driving

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, handsfree use only may be required. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Secure Personal Information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.
Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support
- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the

account, and how to use security features such as remote wipe and device location (where available).

- **Applications**—Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.
 - **Location-based information**—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.
 - **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.
- If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & Care

To care for your Motorola mobile device, please observe the following:



liquids

Don't expose your mobile device to water, rain, extreme humidity, sweat, or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the mobile device.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.

**microwaves**

Don't try to dry your mobile device in a microwave oven.

**dust and dirt**

Don't expose your mobile device to dust, dirt, sand, food, or other inappropriate materials.

**cleaning solutions**

To clean your mobile device, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.

**shock and vibration**

Don't drop your mobile device.

**protection**

To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

Recycling

Mobile Devices & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste, or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at:

www.motorola.com/recycling

Packaging & Product Guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

Perchlorate Material – special handling may apply when the battery is recycled or disposed of. See www.dtsc.ca.gov/hazardouswaste/perchlorate
There is no special handling required by consumers.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. To maintain the published Hearing Aid Compatibility (HAC) rating for this mobile phone, use only the original equipment battery model.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open Source Software Information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA MOBILITY, INC.

OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com website to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please press Menu Key > **Settings** > **About Phone** > **Legal & Safety** > **Open source licenses**.

In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and

allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage. Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status. Thank you for choosing a Motorola product.

Service & Repairs

If you have questions or need assistance, we're here to help. Go to www.motorola.com/repair (United States) or www.motorola.com/support (Canada), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-734-5870 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola Mobility, Inc. warrants its mobile telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions (Products and Accessories)

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions (Software)

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the Internet), is provided "as is" and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software, and applications, please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	1-800-734-5870
Canada	1-800-461-4575
TTY	1-888-390-6456

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO

EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

NOTICE

Your mobile device now contains an LTE module that will provide you with 4G capabilities. It was professionally installed, and is not intended to be accessible or serviceable by the end user. The module's FCC ID is IHDP56LU2. It is intended for use solely in this mobile device and can not be removed and installed into another device.



DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Copyright & Trademarks

Motorola Mobility, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048
www.hellomoto.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-734-5870 (United States - Android products)

1-800-331-6456 (United States - all other products)

1-888-390-6456 (TTY/TDD United States for hearing impaired - all products)

1-800-461-4575 (Canada - all products)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply.

Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA, the Stylized M Logo, MOTOBUR and the MOTOBUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Google, the Google logo, Google Maps, Gmail, Google Latitude, YouTube, Picasa, Android and Android Market are trademarks of Google, Inc. Facebook is a registered trademark of Facebook, Inc. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. Apple, Macintosh, Quicktime and Quicktime logo are registered trademarks of Apple Computer, Inc. iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. All rights reserved. America Online, AOL, the America Online &

Design logo, the AOL & Design logo, and the Triangle Logo, are registered trademarks of America Online, Inc. in the United States and/or other countries. Instant Messenger and Buddy List are trademarks of America Online, Inc. All other product or service names are the property of their respective owners.

© 2010 Motorola Mobility, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 68014293001-A

DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION



| DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION



| DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION