

INSTRUCTION MANUAL

A representative version of the user's manual follows:



FCC SUBMISSION

2011.10.20

CONTROLLED COPY

# CONGRATULATIONS

## MOTOROLA XOOM™ 2 Media Edition with 4G

The MOTOROLA XOOM 2 Media Edition is an ultra-portable 8.2" tablet with the power to control your connected devices and extract their precious content, remotely, at ferocious Verizon 4G LTE speed. It's packed with power to help you devour cinema-style videos, concert-like music, and serious gaming. Virtual surround sound and booming bass are just part of the amazement.

Whenever you see the see the **4G** 4G LTE indicator, you know you're connected to the most advanced and reliable 4G mobile network in America. Download speeds up to ten times faster than 3G networks. Movies in minutes, photos in seconds. Stream your favorite video without annoying buffering. Download and view full-length HD quality movies.

- Entertainment: Pull files from your computer like a digital telepath at ferocious Verizon 4G LTE speed.
- Performance: Ferocious 4G LTE speed and a blazing-fast dual-core 1.2 GHz processor, mixed with outstanding battery life, let you conquer movies, games, and music. Amped-up processing speed also means serious graphics rendering and richer gaming, not to mention swift switching between it all.
- Endurance: Your tablet weighs less than a pound, with a magnesium-reinforced body, aluminum housing, splash-guard coating, and Corning® Gorilla® glass display that take resilience to the next level.

Not all features, applications, or services may be available with your plan.  
Please contact your wireless service provider for more information.

|                                          |    |
|------------------------------------------|----|
| MY VERIZON .....                         | 3  |
| YOUR MOTOROLA XOOM 2 MEDIA EDITION ..... | 5  |
| FIRST STEPS.....                         | 6  |
| BASICS .....                             | 9  |
| MANAGE CONTENT.....                      | 15 |
| APPS & FEATURES .....                    | 18 |
| TROUBLESHOOTING.....                     | 20 |

2011.10.20

# MY VERIZON

## THANK YOU FOR CHOOSING VERIZON WIRELESS

You're now connected to the power of America's largest and most reliable wireless network. This guide will introduce you to the features of your new tablet.

For assistance, please go to [verizonwireless.com](http://verizonwireless.com). You can also contact Customer Service at 1-800-922-0204 or speak with a Customer Service Representative at your local Verizon Wireless Store.

**Note:** Screen images and icons are simulated. Actual display may vary. Instructions in this guide may change depending on the software version on your device.

## IMPORTANT CUSTOMER INFORMATION

Please be advised that many services and applications offered through this unique device are provided by various device, operating system, software and application developers (e.g., Google™, Motorola, Microsoft®, Palm®, Research In Motion® Limited). If you use, link to or download such a service, or an application such as a non-Verizon Wireless location-based GPS type service, chat room, marketplace or social network from this device, you should carefully review the terms of such service or application. If you use any of these non-Verizon Wireless services or applications, personal information you submit may be read, collected, or used by the service or application provider and/or other users of those forums.

Verizon Wireless is not responsible for your use of those applications or information you choose to submit or share with others. Specific terms and conditions, terms of use, and privacy policies apply to those applications and services. Please review carefully any and all terms and conditions applicable to those applications and services including those related to any location-based services for any particular privacy policies, risks or waivers. Your Verizon Wireless customer agreement terms and conditions and certain other specially identified terms govern your use of any Verizon Wireless products and services.

 
## REGISTER NOW

Save time. Save money. Register now at [verizonwireless.com/myverizon](http://verizonwireless.com/myverizon).

- Manage your account. Quickly check your voice, text and data usage or make adjustments to your plan at any time.
- Get personalized support. My Support answers your questions quickly.
- Pay bills your way. Go green and set up paperless billing, make a one-time payment, or use auto pay and never worry about missing a payment.

2011.10.20

# YOUR MOTOROLA XOOM 2 MEDIA EDITION

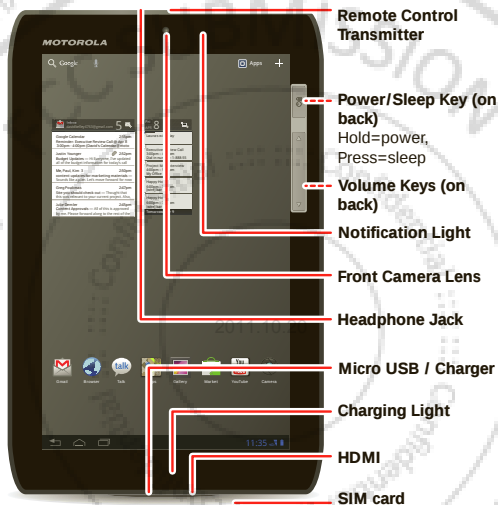

**Note:** All screen shots in this guide are simulated. Actual displays and instructions may vary depending on the software version in your MOTOROLA XOOM 2 Media Edition.


**Note:** Certain apps and features may not be available in all countries.

# FIRST STEPS
 
## GETTING STARTED

### ASSEMBLE & CHARGE

**Caution:** Before assembling, charging, or using your device for the first time, please read the important legal and safety information packaged with your product.

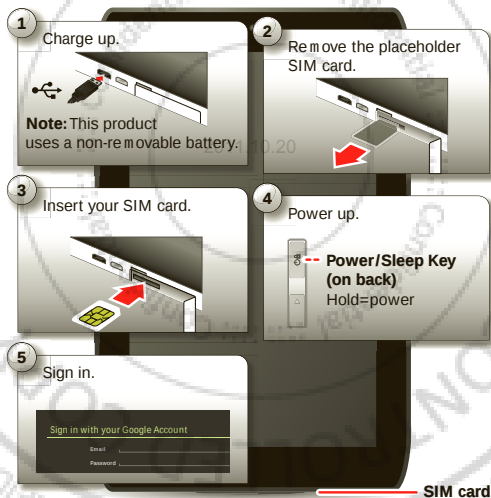

**Caution:** Power off the tablet before removing the SIM card. If you remove a card while the tablet is powered on, you may lose data.

The charging light turns white during charging, then turns off when fully charged.

**Note:** The battery should only be replaced by a Motorola-approved service facility. Any attempt to remove or replace your battery may damage the product.

## STARTUP

- 1 Press and hold Power/Lock  on the back of your tablet to turn it on.
- 2 If desired, change the language setting, then touch **Start**.

When you touch **Start**, your tablet attempts to activate your mobile service (if not already activated).

- 3 If you go on to Wi-Fi setup, you see a **Wi-Fi setup** screen. Connect to an existing network, add a new network, or skip Wi-Fi setup for now and set up later (see "Wi-Fi" on page 15).
- 4 Choose location settings and touch **Next** (for the most accurate location features, check both services).
- 5 Follow the setup wizard to create or log into your Google™ Account and go to the home screen.

Record your Google Account information for future reference.

 
Username: \_\_\_\_\_

Password Hint: \_\_\_\_\_

**Note:** If you have an existing Gmail account, your contacts from that account are synced to your device. Whenever you select a contact from one group, the tablet shows contacts from every group.

## SAVE THE DEVICE LABEL

Remove the device label from the back of your MOTOROLA XOOM 2 Media Edition and affix it below for safekeeping.

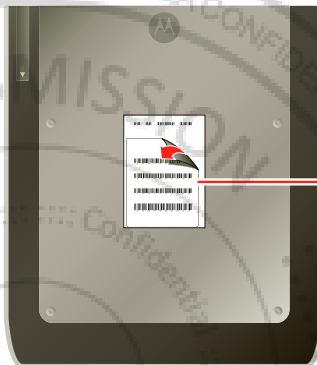Device  
Label

ATTACH LABEL ATTACH LABEL  
 LABEL ATTACH LABEL ATTACH  
 ACH LABEL ATTACH LABEL AT  
 L ATTACH LABEL ATTACH LAB  
 H LABEL ATTACH LABEL ATTAC  
 TTACH LABEL ATTACH LABEL  
 BEL ATTACH LABEL ATTACH L  
 CH LABEL ATTACH LABEL ATT  
 L ATTACH LABEL ATTACH LAB  
 LABEL ATTACH LABEL ATTACH  
 TACH LABEL ATTACH LABEL A  
 EL ATTACH LABEL ATTACH LA

# BASICS

## TOUCH

It's all in the touch:

- Touch: Choose an icon or option.
- Touch & Hold: Open options.
- Drag: Scroll or move slowly.
- Flick: Scroll or move quickly.
- Pinch-to-zoom: Get a closer look at Google Maps™, web pages, or photos.

**Tip:** When using a mouse with the device, you can also double-click to zoom.



# HOME SCREEN

Your home screen is your personally designed launch pad. You'll see the home screen when you turn on the tablet or touch Home  from a menu.

**Note:** This home screen display is simulated. Actual displays may vary.

- **Search:**  Search with text or voice.
- **App menu:**  See all your apps (if you have a lot, flick left and right to see them all).
- **Back:**  Go back one screen.
- **Home:**  Return to the home screen at any point.
- **Recent apps:**  Show thumbnails of your recent apps (touch a thumbnail to open the app).
- **Panels:** Flick left or right to show the five home screen panels. Use panels to organize your widgets and shortcuts. To return to the center panel, touch Home .
- **Notifications:** Touch the clock in the bottom right to show your tablet's status and details about any new messages or other notifications.
- **Menu:** When you see  in the top right, or  in the bottom left, you can touch them to open a menu for the screen you're on.

