

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT6BD1

INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:

Motorola V. Series Model 60g Tri-Band Mobile Phone User's Guide


Formal Review

May 24, 2001

Please focus this Phoenix formal review on reviewing the green color-coded text, which describes new Phoenix GSM information and generic GSM software text that still needs to be reviewed and approved for all GSM products: Phoenix, Sapphire, and Panther 2. To provide feedback, contact Dayna Schocke.

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola ™ Series 60g wireless phone.

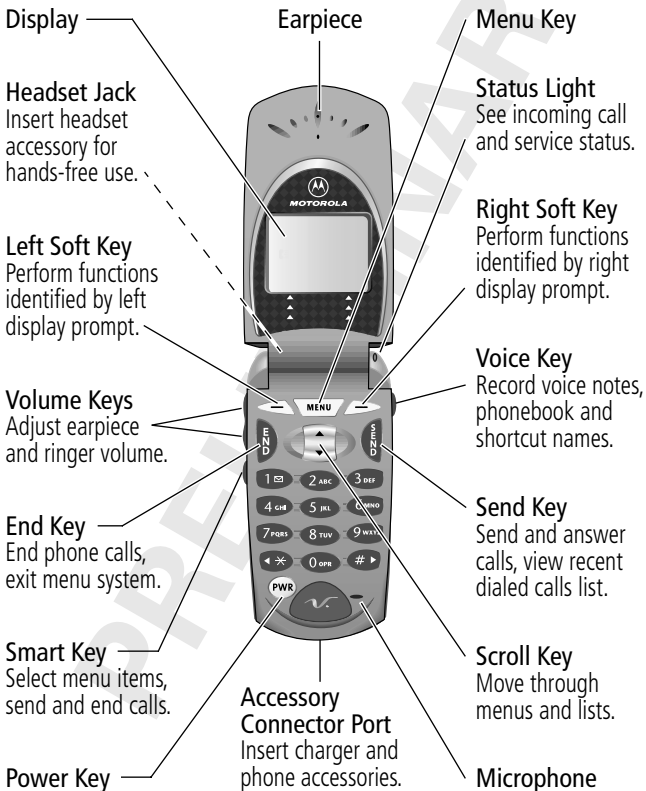

Personal Communications Sector
600 North U.S. Highway 45
Libertyville, Illinois 60048

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)

www.motorola.com

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish and the Stylized Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2001 Motorola, Inc. All rights reserved. Printed in the U.S.A.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number: 6809435A87-O
Cover number: 8988485L07-O



Menu Map

Main Menu

- **Recent Calls**
 - Received Calls
 - Dialed Calls
 - Notepad
 - Call Times
 - Call Cost
- **Service Dial**
- **Fixed Dial**
- **Phonebook**
- **Datebook**
- **Quick Dial**
- **Radio**
- **Messages**
 - Voicemail
 - Text Msgs
 - Browser Alerts
 - Info Services
 - Quick Notes
 - Outbox
 - Drafts
- **Shortcuts**
- **Voice Notes**
- **SIM Applications**
- **Browser**
- **Calculator**
- **Games**
- **Settings**
(see next page)

Note: This is the standard phone menu layout. You or your service provider may have changed the menu layout or changed some feature names. Not all features may be available for all users.

For example, the **Radio** feature on the main menu (left) is displayed only when the optional FM Stereo Radio Headset accessory is plugged into the accessory connector port on your phone (see phone illustration, page 1).

Shortcuts
Change display zoom: Press  , then press and hold 
Lock/unlock keypad: Press  
Display my phone number: Press  
Go to dialed calls list: Press 



Settings Menu

- **Ring/Vibrate**
 - Alert
 - *Alert* Detail
 - My Tones
- **Call Forward**
 - Voice Calls
 - Fax Calls
 - Data Calls
 - Cancel All
 - Forward Status
- **Phone Status**
 - My Tel. Number
 - Credit Info/Available
 - Phone: Line 1/2
 - Battery Meter
 - Other Information
- **In-Call Setup**
 - In-Call Timer
 - Call Cost Setup
 - My Caller ID
 - Talk and Fax
 - Answer Options
 - Call Waiting
- **Security**
 - Phone Lock
 - Lock Application
 - Fixed Dial
 - Call Barring
 - SIM Pin
 - New Passwords
- **Other Settings**
 - Personalize
 - Main Menu
 - Keys
 - Greeting
 - Quick Dial
 - Initial Setup
 - Time and Date
 - 1-Touch Dial
 - Auto Redial
 - Backlight
 - Status Light
 - Zoom
 - Scroll
 - Animation
 - Language
 - Battery Save
 - Contrast Setting
 - DTMF
 - Master Reset
 - Master Clear
 - Network
 - Car Settings
 - Headset

Contents

Menu Map	3
About This Guide	10
Safety and General Information	12
Getting Started	19
What's in the Box?	19
Installing the SIM Card	19
Installing the Battery	21
Charging the Battery	22
Turning Your Phone On	22
Sending a Call	23
Ending a Call	24
Receiving a Call	24
Displaying Your Phone Number	25
About Your Phone	26
Display	26
Changing the Zoom Setting	29
Status Light	29
Volume Keys	30
Smart Key	31
External Display	31
Battery Use	33
Sending and Receiving Calls	35
Redialing a Number	35
Using Automatic Redial	35
Caller ID	36
Line Security	36
Returning an Unanswered Call	37
Dialing an Emergency Number	37

Entering Numbers in the Notepad	38
Terminating an Incoming Call	38
Dialing With Speed Dial	39
Dialing With 1-Touch Dial	39
Dialing a Number In a Text Message	40
Additional Dialing Features	41
Using Features While On a Call	44
Using Call Waiting	44
Making a Conference Call	45
Transferring a Call	46
Additional On-Call Features	48
Using the Menu	49
Navigating to a Feature	49
Selecting a Feature Option	50
Entering Feature Information	51
Entering Text	53
Choosing a Text Mode	53
Tap Method	54
Symbol Mode	57
Predictive Text Entry with iTAP™ Software	58
Menu Feature Descriptions	63
Recent Calls	78
Viewing the Received Calls or Dialed Calls List	78
Using the Notepad	81
Viewing and Resetting Call Timers	82
Viewing and Resetting Call Costs	84
Phonebook	86
Fields in a Phonebook Entry Form	86
Storing a Phonebook Entry	87

Recording a Voice Name For a Phonebook Entry	89
Dialing a Phonebook Entry	90
Editing a Phonebook Entry	91
Deleting a Phonebook Entry	91
Copying Phonebook Entries to the SIM Card	92
Checking Phonebook Capacity	95
Setting Up the Phonebook	96
Datebook	98
Week View	98
Day View	99
Event View	99
Storing a New Event	100
Changing Event Information	101
Copying an Event	102
Deleting an Event	103
Radio	104
Turning the Radio On and Off	104
Tuning a Station	104
Storing a Preset	105
Selecting a Preset	105
Sending and Receiving Calls With the Radio On	105
Messages—Voicemail	107
Storing Your Voicemail Number	107
Receiving a New Voicemail Message	107
Listening to a Voicemail Message	108
Messages—Text	109
Setting Up the Text Message Inbox	109
Receiving a Text Message	111
Reading, Locking, or Deleting a Text Message	111
Sending a Text Message	113

Sending a Text Message to More Than One Person	115
Sending a Quick Note Text Message	116
Sending a Quick Note to More than One Person	118
Viewing the Status of Sent Text Messages	119
Shortcuts	120
Standard Shortcuts	120
User-Settable Shortcuts	120
Creating a Shortcut	121
Using Shortcuts	123
Voice Notes	124
Recording a Voice Note	124
Viewing the Voice Notes List	125
Playing a Voice Note	126
Locking and Unlocking a Voice Note	128
Deleting a Voice Note	129
Micro-Browser	130
Starting a Micro-Browser Session	130
Interacting With Web Pages	131
Calculator	132
Calculating Numbers	132
Converting Currency	134
Games	135
Selecting and Starting a New Game	135
Ending a Game	136
Playing a Game	136
Adjusting Your Settings	140
Ring/Vibrate	140
Reminders	147
Call Forwarding	148

Contents

Reordering Menu Items	150
Customizing a Soft Key Function	151
Hands-Free Use	151
Data and Fax Calls	155
Connecting Your Phone to an External Device	155
Sending a Data or Fax Call	157
Receiving a Data or Fax Call	158
Sending a Talk then Fax Call	159
Security	160
Assigning a New Code or Password	160
If You Forget a Code or Password	161
Locking and Unlocking Your Phone	162
Barring Calls	163
Protecting the SIM Card	164
Troubleshooting	166
Specific Absorption Rate Data	174
FDA Update	176
Warranty	185
Export Law Assurances	193
Index	194
Wireless Phone Safety Tips	207

About This Guide

Using Your Phone's Features

This user guide introduces you to the many features in your Motorola  phone. A reference guide for your phone is also available that explains the phone's features in more detail. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals>

or contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

Navigating To a Menu Feature

You can access many of your phone's features through the menu system. This guide shows you how to navigate to a specific menu feature as follows:

Find the Feature

 > Recent Calls
> Dialed Calls

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to view the dialed calls list.

Optional Features



Features marked with this label are optional network, SIM card, and/or subscription-dependent features. These features may not be offered by all service providers in all geographical areas. Contact your service provider for information about availability.

Optional Accessories



Features marked with this label require the use of an optional Motorola Original™ accessory.

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

RF Operational Characteristics

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of _____ MHz to _____ MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a range from _____ watts to _____ watts in digital mode.

Exposure To Radio Frequency Energy

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition



- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

Portable Phone Operation and EME Exposure

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Do NOT hold the antenna when the phone is in use. Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a **Motorola-supplied or approved clip, holder, holster, case, or body harness for this product.** Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a body-worn accessory, and are not holding the phone in the normal use position at the ear, ensure the phone and its antenna are at least one inch (2.5 centimeters) from your body when transmitting.**

Data Operation

When using any data feature of the phone, with or without an accessory cable, **position the phone and its antenna at least one inch (2.5 centimeters) from your body.**

Approved Accessories

For a list of approved Motorola accessories, visit our website at www.motorola.com.



Electromagnetic Interference/ Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety and General

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- give full attention to driving and to the road.



- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Operational Cautions

Antennas

Do not use any portable phone that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

Batteries

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

ITC01-045

Getting Started



What's in the Box?

Your digital wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, please contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.


Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory. It is stored in a recess in the battery compartment.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Do This


- 1 If the phone's battery door is already in place, push down the battery door release latch, then slide the door down and lift off.

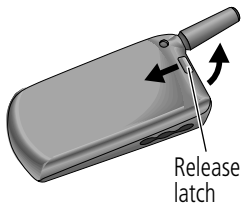


Getting Started

Do This


- 2 Slide the SIM card door down (toward the base of the phone) and lift open.

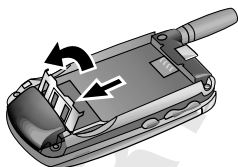

- 3 Insert the SIM card into the SIM card tray with the notch in the lower left corner and the gold plate facing down.

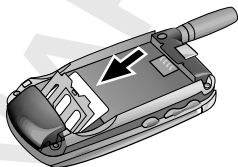

- 4 Close the SIM card door and slide up (toward the antenna) to lock the SIM card in place.

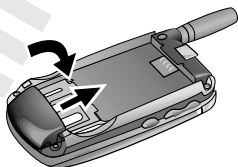

- 5 Install the battery as described in the following section.



Installing the Battery

Before you can use your phone, you need to install and charge the battery.




Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.


Do This

1 Remove the battery from its protective clear plastic case.


2 If the phone's battery door is already in place, push down the battery door release latch and lift the battery door off of the phone.

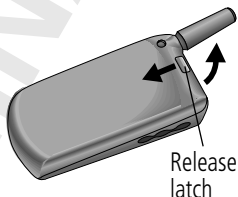

3 Insert the battery, printed arrow first, into the battery compartment and push down.

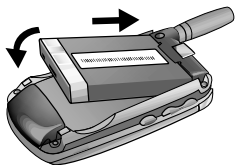

4 Insert the ridge at the bottom of the battery door into the base of the phone, then push the door down and snap it into place.

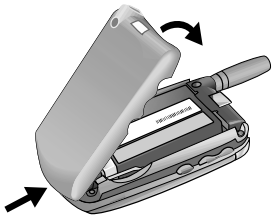

Charging the Battery

Before you can use your phone, you need to install and charge the battery.

Do This

- 1 Plug the travel charger into your phone with the release tab facing up.



- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.

Turning Your Phone On

Do This

To

- | | |
|---|--------------------|
| 1 Open your phone | expose the keypad |
| 2 Press and hold PWR (the power key) | turn on your phone |





Do This	To
3 If necessary, enter your SIM card PIN code and press OK ()	unlock your SIM card Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays the message SIM Blocked . (For more information, see “Protecting the SIM Card” on page 164.)
4 If necessary, enter your four-digit unlock code and press OK ()	unlock your phone The unlock code is originally set to 1234. (For more information, see “Locking and Unlocking Your Phone” on page 162.)

Sending a Call

To call a number, your phone must be turned on, have a SIM card inserted, be unlocked, and have a network connection with adequate signal strength.

Do This	To
1 Extend the antenna	optimize signal reception Tip: Your phone uses a two-stage antenna that must be fully extended for proper operation. You may have to pull on the antenna a second time to extend the antenna to its maximum length.

Getting Started

Do This	To
2 Press the keypad keys	dial the phone number (up to 32 digits) Tip: If you make a mistake, press DELETE () to delete the last digit, or press and hold DELETE () to clear all digits.
3 Press  (send key)	send the call

Note: You can make an emergency call even when the phone is locked, or when a SIM card is not inserted. See “Dialing an Emergency Number” on page 37.

Ending a Call

Press	To
 (end key)	end the call

Receiving a Call

To receive a call, your phone must be turned on, have a SIM card inserted, and have a network connection with adequate signal strength. If your phone is locked, you must unlock the phone to answer the call.

Note: Your phone cannot receive calls when your SIM card is locked.



When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press

To



or **ANSWER** ()

answer the call

Displaying Your Phone Number

From the idle display:

Press

To



MENU

#

see your phone number

Note: Your phone number must be programmed on your SIM card in order to use this feature.

About Your Phone


See page 1 for a diagram of your phone that describes basic phone components.

Display

The top section of the display shows phone status indicators. The following illustration shows some of the common indicators that you may see at the top of the display when using your phone.

Messages, phone numbers, and menu options appear in the middle of the display. Text labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator in the bottom center of the display indicates that you can open the main menu or a feature sub-menu to see more options. For more information about the soft key and menu key labels, see "Using the Menu" on page 49.

Some of the phone functions described in this guide must be performed from the idle display. The term *idle display* refers to the standard display that you see when your phone is on and ready to use, when you are *not* on a call or using the menu system.

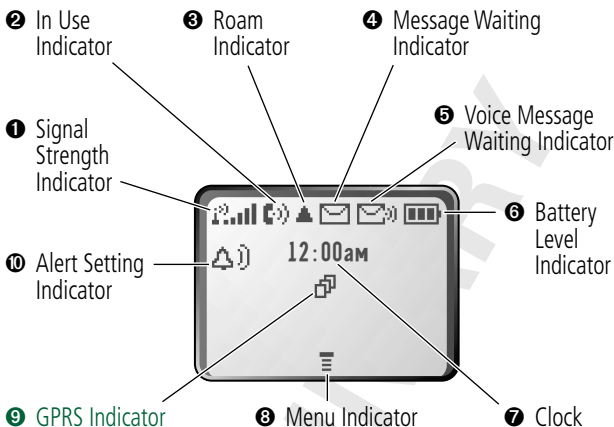

1 Signal Strength Indicator Shows the strength of your phone's connection with the network.

Strong      No signal

You cannot send or receive calls when the "no signal" indicator is displayed.

2 In Use Indicator Appears when a call is in progress.

3 Roam Indicator Appears when your phone uses another network system outside your home network. When you leave your home network area, your phone *roams* or seeks another network.

About Your Phone



④ Message Waiting Indicator Appears when your phone receives a text message.



⑤ Voice Message Waiting Indicator Appears when you receive a voicemail message.

⑥ Battery Level Indicator Shows the amount of charge left in your battery. The more segments visible, the greater the charge.

High     Empty

Recharge your battery as soon as possible when you see the **Low Battery** warning message.

⑦ Clock Shows the current time.

⑧ Menu Indicator Indicates that you can press  to open a menu. See "Using the Menu" on page 49.



⑨ GPRS Indicator Indicates that a GPRS packet data connection is active. This type of connection is used to transfer data to and from your phone (for example, when you conduct a micro-browser session with your phone, or when you use your phone as a modem to set up a wireless Internet connection with your personal computer). See "Micro-Browser" on page 130.



10 Alert Setting Indicator Shows the current selected alert profile. The default alert setting is a ringer.

 Loud ring

 Soft ring

 Vibrate

 Ring and vibrate

 Silent

Changing the Zoom Setting

You can set your phone's display to show either three lines or two lines of text plus soft key labels. Three lines of text display more information, while two lines increase text size.

To change the display view, press  once, then press and hold  again within two seconds of the first press.

You can also adjust the zoom setting from the menu. See the "Zoom" item on page 75.

Status Light

The status light tells you when you have an incoming call or message, or when your phone is *roaming* (using a non-home system). The light changes color to indicate different states:



Indication	State
alternating red/green	incoming call
flashing green	in service, home system
flashing yellow	roaming, non-home system

About Your Phone

Indication	State
flashing red	no service
alternating yellow/green	text or voicemail message received

By default, the status light indicator is turned off to extend battery life. See the “Status Light” item on page 75 to turn on the status light.

Note: Turning on the status light will substantially reduce your phone’s *standby time* (the length of time that your phone’s battery retains power when the phone is turned on but is not in use).

Volume Keys

Use the upper and lower volume keys to adjust your phone’s earpiece and ringer volume.



When	Press	To
During a call	volume keys	increase or decrease earpiece speaker volume
From the idle display (with flip opened)	volume keys	increase or decrease ringer volume

You can also use the volume keys to scroll up or down through menus and lists.




To change keypad volume, see “Customize an Alert Profile” on page 141.

Smart Key

The smart key gives you another way to perform many basic phone functions. It’s called the smart key because it anticipates the next action you are likely to perform.

For example, if you highlight an item and press the smart key, the smart key selects the highlighted item. You can use the smart key to send and end calls, select menu items, toggle features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key (➤).

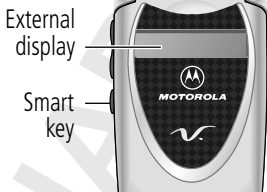

Note: The smart key provides an optional way to do some things faster. It is never *the only way* to perform a task.

You can also use the smart key to perform specific functions in the external display when the flip is closed. See the following section for details.

External Display

When your phone is on and the flip is closed, the external display shows the time and date. It also displays messages to notify you of events (like incoming calls) that need your attention.

Set Phone Alert

To change your phone's alert in the external display:

Press	To
1 volume keys	scroll to Alert
2 smart key	select an alert type
3 volume keys	return to the idle display

Adjust Voice Call Forwarding



To activate or deactivate voice call forwarding in the external display:

Press	To
1 volume keys	scroll to Forward
2 smart key	select All Calls or Off
3 volume keys	return to the idle display

Note: You must store a forwarding number to use this feature. See "Call Forwarding" on page 148 for details.

Return an Unanswered Call

When you cannot answer a call, your phone keeps a record of your unanswered calls and displays the message

X Missed Calls, where **X** is the total number of missed calls.



When you see the **X Missed Calls** message in the external display:

Press	To
1 smart key	see the received calls list
2 volume keys	scroll through the list and select a call that you want to return
3 smart key	send the call

Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other hands-free device with this feature.

Battery Use

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.

About Your Phone

- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.
- The more you talk on the phone or use phone features (like sending text messages), the less standby time your battery has. You can also extend battery life by turning off the status light. (See the "Status Light" item on page 75.)



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type.

Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.



Sending and Receiving Calls

For basic instructions on how to send a call, end a call, and receive a call, see pages 23–25 of the “Getting Started” section.

This chapter describes features that help you send and receive calls with your phone. For information about other call-related phone functions, see “Recent Calls” on page 78 and “Data and Fax Calls” on page 155.

Redialing a Number

You can redial a previously dialed phone number, whether the call was connected or busy. From the idle display:

Press	To
1 	go directly to the dialed calls list
2 	scroll to the entry you want to call
3 	redial the highlighted number

Using Automatic Redial

If the number dialed or the network is busy, you hear a busy signal, and your phone displays the message **Call Failed**.

When automatic redial is turned on, your phone automatically makes a number of redial attempts until the call goes through. When the call goes through, your phone rings or vibrates one time, displays the message **Redial Successful**, and then connects the call.

Sending and Receiving Calls

You must turn on automatic redial to use this feature. See the “Auto Redial” item on page 75 to turn on automatic redial.

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a busy signal and see the **Call Failed** message:

Press	To
 or RETRY ()	activate automatic redial

Caller ID



The *calling line identification* (caller ID) feature lets you see who is calling before you answer.

- If the caller's name is stored in your phonebook, the phone automatically displays the name. Otherwise, the phone displays the caller's phone number.
- If caller ID information is not available, your phone displays the message **Incoming Call**.

Line Security

If your phone displays **Line Not Secure** while you are on a call, it means that the phone has detected another device monitoring the call. This message does not appear when caller ID, call cost, or other information fills the display.



Returning an Unanswered Call

Your phone keeps a record of your unanswered calls. When you cannot answer a call, your phone displays:

- the  (missed call) indicator
- the message **X Missed Calls**, where **X** is the total number of missed calls

Press	To
1 VIEW ()	see the received calls list, with the most recent call at the top
2 	scroll through the list and select a call that you want to return
3 	send the call

Dialing an Emergency Number

Your service provider programs one or more emergency phone numbers (such as 911) that you can call under any circumstances. You can dial and call the emergency number even when your phone is locked, when you are prompted to enter a code or password, when the SIM card is not inserted in your phone, or when the SIM card is blocked or disabled.

Note: Emergency numbers vary by country. Your phone's emergency number(s) may not work in all locations.

Sending and Receiving Calls

To call the emergency number at any time:

Press	To
1 keypad keys	dial the emergency number (such as 911)
2 	call the emergency number

Entering Numbers in the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. These digits can be the last phone number that you called, or a phone number that you simply entered but did not call. These digits remain in the notepad even when you turn off the phone.

You can use the notepad to store a phone number that you intend to call later (such as a phone number told to you by the other party during a call). To retrieve these digits, see “Using the Notepad” on page 81.

Terminating an Incoming Call

While the phone is ringing or vibrating:

Press	To
 or IGNORE ()	cancel the incoming call

Depending on your phone settings and the type of subscription you have with your service provider, the call may be forwarded to another number, or the calling party may hear a busy signal.



Dialing With Speed Dial

The *speed dial* feature lets you dial any phonebook entry with a minimal number of keypresses.

Whenever you store an entry in your phonebook, the entry is assigned a unique speed dial number. If you know the speed dial number for the phonebook entry you want to call, you can use the speed dial feature.

Press	To
1 keypad keys	enter the one-, two-, or three-digit speed dial number for the entry you want to dial
2 	submit the number
3 	call the entry

To make an entry in the phonebook or view an existing entry's speed dial number, see "Storing a Phonebook Entry" on page 87.

Dialing With 1-Touch Dial

You can call phonebook entries 2 through 9 with the push of a single key. Just press and hold the one-digit speed dial number for one second.

It is recommended that you reserve location 1 in the phonebook for storing your voicemail number. In many cases, your service provider has already stored your voicemail number in location 1.

Sending and Receiving Calls

If your voicemail number is not accessible by pressing and holding the **1** key, complete the following steps:

Do This	To
1 Store your voicemail number in phonebook location number 1 (see "Storing a Phonebook Entry" on page 87)	enable the 1 key voicemail shortcut
2 Complete the instructions for "Storing Your Voicemail Number" on page 107	enable voicemail soft key and menu shortcuts

To store entries in locations 2 through 9 in the phonebook, see "Storing a Phonebook Entry" on page 87.

Note: You must specify which phone number list you want to use with this feature: phone memory phonebook, fixed dial list, or SIM card phonebook. See "1-Touch Dial Preference" on page 97.

Dialing a Number In a Text Message



If you receive a text message with an embedded phone number, you can dial the number directly.

Note: You must set up the text message inbox before you can receive text messages. See "Setting Up the Text Message Inbox" on page 109.

Find the Feature



> Messages > Text Msgs



Press	To
1 	scroll to the message with the number
2 	open the Text Msg Menu
3 	scroll to Call Back
4 SELECT ()	dial the number in the message

If the message contains more than one phone number, press  to scroll to a number and then press **SELECT** () to dial.

Additional Dialing Features

In addition to pressing numbers on your keypad, you can insert numbers or characters and send calls in a variety of ways.

To dial the local international access code:

Do This	To
Press 0 opp for two seconds	insert the international access code for the country from which you are calling

Sending and Receiving Calls

While dialing (with digits visible in the display):

Do This	To
Press  > Attach Number	attach a number from the phonebook or recent calls list to the end of the digits you entered
Press  > Hide ID/Show ID	Hide (or show) your caller ID for the next call.
Press  and then scroll to and select one of the following: • Insert Pause (to insert a p) • Insert Wait (to insert a w) • Insert 'n' (to insert an n)	insert a special character when making a call that requires you to dial and send additional digits (for example, to make a calling card call, or to retrieve messages from an answering machine): • Pause tells your phone to wait until the call connects before it sends the next digit(s) in a series. • Wait tells your phone to wait until the call connects, and then to prompt you before it sends the next digit(s). • 'n' tells your phone to stop and to prompt you for a number before it sends the next digit(s).
Press  > Send Message	create a text message addressed to the number entered



You can also call numbers using these features:

Do This	To Call
Press and release the voice key on the right side of your phone and say the entry's name (in two seconds).  Voice key	a phone number using the voice dial feature See "Recording a Voice Name For a Phonebook Entry" on page 89.
Press MENU > Service Dial > <i>entry to call</i>	a service dial number programmed on the SIM card
Press MENU > Fixed Dial > <i>entry to call</i>	a fixed dial number
Press MENU > Recent Calls > Received Calls or Dialed Calls > <i>entry to call</i>	a missed call or a number from a call you recently dialed or received

Using Features While On a Call

Using Call Waiting



If you subscribe to call waiting, an alert tone sounds while you are on a call to indicate that you have received a second call.

To put the first call on hold and answer the second call:

Press	To
1 	answer the new call
2 SWITCH ()	switch back to the first call
Note: You can press SWITCH () at any time to switch between calls.	
or	
LINK ()	connect the two calls

To end the first call and answer the second call:

Press	To
1 	end the current call Your phone rings to signal the new call.
2 	answer the new call



You must activate call waiting in order to use the feature. See the "Call Waiting" item on page 72 to activate call waiting.

Making a Conference Call



To talk to more than one person on a call, you can make a conference call. Call the first person, call the second person, then link the two calls.

Press	To
1 keypad keys	dial the first person's number
2 	call the number
3 HOLD () (if available) or  MENU > Hold	put the first call on hold Your phone displays a  (flashing phone) indicator next to the call on hold.
4 keypad keys	dial the next person's number
5 	call the number Your phone displays a  (active call) indicator next to the new active call.
6 LINK ()	connect the two calls
7 	end the entire call

Transferring a Call

While you are on a call, you can transfer the call to another phone by first talking to the person who answers the other phone, or by directly transferring the call.

Announce the Call Transfer

You can talk to the person who answers the other phone before you transfer the call, to tell them whom you are transferring.

Find the Feature

 > Hold

Press	To
1 keypad keys	enter the phone number where you are transferring the call
2 	dial the phone number Speak to the person who answers the target phone.
3 	open the menu
4 	scroll to Transfer
5 SELECT ()	select Transfer
6 OK ()	confirm the transfer Your phone displays the message Transfer: Complete when the call is transferred. You can hang up the phone when you see this message.



Do Not Announce the Call Transfer

You can directly transfer a call without talking to the person who answers.

Find the Feature

MENU > Transfer

Press	To
1 keypad keys	enter the phone number where you are transferring the call
2 	dial the phone number
	Your phone displays the message Transfer: Complete when the call is transferred. You can hang up the phone when you see this message.

Additional On-Call Features

While you are on a call, you can perform the following tasks:

Do This	To
Press HOLD () (if available) or Press  > Hold	put a call on hold Your phone displays a  (flashing phone) indicator to indicate that the call is on hold.
Press SPEAKER () (if available) or Press  > Spkrphone On	activate an attached speakerphone (hands-free mode)
Press  > My Tel. Number	see your phone number
Press  > Send Tones	send a number to the network as DTMF tones, for credit card calling or password entry To activate DTMF tones, see the "DTMF" item on page 76.

Using the Menu



Navigating to a Feature

You can access many of your phone's features by using these keys to move through the menu system:

Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.

Left Soft Key


Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

Volume Keys

Move up or down through menus and lists.

End Key

Exit the menu system without making changes, return to the idle display.

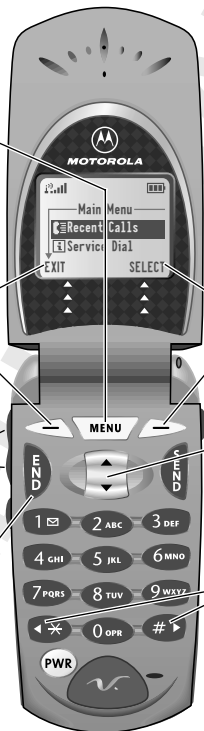


Right Soft Key

Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

Scroll Key

 Move up or down through menus and lists.



Cycle through and set the value of the highlighted menu item.

Using the Menu

This guide shows you how to navigate to a specific menu feature as follows:

Find the Feature

MENU > Recent Calls
> Dialed Calls

The > symbol means that you should scroll to and select the feature. This example shows that you must press **MENU**, scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to see the dialed calls list.

Selecting a Feature Option

Some features require you to select an item from a list:

Press **BACK** (←) to go back to the previous screen.



Highlighted item

A sub-menu is available. Press **MENU** to open the sub-menu.

Press **VIEW** (→) to view details of the highlighted item. **STORE** (→) appears if you can store the item in your phonebook.

Select an item by highlighting it. Use one of the following approaches:

- Press **UP** (↑) to scroll up or down to the item you want.
- In a numbered list, press a number key to highlight the item.



- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.

Entering Feature Information

Features such as the phonebook and datebook require you to enter information to fill in an entry's details:

Press to scroll down to additional items.

Highlighted item

Press **CANCEL** () to exit without making changes. **DONE** () appears when you enter or edit information. Press **DONE** () to save your changes.

Press **CHANGE** () to edit the selected information.

- Enter numbers or text with the keypad. (See "Entering Text" on page 53.)
- When an item has a list of possible values, press or to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and then decide that you do not want to save your changes, press to exit without saving.

Using the Menu

The message center lets you compose and send text messages. (See “Entering Text” on page 53.) A *flashing cursor* shows you where the text will appear:

Flashing cursor indicates insertion point.



Press **BROWSE** () to view and insert a name, number, or message from previously stored information.

Press **CANCEL** () to exit without making changes.

Press **MENU** () to open the sub-menu.

When you enter text, the flashing cursor changes to a *block cursor*, and the soft key functions change:

Block cursor indicates current highlighted character.



Press **OK** () to accept and store the text.

After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **DELETE** () to delete the character to the left of the insertion point.

Entering Text

Various text entry methods make it easy for you to enter names, numbers, and text messages on your phone.

You can enter all characters (letters, numbers, and symbols) using the standard tap method. Other text modes let you easily enter numbers and symbols, or insert text already stored on your phone. Finally, a predictive text mode lets you enter text messages with a minimum of keypresses.

Choosing a Text Mode

To activate a text mode, press  from any text entry screen and select the text mode from the **Entry Method** menu:

- iTAP** Let the phone predict each word as you enter it, then choose the word from a list (see “Predictive Text Entry with iTAP™ Software” on page 58).
- Tap Method** Enter characters one at a time by pressing the key for the letter, number, or symbol (see “Tap Method” on page 54). This is the standard mode for entering text on your phone.
- Numeric** Enter only the number that appears on each key.
- Symbol** Enter symbols only (see “Symbol Mode” on page 57).
- Browse** Browse through your phonebook and recent calls lists to select a name or number to enter.

Note: The text mode you select remains active until you change it by selecting another mode.

Tap Method

Tap method is the default standard mode for entering text on your phone.

To activate tap method from any text entry screen, press  and select the **Tap Method** menu option.

To enter text using the tap method:

Do This	To
1 Press a number key one or more times	cycle through the characters associated with the key and select the character you want (see the "Character Chart" on page 56).
2 Continue to press number keys	enter the rest of the characters in the text message
3 Press OK ()	accept and store the text when you are finished

General Text Entry Rules

Use the keypad to enter letters, numbers, symbols, and other characters with the tap method. Press the same key repeatedly to cycle through available characters (see the "Character Chart" on page 56):


Press a number key to enter text at flashing cursor location.

Press a number key as many times as necessary to enter the desired character.

Press and hold a number key to switch between tap method and numeric text entry mode.

Move flashing cursor up or down one line in text message, or change character in block cursor to uppercase or lowercase.

Move flashing cursor to the left or right in text message.

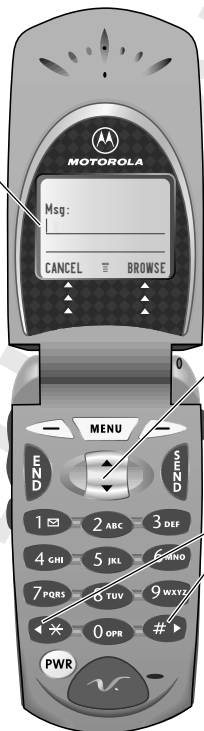

Entering Text

- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of every sentence is capitalized unless you manually change it. (Hold the number key or press  down to force the character to lowercase while it is highlighted by the block cursor.)

Character Chart

Use this chart as a guide for entering spaces, numbers, letters, symbols, and other characters with the tap method. Press and hold a key to cycle between uppercase and lowercase characters.

	space . 1 ? ! , @ _ & : ; " - () ' ÿ i % £ \$ ¥ ¤ €
	a b c 2 ä å á à ã α β ç
	d e f 3 δ é è ê ø
	g h i 4 í γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù
	w x y z 9 ξ ψ
	+ - 0 x * / \ [] = > < # §

Symbol Mode

Your phone provides an alternate way to find and enter symbol characters in a text message. You can view and select from a variety of available symbols.

To activate symbol mode from any text entry screen, press  and select the **Symbol** menu option.

To enter a symbol in symbol mode:

Do This	To
1 Press a number key one time	display its symbol options (see the "Symbol Chart" on page 58)
The symbols associated with the key you pressed are shown at the bottom of the display. If necessary, press other keypad keys to find the symbol you want.	
2 Press  or  or Press the number key multiple times	highlight the symbol you want
3 Press SELECT ()	add the highlighted symbol to the text area at the top of the display

Symbol Chart

Use this chart as a guide for entering symbols in symbol mode.

1 ES	space . ? ! , @ _ & : ; " - () ' ` ÿ ı % £ \$ ¥ ¤ €
2 ABC	@ _ \
3 DEF	/ : ;
4 GHI	" & '
5 JKL	() [] { }
6 MNO	ı i ~
7 PQRS	< > =
8 TUV	\$ £ ¥ ¤ €
9 WXYZ	# % *
0 OPR	+ - x * / = > < # §

Predictive Text Entry with iTAP™ Software

iTAP™ software provides a predictive text entry method that lets you enter the letters of a word using only one keypress per letter.

You must activate iTAP software prior to entering letters. You can do this from any text entry screen by pressing **MENU** to open the **Entry Method** menu and selecting the **iTAP** menu option.

Enter Words

To enter a word with iTAP software:

Do This	To
1 Press a number key one time	enter the first letter of the word The letters associated with the key you pressed are shown at the bottom of the display.
2 Press number keys (one per letter)	enter the rest of the word Alternative words and letter combinations are shown at the bottom of the display based on the keys you press. These word choices are updated with each keypress.
3 When you have entered all the letters of the word, press  or 	locate and highlight the word you want
4 Press SELECT ()	add the highlighted word to the text area at the top of the display A space is automatically inserted after the word.

Entering Text

For example, to spell the word "act," press **2 ABC** **2 ABC** **8 TUV**. The display shows:

Flashing cursor indicates insertion point.



Press to scroll and see additional word choices.

Press **DELETE** () to clear the last letter entered.

Press **SELECT** () to insert the highlighted word at the insertion point.

Enter Novel Words

You may enter a word that is not in the iTAP software dictionary. If you enter all the letters of a word but the word is not displayed:

Do This	To
1 Press DELETE () one or more times	delete one or more letters until you see a letter combination that matches the start of the word
2 Press * or *	highlight the letter or letter combination
3 Press SELECT () , then press *	shift the text entry cursor to the left and "lock" the selected portion of the word

Do This

4 Continue entering letters and highlighting letter combinations

To

spell the word

Punctuation

The iTAP software automatically adds a space after each word. When you enter punctuation, this space is removed. To enter punctuation with iTAP software:

Press

 or 

To

enter punctuation or other characters as shown in the "Character Chart" on page 56

Capitalization

The first word of a sentence is automatically capitalized, with following words in lowercase. To set or adjust character capitalization with iTAP software:

Press



To

change the words to initial character capitalized, all uppercase characters, or all lowercase characters

Enter Numbers

To enter a number with iTAP software:

Do This	To
1 Enter the first digit and then highlight it	put the iTAP software in number entry mode
2 Press number keys	add digits to the number
3 Press SELECT ()	enter the number at the insertion point

Delete Letters and Words

Place the cursor to the right of the text that you want to delete, and then do the following:

Do This	To
Press DELETE ()	delete one letter at a time
Continue to hold DELETE ()	delete the entire message



Menu Feature Descriptions

This chapter describes all of your phone's features in order of the menu map shown on pages 3–4. Some descriptions also include page numbers where you can find more detailed information.

If you would like to learn more about a specific feature, a reference guide for your phone is also available. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals>

or contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

Main Menu

RECENT CALLS

Received Calls



> Recent Calls
> Received Calls

View a list of recently received calls. See "Viewing the Received Calls or Dialed Calls List" on page 78.

Dialed Calls



> Recent Calls
> Dialed Calls

View a list of recently dialed calls. See "Viewing the Received Calls or Dialed Calls List" on page 78.

Menu Feature Descriptions

Notepad

MENU > Recent Calls
> Notepad

Call or store the last number entered on the keypad. See "Entering Numbers in the Notepad" on page 38, and "Using the Notepad" on page 81.

Call Times

MENU > Recent Calls
> Call Times

View call timers that track time spent on your last call, dialed calls, received calls, all calls since reset, and all calls total. See "Viewing and Resetting Call Timers" on page 82.

Call Cost

MENU > Recent Calls
> Call Cost

View call cost information. Your network may provide current credit information, and can provide cost information about the amount spent on your last call, dialed calls, received calls, and all calls total. See "Viewing and Resetting Call Costs" on page 84.



SERVICE DIAL

MENU > Service Dial

Dial pre-programmed numbers stored on your SIM card. Your service provider can program your SIM card with phone numbers for services such as taxi companies, restaurants, and hospitals.



FIXED DIAL

MENU > Fixed Dial

Dial or edit numbers in the fixed dial list.

When you activate the fixed dial feature, users can only call the numbers in the fixed dial list. To activate fixed dial, see the "Fixed Dial" item on page 73.





Fixed dial list entries can be any length. If there is a fixed dial entry for the digits 555, users can call any number that starts with 555.

You must enter your SIM PIN2 code to edit fixed dial entries. In the fixed dial list, you can create, edit, delete, and sort entries just like in the phonebook list. Fixed dial list entries are stored on your SIM card and do not have **Type** or **Voice Name** fields.

Note: Employers can use fixed dial to limit employees' phones to a predefined list of numbers, country codes, or other prefixes.

PHONEBOOK

 > Phonebook

Store names and numbers as entries in your phonebook, then call numbers by selecting them from the phonebook list. See "Phonebook" on page 86.

DATEBOOK

 > Datebook

Use the datebook calendar to schedule and review your appointments. See "Datebook" on page 98.

QUICK DIAL

 > Quick Dial

Dial pre-programmed numbers stored on your phone. Your service provider may program your phone with one or more quick dial numbers, such as the customer service number. You can call them by selecting them from the quick dial list.

Note: Your service provider may use a different name for this feature.



Menu Feature Descriptions

RADIO

MENU > Radio

Listen to FM radio stations with the optional Motorola Original™ FM Stereo Radio Headset accessory. This menu feature is displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port on your phone. See “Radio” on page 104.



MESSAGES

MENU > Messages

Adjust message settings, view and manage the various types of messages your phone can receive and/or send:



Voicemail

Listen to your recorded voice messages. See “Messages—Voicemail” on page 107

Text Msgs

Send and receive text messages. See “Messages—Text” on page 109

Info Services

Read information services messages (subscription-based broadcast messages, such as stock updates, news, and weather reports) that you have received

Browser Alerts

Read alert messages received by your micro-browser

Quick Notes

Select and send pre-written messages from the quick notes list. See “Sending a Quick Note Text Message” on page 116



Outbox

View all outgoing text messages, delivered and undelivered

Drafts

Store and edit text messages that you have written but not sent

SHORTCUTS

 > Shortcuts

Create keypad or voice shortcuts to menu features. See "Shortcuts" on page 120.

VOICE NOTES

 > Voice Notes

Use the voice key to record messages and phone calls. See "Voice Notes" on page 124.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

SIM APPLICATIONS

 > SIM Applications

Access information and applications stored on your SIM card.

Your SIM card may contain applications that process your outgoing calls, text messages, and other events. Contact your service provider for details.



BROWSER

 > Browser

Access Web pages and run Web-based applications. The micro-browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See "Micro-Browser" on page 130.



Menu Feature Descriptions

CALCULATOR

 > Calculator

Use your phone as a calculator or currency converter. See “Calculator” on page 132.

GAMES

 > Games

Play games on your phone. See “Games” on page 135.

Settings Menu

RING/VIBRATE

Alert

 > Settings
> Ring/Vibrate
> Alert

Select a ring or vibration alert profile for incoming calls and messages. See “Ring/Vibrate” on page 140.

Alert Detail

 > Settings
> Ring/Vibrate
> Alert Detail

Change details about the current alert profile. *Alert* represents the name of the alert profile. See “Ring/Vibrate” on page 140.

My Tones

 > Settings
> Ring/Vibrate
> My Tones

Create custom alert tones for your phone. See “Use the My Tones Feature” on page 142.



CALL FORWARD

MENU > Settings
> Call Forward



Set options for forwarding incoming voice, data, and/or fax calls to another phone number. See "Call Forwarding" on page 148.

PHONE STATUS

My Tel. Number

MENU > Settings
> Phone Status
> My Tel. Number

View, enter, and edit your name and phone number.

Credit Info

MENU > Settings
> Phone Status
> Credit Info



View the credit available, its expiration date, and the date of the last deposit. (This feature is available only if you subscribe to a prepay option.)

Credit Available

MENU > Settings
> Phone Status
> Credit Available



View the credit available. (This feature is available only if you subscribe to the advice-of-charge feature.)

Phone: Line 1/2

MENU > Settings
> Phone Status
> Phone: Line 1/2



Change the active phone line to send and receive calls from either of the available numbers. (This feature is available only for dual-line phones.)

Menu Feature Descriptions

Battery Meter

-  > Settings
- > Phone Status
- > Battery Meter

View a detailed battery charge meter.

Other Information

-  > Settings
- > Phone Status
- > Other Information

View your phone's feature specifications (if available from the service provider).

IN-CALL SETUP

Set the features that are active during a call, such as the in-call timer, call waiting, and call answering options.

In-Call Timer

-  > Settings
- > In-Call Setup
- > In-Call Timer

Adjust call timer display and beep settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

Time

Display the elapsed time for the current call

Cost

Display the cost of the current call (if you subscribe to a call cost option or advice-of-charge)





Total Cost

Display the cost of all calls since the last time you reset the timer (if you subscribe to a call cost option or advice-of-charge)



Credit Available Display how much credit you have left (if you subscribe to a call cost option or advice-of-charge)



Off

No in-call timer display

Call Cost Setup

MENU > Settings
> In-Call Setup
> Call Cost Setup



Adjust call cost settings.

You can assign a credit limit so that your phone displays your remaining credit during calls. Your phone notifies you when you approach your limit, and ends the call when you reach it.

Your phone network expresses cost in the amount of units used, but this feature lets you tell your phone how to translate the units to a currency.

My Caller ID

MENU > Settings
> In-Call Setup
> My Caller ID



Activate and deactivate the display of your phone number as an ID when you call someone.

Menu Feature Descriptions

Talk and Fax

MENU > Settings
> In-Call Setup
> Talk and Fax



Activate and deactivate the talk/fax service.

Use this feature prior to making a call when you want to talk and then send or receive a fax—all to the same phone number and within the same call.

You can also use the talk then fax feature to send a fax during a call. See "Sending a Talk then Fax Call" on page 159.

Answer Options

MENU > Settings
> In-Call Setup
> Answer Options

Turn call answering options on or off:

Multi-Key Answer by pressing any key

Open to Answer Answer by opening the flip

Call Waiting

MENU > Settings
> In-Call Setup
> Call Waiting



Activate and deactivate call waiting.

When call waiting is activated and another call arrives while you are on a call, call waiting can play a tone to notify you of the new call. See "Using Call Waiting" on page 44.



SECURITY

Phone Lock

MENU > Settings > Security
> Phone Lock

Lock and unlock your phone. See "Locking and Unlocking Your Phone" on page 162.

Lock Application

MENU > Settings > Security
> Lock Application

Lock and unlock specific phone applications (such as phonebook or datebook). When an application is locked, users must enter the unlock code to use the application.

Fixed Dial

MENU > Settings
> Security
> Fixed Dial



Restrict outgoing calls to numbers on the fixed dial list. See "Fixed Dial" on page 64.

Call Barring

MENU > Settings > Security
> Call Barring

Restrict incoming and outgoing calls. See "Barring Calls" on page 163.

SIM PIN

MENU > Settings > Security
> SIM PIN

Switch SIM card protection on and off, so users must enter the SIM card PIN code when they turn on the phone or insert a SIM card. See "Protecting the SIM Card" on page 164.

Menu Feature Descriptions

New Passwords

MENU > Settings > Security
> New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See "Assigning a New Code or Password" on page 160.

OTHER SETTINGS

Personalize

MENU > Settings
> Other Settings
> Personalize

Set several personal phone options:

Main Menu

Change the order of the main menu. (See "Reordering Menu Items" on page 150.)

Keys

Change the functions of the soft keys and smart key in the idle display. (See "Customizing a Soft Key Function" on page 151.)

Greeting

Change the text displayed when you turn on your phone

Quick Dial

Change quick dial number(s)

Initial Setup

MENU > Settings
> Other Settings
> Initial Setup

Set many basic phone options:

Time and Date

Set the phone's time and date



1-Touch Dial	Assign the one-touch dial feature to numbers 2 through 9 in your phone memory phonebook, fixed dial list, or SIM card phonebook. (See "1-Touch Dial Preference" on page 97.)
Auto Redial	Use this option to turn on or turn off the automatic redial feature. When you turn on automatic redial, your phone automatically redials calls that fail due to busy numbers or network conditions. (See "Using Automatic Redial" on page 35.)
Backlight	Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power
Status Light	Turn the status light off (to conserve battery power) and on
Zoom	Switch between three lines (Zoom Out) and two lines (Zoom In) of display text
Scroll	Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display
Animation	Turn animation off (to conserve the battery) or on. Animation makes your phone's menus move smoothly as you scroll up and down.

Menu Feature Descriptions

Language	Set the language for phone menus
Battery Save	Adjust the phone's power usage characteristics to conserve power
Contrast Setting	Adjust the contrast setting for your display
DTMF	Your phone can send a number to the network as dual tone multi-frequency (DTMF) tones. DTMF tones are used to communicate with automated systems that require you to enter a number such as a code, password, or credit card number. Use this option to set DTMF tones on or off.
Master Reset	Reset all options back to their original factory settings <i>except</i> for the unlock code, security code, and lifetime timer
Master Clear	Reset all options back to their original factory settings <i>except</i> for the unlock code, security code, and lifetime timer, <i>and</i> clear all user settings and entries <i>except</i> for information on the SIM card Note: This option <i>erases all user-entered information</i> stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered.



Network

- MENU** > Settings
- > Other Settings
- > Network

View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and turn on/off alerts that indicate when a call is dropped or network registration changes.

Car Settings

- MENU** > Settings
- > Other Settings
- > Car Settings



Adjust hands-free car kit settings.

You can set your phone to route calls directly to the car kit when it detects a connection, and automatically answer calls after two rings. See "Hands-Free Use" on page 151.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Headset

- MENU** > Settings
- > Other Settings
- > Headset



Set your phone to automatically answer calls after two rings when connected to a headset. See "Hands-Free Use" on page 151.

Recent Calls

You can use the recent calls menu to view received calls or dialed calls, retrieve the last number stored in the notepad, and view or reset call times and costs.

Viewing the Received Calls or Dialed Calls List

Your phone keeps lists of the numbers from calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added. Each entry tells you the person's number (or name, if available) and whether the call connected or not. You can call, store, or delete the numbers on these lists.

Shortcut: Press  to go directly to the dialed calls list from the idle display.

To open the recent calls menu:

Find the Feature

 > Recent Calls

Press	To
1 	scroll to Received Calls or Dialed Calls
2 SELECT ()	select Received Calls or Dialed Calls
3 	scroll to an entry you want to call, store, or delete
Note: ✓ means the call connected.	



Press	To
4 	call the entry's number
	Tip: Press and hold  for two seconds to send the entry number as DTMF tones. To activate DTMF tones, see the "DTMF" item on page 76.
or	
	view the entry's details if View appears above the  key, or store the entry's details in the phonebook if Store appears above the  key
or	
	open the Last Calls Menu to perform other procedures as described in the following list

The **Last Calls Menu** includes the following options:

Option	Description
Store	Create a phonebook entry with the selected number in the No. field. (This option is not available if STORE appears above the  key, or if the number is already stored as a phonebook entry.)
Delete	Delete the entry. (This option is not available if DELETE appears above the  key.)
Delete All	Delete all entries in the current list.

Recent Calls

Option	Description
Hide ID/Show ID	Hide (or show) your caller ID for the next call.
Send Message	Create a new text message, with the selected number in the Te1 No. field. See "Sending a Text Message" on page 113.
Add Digits	Add digits to the end of the selected number.
Attach Number	Attach another number from the phonebook or recent calls list to the end of the selected number.
Send Tones	Send the selected number to the network as DTMF tones, for credit card calling or password entry. (This option is available only during an active call.) To activate DTMF tones, see the "DTMF" item on page 76.
Talk then Fax	Tell the network you want to call and talk to someone, and then send a fax—all to the same number in the same call. See "Sending a Talk then Fax Call" on page 159. 



Using the Notepad

Your phone uses a notepad to store the most recent string of digits entered—either for a phone number that you called or for a number that you entered but did not call.

To call the number stored in the notepad, press  from the idle display.

To create a phonebook entry or perform other operations with the number:

Find the Feature

 > Recent Calls > Notepad

Press



To

open the **Dialing Menu** (to attach a number or insert a special character). See “Additional Dialing Features” on page 41.

or

STORE ()

create a new phonebook entry, with the notepad number copied into the **No.** field. See “Storing a Phonebook Entry” on page 87.

Viewing and Resetting Call Timers

Your phone tracks and records call times. Use the recent calls menu to view and reset a call timer.

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing **END**. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

You can view the approximate network connection time elapsed during the following calls:

Timer	Description
Last Call	Time spent on the last call dialed or received. You cannot reset this timer.
Dialed Calls	Total time spent on dialed calls since the last time you reset this timer.
Received Calls	Total time spent on calls received since the last time you reset this timer.
All Calls	Total time spent on dialed and received calls since the last time you reset this timer.
Lifetime	Total time spent on all calls on this phone. You cannot reset this timer.



To view a call timer:

Find the Feature

MENU > Recent Calls
> Call Times

Press	To
1 SELECT ()	open the list of timers
2 	scroll to the timer you want to view
3 SELECT ()	view the recorded time

To reset the call timer:

Press	To
1 RESET ()	reset the time (if available)
2 YES ()	confirm the reset

Viewing and Resetting Call Costs



Your phone network can provide the following cost information:

Cost Tracker	Description
Credit Available	Amount of your credit remaining. For GSM advice-of-charge, this is only available if you set a credit limit. Note: Your phone receives cost information from the advice-of-charge feature or third-party prepaid software.
Expiration Date	Date that the available credit expires (available only with a subscription to a prepaid option).
Last Deposit	Amount of the last deposit (available only with a subscription to a prepaid option).
Last Call	Amount spent on the last call you dialed or received. You cannot reset this cost tracker.
Dialed Calls	Amount spent on calls you dialed since the last time you reset this cost tracker.
Received Calls	Amount spent on calls you received since the last time you reset this cost tracker.



Cost Tracker	Description
All Calls	Amount spent on all dialed and received calls since the last time you reset this cost tracker. You can reset this value separate from Dialed Calls and Received Calls , so Dialed Calls plus Received Calls may not equal All Calls .

To view a cost tracker:

Find the Feature

MENU > **Recent Calls**
> **Call Cost**

Press	To
1 SELECT ()	open the list of cost trackers
2 	scroll to the cost tracker you want to view
3 SELECT ()	view the recorded cost

To reset the cost tracker:

Press	To
1 RESET ()	reset the cost (if available)
2 OK ()	enter your PIN2 code to confirm the reset

Phonebook

You can store a list of names and phone numbers in your phone's electronic phonebook. You can view these entries and call them directly from your phone.

To see the list of names stored in your phonebook, press **MENU** > **Phonebook** from the idle display. Scroll to a name and press **VIEW** () to view details of the phonebook entry as shown in the following display.

Fields in a Phonebook Entry Form

Voice Name indicator indicates a recorded voice name

Entry's Name

Type indicator identifies number type:

-  Work
-  Home
-  Main
-  Mobile
-  Fax
-  Pager

Entry's phone number


Entry's speed dial number

(P) indicates entry stored in phone memory, **(S)** indicates SIM memory.

Return to list

Press **MENU** to open the **Phonebook Menu**

Edit entry

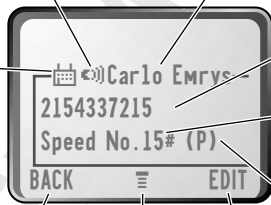

Note: Numbers stored on the SIM card do not have **Type** or **Voice Name** information.



Storing a Phonebook Entry

A phone number is required for a phonebook entry. All other information is optional.

Shortcut: Enter a phone number in the idle display, then press **STORE** () to create a phonebook entry with the number in the **No.** field. Go directly to step 1 in the following procedure to enter additional information and store the entry.

Note: You can also use the following procedure to store a fixed dial entry by scrolling to and selecting **Fixed Dial**.

Enter Information

Find the Feature

MENU > Phonebook
MENU > New

Press	To
1 CHANGE ()	select Name
2 keypad keys	enter a name for the phonebook entry (see "Entering Text" on page 53)
3 OK ()	store the name
4 CHANGE ()	select No.
5 keypad keys	enter the phone number
6 OK ()	store the phone number
7 CHANGE ()	select Type
	Note: This option is not available for entries stored on a SIM card.
8 	scroll to the type of phone number

Press	To
9 SELECT ()	select the number type
10 RECORD () or Go to step 11 if you do not want to record a voice name for the entry	record a voice name for the entry, if desired See "Recording a Voice Name For a Phonebook Entry" on page 89. Note: This option is not available for entries stored on a SIM card.
11 	scroll to Speed No. , the number to <i>speed dial</i> the entry The next available speed dial number is assigned to a new phonebook number by default.
12 CHANGE ()	select Speed No. if you want to change it
13 keypad keys	enter a different speed number, if desired
14 OK ()	save the modified speed number If your chosen speed number is already assigned to another entry, you are asked if you want to replace that entry.
15 SELECT ()	select MORE if you want to create another entry with the same Name Note: You must enter a name and number to use this option.



Complete Phonebook Entry

When you are finished entering information for a phonebook entry:

Press	To
DONE ()	store the entry and return to the phonebook list

Recording a Voice Name For a Phonebook Entry

You can record a voice name when you create a new phonebook entry, or when you edit a previously stored phonebook entry. This lets you use voice dial to call the number without dialing (see “Voice Dial” on page 91).

Note: You cannot record a voice name for an entry stored on a SIM card.

Tip: Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone’s microphone in a normal tone of voice.

Find the Feature

 > Phonebook

Do This	To
1 Press 	scroll to the entry that needs a voice name
2 Press VIEW ()	display the entry’s detailed view
3 Press EDIT ()	edit the phonebook entry

Do This	To
4 Press 	scroll to Voice Name
5 Press RECORD ()	begin the recording process The phone displays Press Voice Key then say name.
6 Press and release the voice key on the right side of your phone and say the entry's name (in two seconds)	record the voice name The phone displays Press Voice Key then REPEAT name.
7 Press the voice key and repeat the name	confirm the voice name The phone displays Trained: Voice Name.

Dialing a Phonebook Entry

You can use the phonebook list, voice dial, speed dial, or 1-touch dial to call a number stored in your phonebook. To use speed dial, see "Dialing With Speed Dial" on page 39. To use 1-touch dial, see "Dialing With 1-Touch Dial" on page 39.

Phonebook List

To call a number in the phonebook list:

Find the Feature

 > **Phonebook**

Press	To
1 	scroll to the entry you want to call
2 	send the call



Voice Dial

To call a number using voice dial:

Do This	Result
Press and release the voice key on the right side of your phone and say the entry's name (in two seconds).	Your phone goes to the entry in the phonebook list, repeats the voice name, waits two seconds, then automatically dials the call.

Editing a Phonebook Entry

Note: You can also use the following procedure to edit a fixed dial entry by scrolling to and selecting **Fixed Dial1**.

Find the Feature

 > Phonebook

Press	To
1 	scroll to the entry you want to edit
2 VIEW ()	display the entry's detailed view
3 EDIT ()	edit the phonebook entry

Edit a phonebook entry or fixed dial entry by following the procedures described in "Storing a Phonebook Entry" on page 87.

Deleting a Phonebook Entry

To delete a phonebook entry:

Find the Feature

 > Phonebook

Press	To
1 	scroll to the entry you want to delete
2 	open the Phonebook Menu
3 	scroll to Delete
4 SELECT ()	select Delete
5 YES ()	confirm the deletion

Copying Phonebook Entries to the SIM Card

You can copy one or more entries from your phonebook list to the SIM card. This lets you free up infrequently used speed dial numbers.

Note: The SIM card cannot store **Type** and **Voice Name** data for entries. If you try to copy an entry with a type or voice name to the SIM card, the phone asks you for confirmation before dropping this information and copying the entry.

Copy a Single Entry

To copy a single phonebook entry from your phone to your SIM card:

Find the Feature

 > **Phonebook**

Press	To
1 	scroll to the entry you want to copy
2 	open the Phonebook Menu
3 	scroll to Copy Entry



Press	To
4 SELECT ()	select Copy Entry The phone displays the Copy To form, with the next available speed dial number.
5 keypad keys	edit the speed dial number, if necessary Change the speed dial number in the Copy To menu by entering a new number on the keypad.
6 OK ()	approve the copy to the speed dial number The phone displays the Stored message. You can now delete the old phonebook entry.

Copy Multiple Entries

To copy multiple phonebook entries from your phone to your SIM card:

Find the Feature

 > **Phonebook**

Press	To
1 	open the Phonebook Menu
2 	scroll to Copy Entries
3 SELECT ()	select Copy Entries The phone displays the Copy Entries form.

Press	To
4 	scroll to From (start)
5 CHANGE ()	select From (start)
6 keypad keys	enter the first (lowest) speed dial number in the range of entries that you want to copy
7 OK ()	store the number and return to the Copy Entries form
8 	scroll to From (end)
9 CHANGE ()	select From (end)
10 keypad keys	enter the last (highest) speed dial number in the range of entries that you want to copy
11 OK ()	store the number and return to the Copy Entries menu
12 	scroll to To (start)
13 CHANGE ()	select To (start)
14 keypad keys	enter the first (lowest) new speed dial number for the entries' new location
15 OK ()	store the number and return to the Copy Entries menu
16 DONE ()	copy the entries The phone displays the Copied Entries message. You can now delete the old entries.



Checking Phonebook Capacity

You can check your phonebook's capacity to see how many entries you have used and how many more are available. Since you can store phonebook entries on both your phone and your SIM card, you can check either your phone's capacity or your SIM card's capacity.


To check the phonebook capacity for your phone or SIM card:

Find the Feature

MENU > Phonebook

Press	To
1 MENU	open the Phonebook Menu
2 	scroll to Phone Capacity or SIM Capacity
3 SELECT ()	select Phone Capacity or SIM Capacity

The phone displays the memory meter to indicate the amount of phonebook storage capacity in use.

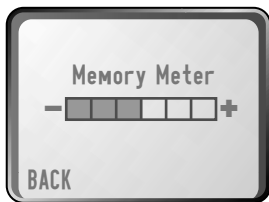

Synchronizing with TrueSync Software



You can synchronize phonebook entries between your phone and computer or hand-held device with Starfish TrueSync[®] software, a Motorola accessory product. See the TrueSync user guide for more information.

Note: TrueSync software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.

Setting Up the Phonebook

You can specify the sort order for your phonebook entries and the location of your 1-touch dial entries.

Phonebook List Sort Preference

You can set up your phone to sort your phonebook list by speed dial number (the standard), name, or voice dial.

Tip: The voice dial sort is identical to the name sort, except that the entries with voice name tags appear first.

Find the Feature

MENU > Phonebook

Press	To
1 MENU	open the Phonebook Menu
2	scroll to Setup
3 SELECT ()	select Setup
4	scroll to Sort by
5 CHANGE ()	select Sort by
6	scroll to the entry you want



Press	To
7 SELECT ()	select the entry you want

1-Touch Dial Preference

Your phone lets you specify whether your 1-touch dial entries are located in the phone memory, the fixed dial list, or your SIM card:

Find the Feature

 > Phonebook

Press	To
1 	open the Phonebook Menu
2 	scroll to Setup
3 SELECT ()	select Setup
4 	scroll to 1-Touch Dial
5 CHANGE ()	select 1-Touch Dial
6 	scroll to the list you want
7 SELECT ()	select the list you want

Datebook

The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can review your schedule of events for the week or by the day, and have the datebook play a reminder alarm for specific events. To schedule or see events:


Find the Feature

MENU > **Datebook**

The datebook is organized by *views*—from the week view, to the day view, to a view of a specific event.

Week View

When you open the datebook, your phone displays a calendar for the week. Lines or filled boxes under each day indicate that events have been scheduled.

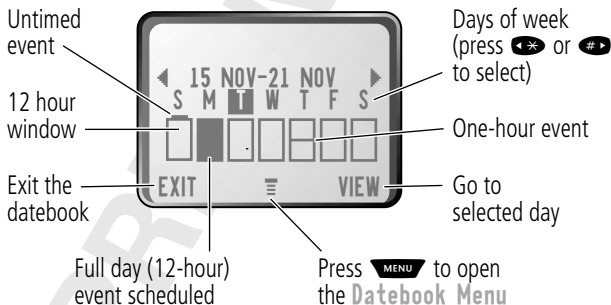



Day View

Select a day in the week view and press **VIEW** () to see the day's events. You can store, edit, view, copy, and delete any event from the day view.



Event View

Select an event in the day view and press **VIEW** () to open the detailed event view. You can edit, copy, and delete events from the event view.



Storing a New Event

A title is required for a datebook event. All other information is optional.

Find the Feature

 > **Datebook** > *day*
 > **New**

See “Selecting a Feature Option” on page 50 for instructions on scrolling to and selecting options.

Press	To
1 CHANGE ()	select Title
2 keypad keys	enter a title for the event (see “Entering Text” on page 53)
3 OK ()	store the event title
4 	scroll to other fields and enter information as necessary Other fields let you enter start time, duration, date, repeating events, and reminder alarm.
5 DONE ()	store the new event and return to the day view



Changing Event Information

To change information about an existing event:

Find the Feature

MENU > **Datebook**

Press	To
1 or	scroll to the scheduled event day
2 VIEW (	display the day view
3	scroll to the event you want to change
4 VIEW (	display the event view
5 EDIT (	edit the event
6	scroll to the detail you want to change
7 CHANGE (	edit the information
8 keypad keys	enter the new information
9 DONE (	store the information and return to the day view

Copying an Event

To copy information from a current event to a new event:

Find the Feature

 > **Datebook**

Press	To
1  * or # 	scroll to the scheduled event day
2 VIEW ()	display the day view
3 	scroll to the event to copy
4 	open the Datebook Menu
5 	scroll to Copy
6 SELECT ()	copy the event
7 YES ()	confirm the copy Your phone assumes that you want to change the date, and displays the Date field.
8 keypad keys	enter the date information
9  ()	move to the month, day, and year
10 DONE ()	save the copy of the event
11 DONE ()	return to the day view



Deleting an Event

Find the Feature

 > Datebook

Press	To
1  or 	scroll to the scheduled event day
2 VIEW ()	display the day view
3 	scroll to the event to delete
4 	open the Datebook Menu
5 	scroll to Delete
6 SELECT ()	select Delete
	For non-repeating events, go to step 7. For repeating events, the phone displays a delete event menu:
a 	scroll to This Event Only or Repeat Events
b SELECT ()	select the event(s) to delete
7 YES ()	confirm the deletion
	The phone briefly displays a Deleted: message and returns you to the day view.

Radio



You can use your phone to tune, store presets, and listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's accessory connector port.

Turning the Radio On and Off

Press	To
Radio ()	turn the radio on and off

Alternatively, you can use the following procedure:

Press	To
1 	open the menu
2 	scroll to Radio
3 On () or Off ()	turn the radio on or off

Note: The **Radio** () soft key option and **Radio** menu feature are displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port.

Tuning a Station

Do This	To
Press 	scroll up or down to the next frequency
or	
Press and hold 	scroll up or down to the next available stereo station



Storing a Preset

To store a station to a preset that you can recall later:

Do This	To
Press and hold a number key (1 to 9 WXYZ)	assign its preset number to the tuned station

Selecting a Preset

To select a preset radio station:

Press	To
a number key (1 to 9 WXYZ)	tune the station stored at that preset location

Sending and Receiving Calls With the Radio On

Your phone interrupts the radio signal and rings or vibrates as usual to notify you of an incoming call, message, or other event. When you receive a call:

Do This	To
Press IGNORE (⏮)	ignore the call
Press ANSWER (⏭)	answer the call
or Press the button on the FM Stereo Radio Headset microphone	Note: You can use the FM Stereo Radio Headset microphone to converse with the other party during a call

To end the call and resume the FM broadcast:

Do This	To
Press	end the call
or	
Press and hold the button on the FM Stereo Radio Headset microphone	

Turn the radio off before dialing outgoing calls from the phone keypad. You do not have to turn off the FM radio feature to dial emergency numbers, or numbers selected from your phonebook or other lists.

Tip: To dial a recently called number, press  or the button on the FM Stereo Radio Headset microphone to go to the dialed calls list. For more information, see “Recent Calls” on page 78.



Messages—Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone. Contact your service provider for more details.

Storing Your Voicemail Number

Store your voicemail number in your phone to make it faster and easier to use voicemail. Your voicemail number is provided by your service provider.

Find the Feature

MENU > Messages
MENU > VoiceMail Setup

Press	To
1 keypad keys	enter the phone number for your voicemail
2 OK (➤)	store the number

Receiving a New Voicemail Message

When you receive a voicemail message, your phone displays **New VoiceMail** . (Some networks only indicate when you have messages, whether they are new or not.) If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, listen to the message, or turn off your phone. (See “Reminders” on page 147.)

From the new message notification:

Do This	To
Press CALL ()	call your voicemail phone number and listen to the message

Listening to a Voicemail Message

To listen to your voicemail messages at any time:

Find the Feature



> Messages > VoiceMail

Your phone calls the voicemail phone number you stored. If you do not have a voicemail number stored, the phone guides you through storing a number.



Messages – Text



Text messages are brief messages that you can send and receive (such as **Where are we meeting?**). Received messages appear on your phone display or in your text message inbox.

You must set up the text message inbox *before* you can send and receive these messages. The total number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored in your phone.

Note: Your service provider may have already programmed the text message inbox settings for you.

Setting Up the Text Message Inbox

Find the Feature



> Messages



> Text Msg Setup

Press	To
1 	scroll to Srvce Center No.
2 CHANGE ()	change the Srvce Center No. which is provided by your service provider
3 keypad keys	enter the phone number for the service center that handles your outgoing messages
4 OK ()	store your service center number
5 CHANGE ()	change the Expire After period

Messages—Text

Press	To
6 keypad keys	enter the expiration period—the number of days your network tries to send unreceived messages
7 OK ()	store the expiration period
8 CHANGE ()	change the Reply Type
9 	scroll to the default type of replies you want to send—text messages, or other formats
10 OK ()	store the reply type
11 CHANGE ()	change the Cleanup setting
12 	scroll to the period of time that messages stay in your inbox
13 SELECT ()	select the cleanup period If you select Custom , continue. Otherwise, the procedure is complete.
14 	change the entry for the number or label
15  * or # 	switch between the number and the label
16 DONE ()	store the custom cleanup period after you finish entering all information



Receiving a Text Message

Note: You must set up the text message inbox before you can receive text messages. See “Setting Up the Text Message Inbox” on page 109.

When you receive a new message, your phone displays **New Message**  and gives an alert. If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, read the message, or turn off your phone. (See “Reminders” on page 147.)

When your inbox is full, any new message replaces the oldest unlocked message.

From the new message notification:

Press

READ ()

To

open the message (or your text message inbox if there are multiple messages)

Reading, Locking, or Deleting a Text Message

You can open your text message inbox to read, lock, or delete messages at any time.

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted as new ones are added. If you want to save a message, you should lock it to prevent it from being overwritten as new messages are received.

Find the Feature

MENU > Messages > Text Msgs

Press	To
1 	scroll to the message you want ( = unread and urgent,  = read,  = read and locked)
2 READ (	open the message
3 SAVE (	close the message without changes
or DELETE (	delete the message
or MENU	open the Text Msg Menu to perform other procedures as described in the following list

The **Text Msg Menu** includes the following options:

Option	Description
Call Back	Call the number in the message header or the message text.
Go To	Go to a Web address (URL) in the message.
Reply	Open a new text message, with the message's Reply To number in the To field.
Forward	Open a copy of the text message, with an empty To field.



Option	Description
Lock/Unlock	Lock or unlock the message.
Delete or Delete All	Delete the message or all inbox messages. Press Yes () to confirm the deletion.
Store Number	Open a new phonebook entry with the message's embedded number in the No. field.
Create Message	Open a new text message form.
Setup	Open the inbox setup menu.

Sending a Text Message

To create and send a new text message:

Find the Feature

> Messages > Text Msgs
 > Create Message

Press	To
1 CHANGE ()	select To
2 keypad keys	enter the phone number where you want to send the message
	Note: To send the message to multiple recipients, see “Sending a Text Message to More Than One Person” on page 115.
3 OK ()	store the number
4 CHANGE ()	select Msg

Messages – Text

Press	To
5 keypad keys	enter the text message (see “Entering Text” on page 53)
6 OK ()	store the text message Note: Message length is limited. When 40 or fewer characters remain, a two-digit counter at the top of the display shows how many are left.
7 CHANGE ()	select Priority
8 	scroll to the priority you want
9 SELECT ()	set the priority
10 CHANGE ()	select Call
11 keypad keys	enter the number you want your recipient to call back (the message’s From field)
12 OK ()	store the number
13 DONE ()	finish the message Your phone displays Send Message Now?
14 YES () or NO ()	send the message cancel the message or save it as a draft



Sending a Text Message to More Than One Person

You can create and send a single text message to multiple recipients. To create the message:

Find the Feature

MENU > **Messages** > **Text Msgs**
MENU > **Create Message**

Press	To
1 CHANGE ()	select To
2 BROWSE ()	open the Browse Menu
3 	scroll to Phonebook
4 SELECT ()	select Phonebook
5 	scroll to a phone number where you want to send the message
6 ADD ()	add the number to the group of message recipients
Note: To add more recipients, scroll to and select other phone numbers from the phonebook list.	
7 DONE ()	close the phonebook list and return to the To field in the text message window

Press	To
8 OK (➡)	store the numbers and complete the other message fields (for details, see “Sending a Text Message” on page 113)
or	
	open the To Menu to browse for more phone numbers
	• Press  to scroll to Browse • Press SELECT (➡) to open the Browse Menu and repeat this procedure for the additional numbers

Sending a Quick Note Text Message

Quick notes are short, pre-written text messages that you can create, select, edit, and send quickly (for example, **Meet me at ...**).

To send or save a quick note message:

Find the Feature

 > **Messages** > **Quick Notes**

Press	To
1 	scroll to the quick note
2 	open the Quick Note Menu to perform other procedures as described in the following list



The **Quick Note Menu** includes the following options:

Option	Description
Create Message	Open an editor where you can create a new quick note. Enter text and press OK () to save it as a quick note.
Edit	Open an editor where you can edit the selected quick note. Edit the quick note text and press OK () to save your changes.
Delete	Delete the selected quick note.
Send	Open a new message, with the selected quick note text in the Msg field. Complete the other fields in the message (for details, see “Sending a Text Message” on page 113). To send the quick note to multiple recipients, see “Sending a Quick Note to More than One Person” on page 118.

Sending a Quick Note to More than One Person

To send a quick note text message to multiple recipients:

Find the Feature



> Messages > Quick Notes

Press	To
1 	scroll to the quick note
2 	open the Quick Note Menu
3 	scroll to Send
4 SELECT ()	select Send
5 CHANGE ()	select To
6 BROWSE ()	open the Browse Menu
7 	scroll to Phonebook
8 SELECT ()	select Phonebook
9 	scroll to a phone number where you want to send the message
10 ADD ()	add the number to the group of message recipients
Note: To add more recipients, scroll to and select other phone numbers from the phonebook list.	
11 DONE ()	close the phonebook list and return to the To field in the quick note text message window



Press

12 OK (➡)

To

store the numbers and complete the other message fields (for details, see “Sending a Text Message” on page 113)

or



open the **To Menu** to browse for more phone numbers

- Press  to scroll to **Browse**
- Press **SELECT** (➡) to open the **Browse Menu** and repeat this procedure for the additional numbers

Viewing the Status of Sent Text Messages

Text messages that you send are stored in the outbox. To view the contents of your outbox:

Find the Feature



> **Messages** > **Outbox**

Messages are sorted from newest to oldest.

The following icons indicate message status:

» = Sending in progress

✕ = Sending failed

Shortcuts

Your phone includes several pre-programmed shortcuts. You can create additional shortcuts, if you like, to mark frequently used menu items.

Standard Shortcuts

The following shortcuts are pre-programmed in your phone. You cannot edit or delete these shortcuts.

Do This	To
Press  , then press and hold  (within two seconds)	zoom in/out your phone's display view (See "Changing the Zoom Setting" on page 29.)
Press  	lock/unlock your keypad
Press  	display your phone number
Press 	go to the dialed calls list (See "Recent Calls" on page 78.)

User-Settable Shortcuts

You can create shortcuts to many menu features and applications. A shortcut takes you directly to the menu item, or performs the menu action (if applicable).



Creating a Shortcut

You can assign a keypad shortcut, or both a keypad shortcut *and* a voice shortcut to a menu item.

A voice shortcut lets you go directly to a menu item by saying its shortcut name.

Tip: Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

Do This	To
1 Press 	enter the menu system
2 Scroll to the item to which you want to assign a shortcut	highlight the menu item
3 Press and hold 	open the shortcut editor The phone displays: Assign Shortcut for: " <i>Item</i> "? where <i>Item</i> is the name of the item you selected.
4 Press YES ()	view shortcut options

Shortcuts

Do This	To
5 Press CHANGE ()	change the keypad shortcut number, if necessary
or	
Press DONE ()	select the default keypad shortcut number and close the shortcut editor if you do not want to assign a voice shortcut
or	
Press 	scroll to Voice if you want to assign a voice shortcut
6 Press RECORD ()	begin the recording process The phone displays Press Voice key then say voice shortcut.
7 Press and release the voice key on the right side of your phone and say the shortcut's name (in two seconds)	record the shortcut name The phone displays Press Voice key then REPEAT voice shortcut.
8 Press and release the voice key and repeat the name	confirm the shortcut name The phone displays Trained: Voice Shortcut
9 Press DONE ()	close the shortcut editor



Using Shortcuts

You can use a shortcut from the idle display, while on a call, or while scrolling through a menu.

Use a Keypad Shortcut

If you know the shortcut number:

Press	To
1 	open the menu
2 the shortcut's number	go to the menu item, or perform the menu action

Select a Shortcut From the List

To select a shortcut from the shortcut list:

Find the Feature

 > **Shortcuts**
> *the shortcut you want*

Use a Voice Shortcut

To use a voice shortcut:

Do This	To
1 Press 	open the menu
2 Press and release the voice key on the right side of your phone and say the shortcut's name (in two seconds)	go to the menu item, or perform the menu action

Voice Notes

The voice note feature lets you record personal messages or phone calls. You can play back a voice note at any time. There are no pre-recorded voice notes on your phone.

Recording a Voice Note

Use this procedure to record a voice note when the idle display is visible, or use it during a phone call to record the call. Your phone plays an alert tone to notify the other party that the call is being recorded.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

Tip: Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

Do This	Result
1 Press and hold the voice key on the right side of your phone for the duration of the recording.	A tone sounds in the earpiece and the phone displays the Recording Voice Note message.
2 Speak your voice message into the phone.	The phone records the message and displays a recording timer.
3 Release the voice key to stop recording.	The phone displays the voice notes list number and the total recording time.




Viewing the Voice Notes List

The voice notes list shows all your voice notes along with other important information and features.

Find the Feature

MENU > Voice Notes

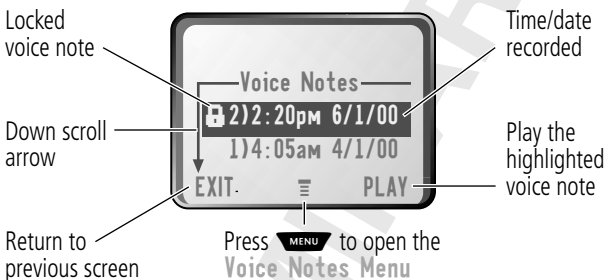

New Voice Note appears at the end of the list or by itself if no voice notes are stored. Select **New Voice Note** to view instructions on how to record a new voice note.

Playing a Voice Note

To play a recorded voice note:

Find the Feature

MENU > Voice Notes


Press	To
1 	scroll to the voice note
2 PLAY ()	play the voice note

When an optional Motorola Original™ headset accessory or FM Stereo Radio Headset accessory is connected to your phone, voice note playback is automatically routed to the headset.

Tip: You can play a voice note while taking a call. It won't be transmitted to the other party.

Playback Screen

While the voice note is playing, the playback screen is displayed.

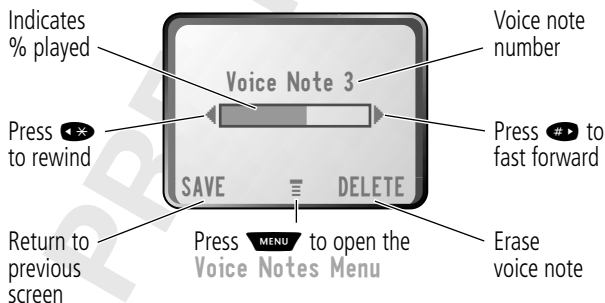



Voice Note Controls

While playing back a voice note, press these keys to do the following:

Stop playback and go to **Voice Notes Menu**.

Stop playback and return to voice notes list.

Raise or lower playback volume of voice note.

Stop playback and scroll up/down to next voice note.

Rewind three seconds, resume playing.

Press and hold to rewind to the beginning.

When playback is complete, press to restart.


If the voice note is unlocked, stop playback and display **Delete Voice Note?**

If the voice note is locked, stop playback and unlock voice note.

Press any number key to alternately stop and start playback.

Fast forward three seconds, resume playing.

Press and hold to fast forward to end.

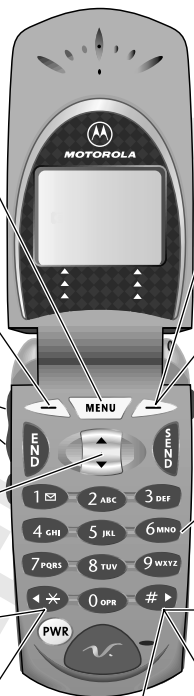

Locking and Unlocking a Voice Note

You can prevent a voice note from being accidentally deleted by locking it. To delete a locked voice note, you must first unlock it.

Find the Feature

 > Voice Notes

Press	To
1 	scroll to the voice note you want to lock or unlock
2 	open the Voice Notes Menu
3 	scroll to Lock or Unlock
4 SELECT ()	lock or unlock the voice note

You can also lock or unlock a voice note while playing it back. When the playback screen is displayed:

Press	To
1 	open the Voice Notes Menu
2 	scroll to Lock or Unlock
3 SELECT ()	lock or unlock the voice note

Playback stops when you lock or unlock a voice note. Press any number key to resume playback.



Deleting a Voice Note

You can delete a single unlocked voice note or all unlocked voice notes. To delete a locked voice note, you must first unlock it. See “Locking and Unlocking a Voice Note” on page 128.

Find the Feature

MENU > Voice Notes

Press	To
1	scroll to the voice note you want to delete
2 MENU	open the Voice Notes Menu
3	scroll to Delete or Delete All
4 SELECT ()	select the highlighted option The phone displays Delete Voice Note X? , or Delete All Voice Notes?
5 YES ()	delete the selected voice note, or delete all voice notes

Notes:

- You can always press **NO** () to cancel deletion.
- A deleted voice note cannot be recovered.

Micro-Browser



The micro-browser lets you access Web pages on your phone. Contact your service provider to set up access, if necessary.

Note: Your phone may be configured to use a high-speed GPRS (General Packet Radio Service) connection for Internet access. This type of connection can be identified by a  (GPRS) indicator in the idle display that disappears when you start the micro-browser session. If a  (connected call) indicator is displayed when you start the micro-browser session, your phone is using a standard voice channel connection. Your network connection charges may vary depending on the type of connection used.

Starting a Micro-Browser Session

To open the micro-browser:

Find the Feature

 > **Browser**

The micro-browser displays the home page set up by your service provider.

Press	To
1 	scroll to a bookmark or service
2 SELECT ()	select the service

Shortcut: If you open a text message with a Web address (URL) in it, you can go directly to the URL by selecting  > **Go To**.



If you are unable to establish a network connection with the micro-browser, contact your service provider.

Interacting With Web Pages

You can perform the following operations on a Web page:

Do This	To
Press 	scroll through a text message
Press  and then SELECT ()	scroll through and select items in a list
Press keypad keys and then OK ()	enter requested information
Press  to scroll to a phone number on a Web page, then press 	call the number from the micro-browser
Press 	go back to the previous Web page

Calculator

You can use your phone as a convenient calculator and currency converter.

Calculating Numbers

Find the Feature


MENU > Calculator

Press	To
1 number keys	enter a number in the calculator
2 2nd ← or # →	highlight a calculator function
3 SELECT (→)	perform the highlighted function

Selected function appears here

Press **←** or **#** **→** to highlight a function

Exit the calculator

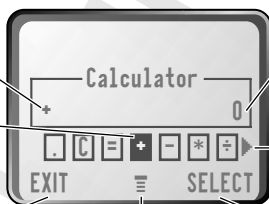

Entered number

Press **←** or **#** **→** to scroll to other functions

Perform the highlighted function

Press **MENU** to open the Calculator Menu



The calculator can perform the following functions:

Function	Description
.	Insert a decimal point
C	Clear the calculation
CE	Clear entry (replaces the C function when you enter subsequent values in a calculation)
=	Calculate the result
+	Add
-	Subtract
*	Multiply
÷	Divide
M ^S	Store the current value in memory (overwrites values already stored)
M ^C	Clear the value stored in memory
M ^R	Replace the displayed value with the value stored in memory
%	Divide the displayed value by 100
±	Change the entry's sign (positive/negative)
\$	Calculate the exchange rate

Converting Currency

The currency converter works just like the calculator, but uses the \$ (currency) function:

Find the Feature

 > Calculator
 > Exchange Rate

Press	To
1 number keys	enter the exchange rate
2 OK ()	store the exchange rate
3 number keys	enter the amount to convert (amount to multiply by the exchange rate)
  * or # 	highlight the \$ function
5 SELECT ()	perform the conversion

Games



Your phone contains three games that you can play between phone calls. If you get an incoming call, message, alarm, or alert, the game ends automatically.

Selecting and Starting a New Game

Find the Feature

MENU > Games

Press	To
1	scroll to the game of your choice
2 SELECT ()	start the game

When the game is over, you can play another session of the same game or return to the games menu.

Press	To
BACK () or NO ()	return to the games menu
NEW () or YES ()	start another session of the game you just played

Ending a Game

You can end a game at any time.

Press

BACK ()

or



To

end the game session and return to the games menu

Playing a Game

Blackjack

In this classic Las Vegas card game, you play against the dealer to see who can get closer to 21 points without going over.

Rules of the game

- With each new hand, the first card is dealt to the dealer.
- All face cards count as 10 points.
- All number cards count as the points shown on their face.
- An Ace counts as 11 points, unless that would put you over 21 points. Otherwise, an Ace is counted as 1 point. An Ace that was originally counted as 11 may later be counted as 1 point if it will bring your points under or equal to 21 points.
- An initial deal of an Ace and a card with a face value of 10 points counts as exactly 21 points or Blackjack.
- Blackjack automatically wins against any other hand that totals 21 points.



- If you score more than 21 points, you go “bust” or lose.
- If you get five cards without going bust, you win.
- If you and the dealer have the same score, the dealer wins.
- You can ask for a “hit” or another card as long as you do not go bust.
- As long as the dealer’s total is less than 17 points, the dealer must continue to take a hit.

How to Play

When the game begins, you are dealt two cards. Based on their total face value, you can:

Press	To
STAY ()	see the results of the hand
HIT ME ()	request another card

Mindblaster

Your goal is to guess a secret four-symbol code. You play by entering symbols into four spaces and then submitting a guess.

Rules of the Game

- Your score is the number of guesses it takes to reveal the secret code.
- When you submit a guess, you get a clue that shows how many symbols have been identified correctly or are in the correct position.
- You can see a history of your last 10 guesses.

- Once you enter a symbol into a blank space, you can change the symbol but you cannot make the space blank again.
- When you correctly guess the four-symbol code, the display shows your score and the level of your next game.
- After you win one game, you progress from level 1 to level 2.
- After you win two more games, you progress from level 2 to level 3.
- When you exit the game or turn off the phone, you begin again at level 1.

How to Play

When the game begins, you see four blank spaces. To play the game:

Do This	To
Press  * or # 	move from space to space
Press 	place a symbol in a space
Press GUESS ()	submit a guess (when all four spaces contain symbols)
Select  and then press 	scroll through and view a history of your last 10 guesses



Paddleball

In this test of endurance, your mission is move your paddle to strike a bouncing ball. The more you succeed, the smaller your paddle gets.

Rules of the game

- Your score is the number of times your paddle hits the ball.
- You lose when the paddle misses the ball and the ball hits the wall.

How to play

Press	To
	move your paddle so that it hits the bouncing ball

Adjusting Your Settings

You can adjust a wide variety of phone settings to suit your needs.

Ring/Vibrate

Your phone rings or vibrates to notify you of an incoming call, message, or other event. This ring or vibration is called an *alert*. You can select one of five different alert profiles:

 Loud ring

 Soft ring

 Vibrate

 Ring and vibrate

 Silent

The alert setting indicator in your display shows the current alert profile (see illustration on page 27).

Each alert profile contains settings for ringer and keypad volume. It also includes alert tone settings for different events: incoming calls, text messages, voicemail messages, data calls, fax calls, alarms, and reminders. You can modify the settings in each profile.

Select an Alert Profile

Find the Feature

 > Settings > Ring/Vibrate
> Alert

Press

1 

To

scroll to the alert profile you want to use



Press

2 **SELECT** (➡)

To

select the alert profile

The phone displays the
Changed: Alert message.

Customize an Alert Profile

You can customize a profile by changing the alerts used for specific events (such as incoming calls, text messages, etc.). Your phone includes multiple preset alert tones and vibrations. Any changes you make are saved to the current alert profile.

Tip: This feature also lets you set the profile's ringer volume and keypad volume.

Find the Feature

MENU > **Settings** > **Ring/Vibrate**
> **Alert Detail**

Press

1

To

scroll to the event for which you want
to set a new alert

2 **CHANGE** (➡)

select the event

The phone displays the list of
available alerts.

3

scroll to the alert you want for the
event

4 **SELECT** (➡)

select the alert

The phone displays the
Changed: Event Alert message.

Use the My Tones Feature

The my tones feature lets you create up to 32 custom alert tones for your phone. The tones you create appear in the list of available alerts (see “Customize an Alert Profile” on page 141).

Creating a Tone

Find the Feature

MENU > Settings > Ring/Vibrate
> My Tones
MENU > New Tone

Press	To
1 CHANGE ()	select Notes
2 keypad keys	enter notes for the tone (see “Entering Notes” on page 143)
3 OK ()	store the notes
4 CHANGE ()	select Name
5 keypad keys	enter the name for the tone
6 OK ()	store the name
7 DONE ()	store the tone



Entering Notes

To create a new tone, use the keypad keys to enter each note. Press a key multiple times to cycle through its available notes or options (pitch, octave, or length). The default setting for a new tone is a quarter note in octave two.

Key	Phone Display	Description
1 Oct	1	set octave one
	2	set octave two
	3	set octave three
2 Arc	A	note A
	B	note B
	C	note C
3 Def	D	note D
	E	note E
	F	note F
4 Ch	G	note G
	R	rest
7 PRS	#	sharp
	b	flat
0 Len	h	half note or half rest
	w	whole note or whole rest
	q	quarter note or quarter rest

Adjusting Your Settings

Enter a note as follows:

Task	Action
Change the octave	Set the new octave (1 , 2 , or 3) <i>before</i> selecting the note. The new octave applies to the note and all following notes until you change it again.
Select the note (required)	Press a keypad key to enter a note.
Change a note to a sharp or flat	Enter a sharp or flat (# or b) <i>after</i> selecting the note. Some sharps and flats are played as standard notes. For example, B# is the same as C . Press  to scroll to valid notes when entering a new note.
Change a note's length	Set the new length (h , w , or q) <i>after</i> selecting the note. The new length applies to the note and all following notes until you change it again.
Add a rest	Enter one or more rests (R characters) as needed in the tone sequence. You can set the length of the rest by entering an h , w , or q character <i>after</i> the rest, just as you can for a note.
Listen to a new tone as you compose it	Press  to enter the Compose Menu , and select Play All to play the notes you have entered.



Example

Press the following keys to play this sequence of notes and rests in octave three: **C** (quarter note), **E flat** (quarter note), **half rest**, and **G** (whole note):

Press	To	Phone Display
1	set octave three	3
2	enter a quarter note C	C
3	enter a quarter note E flat	E _b
4	enter a half rest	R _h
5	enter a whole note G	G _w

Playing a Tone

Find the Feature

> Settings > Ring/Vibrate
> My Tones

Press	To
1	scroll to the tone you want to play
2	open the My Tones Menu
3	scroll to Play
4 SELECT ()	select Play
	The phone displays the playback meter and plays the tone.

Adjusting Your Settings

Press	To
5 PLAY ()	play the tone again
or	
CANCEL ()	return to the my tones list

Editing a Tone

You cannot edit the standard alert tones included with your phone. To edit a custom tone that you created:

Find the Feature

 > **Settings** > **Ring/Vibrate**
> **My Tones**

Press	To
1 	scroll to the tone you want to edit
2 EDIT ()	open the tone details
3 	scroll to the details you want to edit (Name or Notes)
4 CHANGE ()	select the details you want to edit
5 keypad keys	enter new text or notes (see "Entering Notes" on page 143)
6 OK ()	store the details

Deleting a Tone

You cannot delete the standard alert tones included with your phone. To delete a custom tone that you created:

Find the Feature

 > **Settings** > **Ring/Vibrate**
> **My Tones**



Press	To
1	scroll to the tone you want to delete
2	open the My Tones Menu
3	scroll to Delete
4 SELECT ()	select Delete
5 YES ()	confirm the deletion

Reminders

Reminders are alerts that ring or vibrate to notify you about a voicemail or text message that you have received, or a datebook event that you have scheduled.

To set or turn off reminders:

Find the Feature

> **Settings** > **Ring/Vibrate**
> **Alert Detail** > **Reminders**

Press	To
1	scroll to the reminder alert you want: Beep , Vibrate , or Off Beep or Vibrate sets the corresponding reminder alert type. Off turns off all reminders.
2 SELECT ()	select the reminder alert

Call Forwarding



Call forwarding sends your phone's incoming voice, fax, and/or data calls directly to another phone number. Use call forwarding options to specify which calls your phone should forward. When you are ready to accept calls on your phone again, you can turn off call forwarding.

Set Up or Cancel Call Forwarding

The call forwarding options for voice, fax, or data calls are:

All Calls	forwards all calls
If Unavailable	forwards calls if your phone is unavailable
Detailed	uses different forwarding numbers if you are out of range, unable to answer, or busy (<i>voice calls only</i>)
Off	does not forward calls



Find the Feature

MENU > **Settings** > **Call Forward**

Press	To
1 	scroll to the type of calls you want to forward (Cancel All cancels all call forwarding and ends the procedure.)
2 SELECT ()	open the call forward details for that call type
3 	scroll to Forward
4 CHANGE ()	change the Forward option
5 	scroll to the call forward option you want
6 SELECT ()	store the option
7 	scroll to To (same for If Busy , If No Answer , or If Unreachable)
8 CHANGE ()	change the phone number
9 keypad keys	enter the forwarding phone number
or	
BROWSE ()	browse through your phonebook or other lists for the forwarding phone number
10 OK ()	store the forwarding phone number

Note: You can repeat this procedure to enter forwarding information for other call types.

Check Call Forwarding Status

Your network may store call forwarding status for you. If you change your phone's call forward settings (see "Set Up or Cancel Call Forwarding" on page 148), then you should confirm that the network call forward status matches your preferences.

Find the Feature

MENU > Settings > Call Forward
> Forward Status

Press	To
1 	scroll to Voice, Fax, or Data calls
2 View ()	confirm that the network settings are correct

Reordering Menu Items

You can customize the order of the items in your phone's main menu, depending upon your usage.

Find the Feature

MENU > Settings
> Other Settings
> Personalize > Main Menu

Press	To
1 	scroll to the menu item you want to move
2 GRAB ()	grab the menu item you want to move
3 	move the item up or down the menu
4 INSERT ()	insert the item in the new location



Customizing a Soft Key Function

You can relabel the soft keys (◀ and ▶) and the smart key to access different main menu items from the idle display.

Find the Feature

MENU > Settings
> Other Settings
> Personalize > Keys

Press	To
1	scroll to Left , Right , or Smart
2 CHANGE (▶)	open the key editor
3	scroll to the new key function
4 CHANGE (▶)	confirm the new function
The key will have the new function whenever the phone is idle.	

Hands-Free Use



You can purchase an optional Motorola Original™ hands-free car kit or headset for your phone. These accessories provide alternative ways for you to use your phone without using your hands.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Adjusting Your Settings

Automatic Answer

When you activate automatic answer and connect your phone to a car kit or headset, your phone automatically answers calls after two rings.

Find the Feature

MENU > Settings
> Other Settings

Press	To
1 	scroll to Car Settings or Headset
2 SELECT (	select the feature
3 	scroll to Auto Answer
4 CHANGE (	select Auto Answer
5 	scroll to On or Off
6 SELECT (	confirm the setting

Automatic Hands-Free

You can set up your phone to automatically route calls to a car kit when it detects a connection.

Find the Feature

MENU > Settings
> Other Settings
> Car Settings
> Auto Handsfree

Press	To
1 	scroll to On or Off
2 SELECT (	confirm the setting



Power-Off Delay

When your phone is connected to a car kit, you can set it to stay on for a specified time period after you switch off the ignition. This keeps your phone from draining your vehicle battery by staying on indefinitely, but leaves your phone on long enough that you do not have to re-enter your unlock code when you make short stops.

Find the Feature

MENU > Settings
> Other Settings
> Car Settings
> Power-Off Delay

Press	To
1 	scroll to the time delay option you want
2 SELECT ()	confirm your selection

Caution: If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to accidentally drain your vehicle battery if you select this option.

Charger Time

When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.

Find the Feature



- > Settings
- > Other Settings
- > Car Settings
- > Charger Time

Press	To
1	scroll to the charge time option you want
2 SELECT ()	confirm your selection



Data and Fax Calls



A Motorola Original™ data kit lets you transfer data between your phone and a computer or other external device. You can:

- synchronize data between your phone and an external device with Starfish TrueSync® software, a Motorola accessory product. See the TrueSync user guide for more information.

Note: TrueSync software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.

- use your phone as a wireless modem to connect to the Internet
- use your phone to send and receive data and fax calls on your computer or hand-held device.

For more information about Motorola Original data kits, see the Motorola Web site at:

<http://www.motorola.com/dataaccessories>.

Connecting Your Phone to an External Device

Connect your phone to an external device (such as a computer or hand-held device) using a serial cable or a USB cable.

Note: Not all devices are compatible with serial cable or USB cable connections. Check your external device for specifications.

Set Up a Cable Connection

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.


Note: Check your computer or hand-held device to determine the type of cable you need.

Attaching a Serial Cable

Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer, Palm III device, or Palm V device to your phone.

Do This

- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.

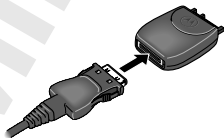

- 2 With the Motorola logo and the phone both facing you, plug the detachable head into your phone's accessory connector port.





Do This

- 3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.
-

Attaching a USB Cable

Do This

- 1 Plug the end of the cable with the Motorola logo into your phone's accessory connector port. Make sure that the logo and the phone are both facing you.
- 
-
- 2 Plug the other end—the USB connection—into the USB port on the external device.
-

Install the Software

Install the software from the CD-ROM that comes with your Motorola Original data kit. See the data kit's user guide for more information.

Sending a Data or Fax Call

You can connect your phone to a computer or hand-held device to send data or a fax from the connected device.

Use this feature to transfer data from your computer onto another device, and to synchronize phonebook and datebook information between your phone, computer, and/or hand-held device.

Connect your phone (see "Connecting Your Phone to an External Device" on page 155) and do the following:

Do This	To
1 Check the phone	make sure that the phone is connected and powered on
2 Open the application on your computer	place the call through the application (such as dial-up-networking or fax) Note: You cannot dial data or fax numbers through your phone's keypad. You must dial them through your computer.
3 End the transfer on your computer	close the call and connection when the transfer is complete

Receiving a Data or Fax Call

You can connect your phone to a computer or hand-held device to receive data or a fax.

Use this feature to transfer data to your computer from another device.

Transfer the Data or Fax

Connect your phone (see "Connecting Your Phone to an External Device" on page 155).

Your phone notifies you when the data or fax call arrives, and transfers the call to the connected device. You must use the application running on the connected device to answer the call.



End the Data/Fax Connection

When the data or fax transfer is complete:

Do This	To
End the call from the connected device	close the connection

Sending a Talk then Fax Call



You can place a call where you talk and then send a fax to the same phone number within the same call.

Connect to the device that will send the fax (see “Connecting Your Phone to an External Device” on page 155) and do the following:

Press	To
1 keypad keys	enter the phone number for the call
2 	open the Dialing Menu
3 	scroll to Talk Then Fax
4 SELECT ()	select Talk Then Fax (for the next call only)
5 	dial the call
	Speak and, when ready, initiate the fax transfer on the connected device.
	When transfer is complete, end the call from the connected machine.

Security

Assigning a New Code or Password

Your phone's four-digit unlock code is originally set to 1234, and the six-digit security code is originally set to 000000 at the factory. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information or modifying your phone settings. The unlock code must contain four digits, and the security code must contain six digits. Be sure to make a note of the new numbers.

Notes:

- Your service provider may retain your phone's security code for customer service purposes. In this case, you will not be able to use phone features that require you to enter the security code (such as master clear, master reset, and the unlock code bypass feature).
- If the only password you can change is the unlock code, the **New Passwords** menu is unavailable and the **Unlock Code** option appears on the **Phone Lock** menu. In this case, open the unlock code editor by selecting: **MENU** > **Settings** > **Security** > **Phone Lock** > **Unlock Code**.

To change a code or password:

Find the Feature

MENU > **Settings** > **Security**
> **New Passwords**



Press	To
1 	scroll to the code or password you want to change
2 CHANGE ()	select the code or password
3 keypad keys	enter your old code If you do not know your code, see "If You Forget a Code or Password" on page 161.
4 OK ()	submit your old code
5 keypad keys	enter the new code
6 OK ()	assign the new code
7 keypad keys	re-enter the new code
8 OK ()	confirm the new code

If You Forget a Code or Password

If you forget your security code (originally set to 000000), SIM PIN, SIM PIN2, or call barring password, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following when you see the **Enter Unlock Code** message:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

Locking and Unlocking Your Phone

You can lock your phone manually or set your phone to lock automatically whenever you turn it off.

When you try to use a locked phone, it asks you to enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

You can make emergency calls on your phone even when it is locked. See "Dialing an Emergency Number" on page 37.

Lock Your Phone Manually

Find the Feature



> Settings > Security
> Phone Lock > Lock Now

Press	To
1 keypad keys	enter your four-digit unlock code
2 OK (➤)	lock the phone

Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature



> Settings > Security
> Phone Lock
> Automatic Lock > On

Press	To
1 keypad keys	enter your four-digit unlock code
2 OK (➤)	set the phone to lock automatically



Unlock Your Phone

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your four-digit unlock code The unlock code is originally set to 1234. If necessary, see "If You Forget a Code or Password" on page 161.
2 OK ()	unlock your phone

Barring Calls



Call barring lets you restrict outgoing or incoming calls. You can restrict all calls, calls to international numbers, or calls while roaming.

Find the Feature

MENU > **Settings** > **Security**
> **Call Barring**

Press	To
1 keypad keys	enter your call barring password
2 OK ()	submit your password
3 	scroll to Outgoing or Incoming calls
4 CHANGE ()	select barring for Outgoing or Incoming calls
5 	scroll to a restriction for the barred calls
6 SELECT ()	select the restriction for the barred calls

Protecting the SIM Card

Your PIN (Personal Identification Number) code protects the information stored on your SIM card. When the SIM PIN feature is activated, you must enter your SIM card PIN code each time you turn on the phone or insert a SIM card. Your SIM card PIN code is given to you by your service provider.

Find the Feature

 > Settings > Security
> SIM PIN

Press	To
1 	scroll to On or Off
2 SELECT ()	switch protection on or off
3 keypad keys	enter your SIM card PIN code
4 OK ()	submit your code

Unblock the SIM Card PIN Code

If you enter an incorrect SIM card PIN code three times in a row, your SIM card is disabled and your phone displays the message **SIM Blocked**. You need to enter a PIN unblocking key (PUK) code, which you can obtain from your service provider.



Note: In the following key sequence, each key press must occur within two seconds of the previous keypress.

Caution: If the unblocking attempt is tried unsuccessfully 10 times, the SIM card is permanently disabled and your phone displays the message **SIM Disabled**.

Press	To
    + <i>PUK code</i>	unlock the SIM card
+  (send key) + <i>new PIN code</i>	
+  (send key) + <i>new PIN code</i>	
+  (send key)	

Troubleshooting

Check these questions first if you have problems with your phone:

Question	Answer
Is your phone set up correctly?	Press MENU # . If you do not see your phone number, contact your service provider.
Is your battery charged? Do you see in the display?	The battery level indicator should have at least one segment showing (). If it does not, recharge your battery. (See "Charging the Battery" on page 22 and "Battery Use" on page 33.)
Does the handset have a signal? Do you see in the display?	Make sure that your antenna is fully extended. The signal strength indicator should have at least one segment showing (). If it does not, move to an area with a stronger signal to use your phone.
Is the earpiece volume too low?	While on a call, press the upper volume key on the side of your phone.
Is the other party unable to hear you?	Make sure that your antenna is fully extended and that your phone is not muted. Press UNMUTE () if necessary to unmute the phone. Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.



Question	Answer
Has the phone been damaged, dropped, or gotten wet?	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
Was a non-Motorola battery or battery charger used?	

The following refer to specific problems:

Problem	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	See "If You Forget a Code or Password" on page 161.
I pressed the power key, but nothing happened.	Be sure to press and hold  (the power key) until the display appears and you hear an audible alert (this could take a couple of seconds). If nothing happens, check that a charged battery is installed. (See "Installing the Battery" on page 21.)

Troubleshooting

Problem	Solution
The display says: Insert SIM Card or Check SIM Card even though I have inserted my SIM card in the phone.	The SIM card may be incorrectly inserted. Check the SIM card to make sure that it is inserted properly. See "Installing the SIM Card" on page 19.
The display says: SIM Blocked. How do I unblock my SIM card?	Call your service provider (the company that sends you your monthly wireless service bill) to obtain the PIN unblocking key (PUK) code. See "Unblock the SIM Card PIN Code" on page 164.
The display says: Enter Unlock Code. How do I unlock my phone?	Enter the factory-preset unlock code (1234), or the last four digits of your phone number. (See "Locking and Unlocking Your Phone" on page 162.) If this fails, call your service provider (the company that sends you your monthly wireless service bill).
My phone asks for an unlock code when I try to open a feature.	The application you want is locked. If you own the phone but do not know the unlock code, see "If You Forget a Code or Password" on page 161.
My phone does not ring.	If you see  or  in the display, then the ringer is turned off. See "Ring/Vibrate" on page 140.



Problem	Solution
I tried to place a call and heard an alternating high/low tone.	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display says Ready before making a call.
I cannot send/receive calls.	Make sure that your antenna is fully extended and that you have a phone signal (see the “Signal Strength Indicator” item on page 27). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings. Your phone also may have the Call Barring feature turned on. If you know the unlock code, you can change this setting in the security menu (MENU > Settings > Security). Also, check to be sure your SIM card is installed and working.
My phone has poor reception and drops calls.	Make sure that your antenna is fully extended and is not bent or damaged. Also, make sure you have a phone signal (see the “Signal Strength Indicator” item on page 27). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.

Problem	Solution
I cannot hear others on my phone.	While on a call, press the upper volume key on the left side of your phone. Your phone display should show the volume increasing. Also, make sure that your phone's earpiece is not blocked by its carrying case.
I cannot open my inbox.	Before you can use text or information services messages, you must set up the appropriate inbox. See "Setting Up the Text Message Inbox" on page 109.
How do I see the calls I sent or received?	To see the most recent calls you dialed or received, open the "Recent Calls" lists:  > Recent Calls > Received Calls or Dialed Calls



Problem	Solution
My phone will not send voicemail commands, passwords, or other codes.	Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be On or Off. If you have trouble sending numbers, check your DTMF setting. - From the idle display, press:  > Settings > Other Settings > Initial Setup > DTMF - Press  to scroll to On. - Press SELECT () to select it.
My phone's display is too dark.	You can use the Contrast Setting feature (see page 76) to change the level of contrast in your phone display. You can also use the Backlight feature (see page 75) to change the length of time that your phone's backlight display stays on.
My battery didn't last as long as I expected. What can I do to extend battery life?	Your battery's performance is affected by charge time, feature use, temperature changes, and other factors. For tips on extending your battery life, see "Battery Use" on page 33.

Problem	Solution
I am unable to record a voice note, voice name, or voice shortcut	Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) away from your mouth, and speak directly into your phone's microphone in a normal tone of voice.
I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?	The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer. Finally, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, and your computer will automatically activate the port.
My phone beeped when I attached the data cable, but my fax and data applications don't work.	Some wireless networks may not support data or fax transmission. If you are roaming on an unfamiliar network, this may be the case. Also, remember that data and fax transmission usually requires a subscription. Call your service provider for more information.



Problem	Solution
When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?	19200 Kbps is the data transfer rate of the connection between your computer and the phone. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.
I can't end my data call by closing the application on my computer. What can I do?	Try pressing END on your phone. Also try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer. These alternative methods may disrupt the application on your computer.
I launched the micro-browser but the display says: Service Not Available.	You may be in an area without service, or you may be connected to a network that does not support Internet access.
I launched the micro-browser but the display says: Data Server Unavailable.	Try again in a few minutes. The servers may be temporarily busy.

Specific Absorption Rate Data

This model phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions reviewed by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is ____ W/kg², and when worn on the body, as described in this user guide, is ____ W/kg.² (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of:

<http://www.fcc.gov/oet/fccid>
after searching on FCC ID ____.

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information provided to the FCC includes the FCC-accepted Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that hand-held mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones.

First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the

National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they

performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³

- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people

each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone

industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key

factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

Where can I find additional information?

For additional information, see the following Web sites:

Federal Communications Commission (FCC) RF Safety Program (select “Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters”):

<http://www.fcc.gov/oet/rfsafety>

World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As):
<http://www.who.int/emf>

United Kingdom, National Radiological Protection Board: <http://www.nrpb.org.uk>

Cellular Telecommunications Industry Association (CTIA):
<http://www.wow-com.com>

U.S. Food and Drug Administration (FDA) Center for Devices and Radiological Health: <http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Valey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

FDA020400

Warranty

Limited Warranty for Motorola Personal Communications Products Purchased in the United States and Canada

I. What This Warranty Covers

- Products. Defects in materials and workmanship in wireless cellular telephones, pagers, and/or two-way radios, and certain accessories that are sold with them, such as the battery, battery charger and holster manufactured and/or sold by Motorola (Products).
- Batteries. Defects in materials and workmanship in batteries that are manufactured by Motorola and/or sold with Products are covered by this warranty only if the fully-charged capacity falls below 80% of rated capacity or they leak.
- Software. Physical defects in the media that tangibly embodies each copy of any software supplied with the Products.

II. What the Period of Coverage Is

From the date the Products are purchased by the first end-user:

- Products. The warranty is for one year. Exception: The warranty for Spirit GT series and Talkabout series two-way radio accessories is for 90 days.
- Software. The warranty is for 90 days.
- Repairs/Replacements. The warranty is for the balance of the original warranty or for 90 days from the date you receive it, whichever is longer.

III. Who is Covered

This warranty extends to the first end-user purchaser, only.

IV. What We Will Do to Correct Warranty Problems

At no charge to you, we have the option to repair or replace the Products or software that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products or parts. No software updates are provided.

V. How to Get Warranty Service

Please call:

USA

Cellular

1-800-331-6456

Paging

1-800-548-9954

Two-Way

1-800-353-2729

TTY (Text Telephone)

1-888-390-6456

Canada

All Products

1-800-461-4575

TTY (Text Telephone)

1-888-390-6456

You will receive instructions on how to ship the Products to Motorola. You must ship the Products to us with freight, duties and insurance prepaid. Along with the Products you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. **RETAIN YOUR ORIGINAL PROOF OF PURCHASE.**

We will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional information is needed, please contact us at the telephone number listed above.

VI. What This Warranty Does Not Cover

- Products that are operated in combination with ancillary or peripheral equipment or software not furnished by Motorola for use with the Products ("ancillary equipment"), or any damage to the Products or ancillary equipment as a result of such use. Among other things, "ancillary equipment" includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.

- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.
- Rechargeable batteries that: (a) are charged by other than the Motorola-approved battery charger specified for charging such batteries; (b) have any broken seals or show evidence of tampering; (c) are used in equipment other than the Product for which they are specified; or (d) are charged and stored at temperatures greater than 60 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or (c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.
- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.

- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Products that are leased.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

VII. Some Other Limitations

This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.

No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.

No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided

by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.

VIII. Patent and Software Provisions

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly infringe a United States patent. Our obligation is conditioned on: (a) you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become non-infringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.

Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

This is Motorola's entire liability with respect to infringement of patents by the Products.

Laws in the United States and other countries preserve for Motorola and other third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to reproduce in copies and distribute copies of such software. The software may be copied into, used in and redistributed with only those Products that are associated with such software. No other use, including without limitation, disassembly or reverse engineering of such software or exercise of exclusive rights in such software is permitted.

IX. State Law and Other Jurisdiction Rights

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:

USA

Cellular	1-800-331-6456
Paging	1-800-548-9954
Two-Way	1-800-353-2729
TTY (Text Telephone)	1-888-390-6456

Canada

All Products	1-800-461-4575
TTY (Text Telephone)	1-888-390-6456

To correspond with Motorola about the Products, please write us at <http://www.motorola.com> or at:

In the USA:

Motorola, Inc.

600 North U.S. Highway 45

Libertyville, IL 60048

In Canada:

Motorola Canada Limited

5875 Whittle Road

Mississauga, ON L4Z 2H4

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

PRELIMINARY

Index

A

accessories

 optional 11, 33, 104, 126,
 151, 155

 standard 19

accessory connector port 1

Add Digits feature 80

alert

 creating 142–147

 defined 140

 indicators 29, 140

 reminders 147

 setting in external display
 32

 type, selecting 141

alert profile

 customizing 141

 defined 140

 setting 140–141

alert setting indicator

 defined 29, 140

 illustration 27

animation 75

antenna 23

application, locking 73

appointments. *See* datebook

Attach Number feature 42,
 80

automatic redial

 turning on/off 75

 using 35–36

B

backlight 75

barring calls 163

battery

 car kit charger time 154

 charging 22

 extending battery life 30,
 33–34, 75, 171

 installing 21

 level indicator 27, 28

 meter 70

blackjack 136–137

block cursor, defined 52

browse text mode 53

browser alerts 66

browser. *See* micro-browser

C

calculator 132–134

calendar. *See* datebook

call

 adding digits after phone
 number 80

 alert profile, setting
 140–141

- call (continued)
 - alert type, selecting 141
 - alert, creating 142–147
 - alert, setting in external display 32
 - answer options 72
 - answering 24–25
 - barring 163
 - call waiting 44–45
 - calling card 42
 - canceling 38
 - cost setup 71
 - costs 84–85
 - credit limit 71
 - deleting 78–80
 - dialed calls list 43, 78–80
 - dialing 23–24
 - dialing a recent call 78–80
 - emergency number 37–38
 - ending 24
 - hold 48
 - ignoring 38
 - in-call timer 70–71
 - international access code, dialing 41
 - placing 23–24
 - prefix digits, inserting 42
 - privacy 36
 - received calls list 43, 78–80
 - receiving 24–25
- call (continued)
 - recent calls 78–80
 - secure connection 36
 - sending 23–24
 - speakerphone, activating 48
 - storing 78–80
 - talk then fax 159
 - terminating 38
 - timing 82
 - transferring 46–47
 - unanswered call 32–33, 37
 - voice dial 43
- call barring 163
- call cost information 84–85
- Call Failed** message 35
- call forwarding
 - defined 148
 - setting from external display 32
 - status, checking 150
 - using 148–149
- call timers
 - described 82
 - resetting 83
 - viewing 83
- call waiting
 - activating/deactivating 72
 - using 44–45

- caller ID
 - incoming calls 36
 - outgoing calls 42, 71, 80
 - calling card call 42
 - calling line identification. *See* caller ID
 - car kit
 - automatic answer 152
 - automatic hands-free 152
 - charger time 154
 - power-off delay 153
 - clock
 - defined 28
 - illustration 27
 - codes. *See* passwords
 - computer
 - connecting to phone 155–157
 - synchronizing data 96, 155
 - conference call 45
 - contrast, display 76
 - cost trackers
 - described 84–85
 - resetting 85
 - viewing 85
 - credit available 69, 84
 - credit information 69, 84
 - currency converter 134
 - cursor 52
 - customer service, calling 65
 - customizing the menu 150
- ## D
- data call
 - connecting to external device 155–157
 - receiving 158–159
 - sending 157–158
 - date, setting 74
 - datebook
 - adding an event 100
 - alarm 100
 - calendar 98
 - changing event information 101
 - copying an event 102
 - day view 99
 - deleting an event 103
 - event view 99
 - reminders 100, 147
 - week view 98
 - Datebook Menu** 98, 99
 - default passwords 160
 - deleting a call 78–80
 - diald calls list 43, 78–80
 - dialing a number 23–24
 - Dialing Menu** 159
 - display
 - animation 75
 - backlight 75

display (continued)
 contrast 76
 described 26–29
 greeting 74
 idle display 26
 illustration 27
 language 76
 zoom setting 29, 75
drafts folder 67
DTMF tones 48, 76, 79, 80,
 171

E

earpiece
 illustration 1
 volume, adjusting 30
emergency number 37–38
end key
 functions 1, 24
 menu functions 49
ending a call 24
Enter Unlock Code message
 161, 163
Entry Method menu 58
event alert 141
exchange rate, calculating
 134
external device
 connecting to phone
 155–157
 synchronizing data 96, 155

external display 31–33

F

factory settings, resetting 76
fax call
 connecting to external
 device 155–157
 receiving 72, 158–159
 sending 72, 157–158
 talk then fax call 159
fixed dial
 activating/deactivating 73
 defined 64–65
 dialing numbers 43, 64–65
 editing an entry 64–65, 91
 storing an entry 87–89
flashing cursor, defined 52
flip
 external display and 31
 open to answer call 72
 turning the phone on 22
FM Stereo Radio Headset 66,
 104–106, 126
forwarding calls 148

G

games 135–139
GPRS indicator
 defined 28
 displayed 130
 illustration 27

GPRS, defined 130
greeting, display 74

H

hands-free mode
 automatic answer 152
 automatic call routing 152
 charger time 154
 defined 151
 external display and 33
 power-off delay 153
 speakerphone, activating 48

headset
 automatic answer 152
 FM Stereo Radio Headset 66, 104–106, 126
 use with external display 33
headset jack 1
Hide ID feature 42, 80
hold a call 48

I

idle display, defined 26
ignoring a call 38
in use indicator
 defined 27
 illustration 27
inbox, text message 109–110
in-call timer 70–71

incoming call
 canceling 38
 ignoring 38
 terminating 38

Incoming Call message 36

indicators
 alert setting 27, 29, 140
 battery level 27, 28
 GPRS 27, 28, 130
 in use 27
 menu 26, 27, 28
 message waiting 27, 28
 missed call 37
 ring alert 29, 140
 roam 27
 signal strength 27
 silent alert 29, 140
 vibrate alert 29, 140
 voice message waiting 27, 28
 voice name 86

international access code 41

iTAP software
 activating 58
 capitalization 61
 deleting text 62
 entering numbers 62
 entering words 59–61
 punctuation 61

K

key

- end 1, 24, 49
- left soft key 1, 49, 151
- menu 1, 25, 49
- power 1, 22
- right soft key 1, 49, 151
- scroll 1, 49
- send 1, 24, 25, 78
- smart 1, 31
- voice 1, 90, 124
- volume control 1, 30–31, 49

keypad

- answering calls 72
- volume, setting 141

L

language, setting 76

Last Calls Menu

- opening 79
- options 79–80

left soft key

- customizing 151
- functions 1, 49

Line Not Secure message 36

lock

- applications 73
- phone 162–163
- SIM card 164
- voice notes 128

lock application feature 73

loud ring alert 29, 140

M

making a call 23–24

master clear 76

master reset 76

menu

customizing 150

Datebook Menu 98, 99

Dialing Menu 159

entering text 51–52, 53–62

Entry Method menu 58

features 63–77

language, setting 76

Last Calls Menu 79–80

lists 50–51

locking applications 73

My Tones Menu 145, 147

navigating 10, 49–50

Phonebook Menu 86

Quick Note Menu 116–117

rearranging features 150

scroll feature 75

Text Msg Menu 112–113

using features 10, 50–52

Voice Notes Menu 125, 126, 127

- menu indicator
 - defined 26, 28
 - illustration 27
 - menu key 1, 25, 49
 - message
 - browser alert 66
 - deleting 111–113
 - dialing number from 40–41
 - drafts folder 67
 - inbox setup 109–110
 - locking 111–113
 - outbox 67, 119
 - quick note 116–119
 - reading 111–113
 - receiving 111
 - reminders, text message 111, 147
 - reminders, voicemail 107, 147
 - sending 42, 113–116
 - status 119
 - voicemail 107–108
 - message waiting indicator
 - defined 28
 - illustration 27
 - micro-browser
 - browser alerts 66
 - calling a phone number 131
 - defined 130
 - micro-browser (continued)
 - functions 131
 - go back to previous page 131
 - starting 130–131
 - microphone 1
 - mindblaster 137–138
 - missed call indicator 37
 - missed call, dialing 43
 - Missed Calls** message 32, 37
 - my telephone number 25, 48, 69
 - my tones 142–147
 - My Tones Menu** 145, 147
- ## N
- 'n' character 42
 - network settings 77
 - notepad
 - defined 38
 - entering digits 38
 - retrieving digits 81
 - number, viewing your own 25, 48, 69
 - numeric text mode 53

O

- 1-touch dial
 - defined 39
 - setting preference 97
 - using 39–40
 - voicemail number 39–40
- optional accessory, defined 11
- optional feature, defined 11
- outbox 67, 119

P

- paddleball 139
- passwords
 - changing 160
 - default 160
 - if you forget a password 161
- pause character 42
- phone
 - accessories, optional 11
 - accessories, standard 19
 - active phone line, changing 69
 - answer options 72
 - connecting to external device 155–157
 - credit available 69, 84
 - credit information 69
 - credit limit 71
 - date, setting 74

- phone (continued)
 - erase user-entered information 76
 - feature specifications 70
 - flip 22
 - keypad, answering calls with 72
 - language, setting 76
 - locking 162–163
 - network settings 77
 - 1-touch dial 39–40
 - passwords 160, 161
 - reset all options 76
 - secure connection 36
 - security code 161
 - specifications 70
 - speed dial, using 39
 - startup greeting 74
 - time, setting 74
 - turning on/off 22
 - unlock code 161
 - unlocking 23, 162–163
 - voice dial 43
- phone number
 - adding digits after 80
 - attaching to prefix digits 42
 - attaching two numbers 80
 - international access code, dialing 41
 - redialing 35

phone number (continued)
 sending text message to 42
 storing in phonebook
 87–89
 viewing your own 25, 48,
 69
 voice dial 43

phonebook
 attaching two numbers 80
 capacity, checking 95
 copying entries 92–94
 deleting an entry 91–92
 dialing a number 90–91
 editing an entry 91
 entry name 86
 fields 86
 number type indicator 86
 1-touch dial 39–40
 phone number 86
 prefix digits, inserting 42
 sorting entries 96–97
 speed dial number 39, 86,
 88
 speed dial, using 39
 storing an entry 87–89
 synchronizing entries 96,
 155
 voice name entry 89–90
 voice name indicator 86

Phonebook Menu 86

PIN code
 activating/deactivating 164
 defined 164
 protecting the SIM card 164
 unlocking 164–165

PIN2 code 65
power key 1, 22
predictive text entry
 activating 58
 capitalization 61
 deleting text 62
 entering numbers 62
 entering words 59–61
 punctuation 61
privacy, call 36
profile
 customizing 141
 defined 140
 setting 140–141
PUK code 164

Q

quick dial
 setting number 74
 using 65
quick note 116–119
Quick Note Menu 116–117

R

radio 104–106

- received calls list 43, 78–80
- receiving a call 24–25
- recent calls 78–80
- redial
 - automatic redial 35–36
 - busy number 35
- reminders
 - datebook 100
 - setting 147
 - text message 111, 147
 - voicemail message 107, 147
- right soft key
 - customizing 151
 - functions 1, 49
- ring alert
 - creating 142–147
 - indicators 29, 140
 - setting 140–141
 - setting in external display 32
 - type, selecting 141
- ring and vibrate alert
 - indicator 29, 140
- ringer
 - setting 140–141
 - setting in external display 32
 - volume, adjusting 30, 141

- roam indicator
 - defined 27
 - illustration 27

S

- scroll feature 75
- scroll key 1, 49
- secure connection 36
- security code 161
- send key 1, 24, 25, 78
- sending a call 23–24
- service dial
 - defined 64
 - dialing numbers 43
- short message service. *See* text message
- shortcuts
 - creating 121–122
 - standard 120
 - using 123
- Show ID** feature 42, 80
- signal strength indicator
 - defined 27
 - illustration 27
- silent alert indicator 29, 140
- SIM applications 67
- SIM Blocked** message 23, 164

- SIM card
 - applications 67
 - defined 19
 - installing 19–20
 - PIN code entry 23
 - precautions 19
 - protecting 164
 - service phone numbers 64
 - SIM Blocked** message 23, 164
 - SIM Disabled** message 165
 - unblocking 164–165
 - unlocking 23
 - SIM Disabled** message 165
 - SIM PIN code
 - activating/deactivating 164
 - protecting the SIM card 164
 - unblocking 164–165
 - SIM PIN2 code 65
 - smart key
 - customizing 151
 - defined 31
 - functions 31
 - illustration 1
 - SMS. *See* text message
 - soft keys
 - customizing 151
 - functions 49
 - illustration 1
 - soft ring alert 29, 140
 - speakerphone 48
 - speed dial
 - changing number 88
 - number, defined 39
 - sorting phonebook entries by 96
 - using 39
 - standby time
 - defined 30
 - increasing 34
 - status light 1, 29–30, 75
 - storing a call 78–80
 - symbol text mode 57–58
 - symbols, entering 57–58
 - synchronizing data 96, 155
- ## T
- talk and fax call 72
 - talk then fax call 159
 - tap method text entry 54–56
 - telephone number, viewing
 - your own 25, 48, 69
 - text
 - block cursor 52
 - browse mode 53
 - character chart 56
 - entering from keypad 53–62
 - entry mode, changing 53
 - flashing cursor 52

text (continued)
 iTap software predictive text
 entry 58–62
 numeric mode 53
 symbol chart 58
 symbol mode 57–58
 tap method 54–56
text message
 deleting 111–113
 dialing number from 40–41
 inbox setup 109–110
 locking 111–113
 quick note 116–119
 reading 111–113
 receiving 111
 reminders 111, 147
 sending 42, 113–116
 status 119
text mode, changing 53
Text Msg Menu
 opening 112
 options 112–113
time, setting 74
timers
 described 82
 resetting 83
 viewing 83
transfer a call 46–47
travel charger, using 22
TrueSync 96, 155

U

unblocking the SIM card
 164–165
unlock
 phone 162–163
unlock code 161

V

vibrate alert
 indicator 29, 140
 setting 140–141
 setting in external display
 32
 type, selecting 141
voice dial
 dialing a number 43, 91
 recording voice name
 89–90
voice key
 dialing a number 43
 functions 1
 recording a voice name 90
 recording a voice note 124
voice message waiting
 indicator 27, 28
voice name
 defined 89
 phonebook indicator 86
 recording 89–90

voice note
 defined 124
 deleting 129
 locking and unlocking 128
 playback controls 127
 playback screen 126
 playing 126–127
 recording 124
 viewing voice notes list 125

Voice Notes Menu 125, 126,
 127

voice shortcut
 creating 121–122
 defined 121
 using 123

voicemail
 dialing with 1-touch dial
 39–40
 number, storing 107
 receiving 107–108

volume
 earpiece 30
 keypad 141
 ringer 30, 141
volume keys 1, 30–31, 49

W

wait character 42
warranty 185–192

Web pages
 functions 131
 viewing 130–131

Z

zoom setting 29, 75



MOTOROLA

Wireless Phone Safety Tips

"Safety is your most important call!"

Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- 2 When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.



- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.*



- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

For more information,
please call
1-888-901-SAFE
or visit the
CTIA Web site at
www.wow-com.comTM

