



©Disney

Visit DisneyFairies.com

©2010 CREATIVE DESIGNS INTERNATIONAL, LTD.,
TREVOSE, PA 19053

MADE IN CHINA

In the interest of better quality and value, we are constantly improving and updating our products. Consequently, pictures on this package may sometimes vary from the product enclosed.

Please retain this address for future reference.

Requires 2 x "9V" batteries (not included).

- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the toy before being charged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Different types of batteries or new and used batteries are not to be mixed.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the toy.
 - The supply terminals are not to be short-circuited.
- To replace batteries, unscrew cover using a Phillips screwdriver.

Note polarity of batteries, remove and replace with new batteries.

Please keep this packaging since it contains important information.



Tinker Bell AND THE GREAT FAIRY RESCUE

FCC ID II621007

Press
Button
To Talk!

Use Morse
Code To
Send Secret
Messages!

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For best performance, recommend to play outdoor in the distance of 50-100 feet.

Caution: Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Functions:

TO SPEAK:

In (ON) position, press and hold the (PUSH TO TALK) button. Then speak into Walkie Talkie to transmit voice.

MORSE CODE:

In (ON) position, press and hold (PUSH TO TALK) button.

Then press (MORSE CODE) button to transmit message.

ON/OFF/VOLUME:

Turn counter clockwise for (ON) position.

Turn clockwise to turn (OFF).

In (ON) position, adjust the volume level by turning up.

Play Walkie Talkies




On/Off/
Volume
Button

Explore
Tink's World
DisneyFairies.com

BATTERY REPLACEMENT

Replacement of batteries must be done by an adult.

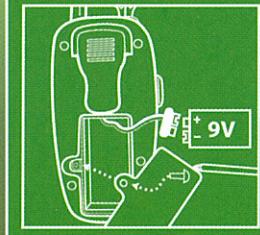

Do not dispose of batteries in fire, batteries may explode or leak.

Questions or comments (Please Call)

1-888-TOYS-CDI

Or Write: Creative Designs International, Ltd.

2540 Metropolitan Drive, Trevose, PA 19053

VISIT US ON THE WEB AT www.cditoy.com

21007



0 45672 21007 4