

# #27903 INSTRUCTION MANUAL

This toy requires 8 x "AAA" (LR03) batteries (not included).

To replace batteries, unscrew cover using a Phillips screwdriver.

Note polarity of batteries, remove and replace with new batteries.

Replacement of batteries must be done by adult.

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.



©Disney/Pixar

Visit [www.disney.com/cars](http://www.disney.com/cars)

© 2011 Creative Designs International, Ltd.,  
Trevose, PA 19053.


In the interest of better quality and value, we are constantly improving  
and updating our products. Consequently, pictures on this package  
may sometimes vary from the product enclosed.

Warning! Not suitable for children under 36 months.

Choking hazard.

MADE IN CHINA

FCC ID: 1I627903

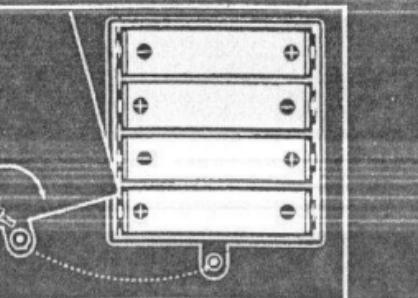

Battery replacement  
Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

For best performance, recommend to play outdoor in the  
distance of 50-100 feet.

Caution: Changes or modification not expressly approved by the  
party responsible for compliance could void the user's authority  
to operate the equipment.

Functions:

TO SPEAK:

In (ON) position, press and hold the (PUSH TO TALK) button.  
Then speak into Walkie Talkie to transmit voice.

SPY BUG CODE:


In (ON) position, press and hold (PUSH TO TALK) button.  
Then press (MORSE CODE) button to transmit message.

ON/OFF/VOLUME:

Turn counter clockwise for (ON) position.

Turn clockwise to turn (OFF).

In (ON) position, adjust the volume level by turning up.

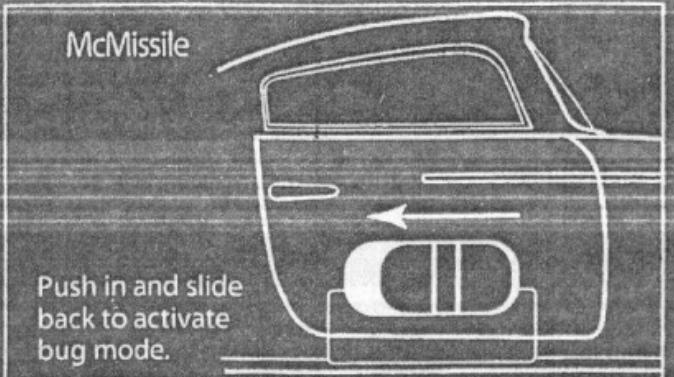

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Questions or comments (Please Call)  
**1-888-TOYS-CDI**

Or Write: Creative Designs International, Ltd.

2540 Metropolitan Drive, Trevose, PA 19053

VISIT US ON THE WEB AT [www.cditoys.com](http://www.cditoys.com)

27903



0 45672 27903 3