


5+

# Walkie Talkies™

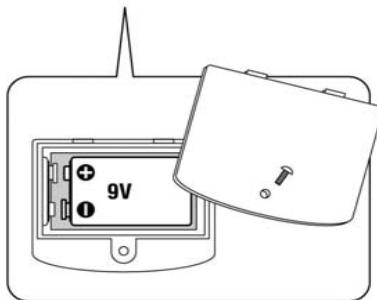

## BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER.  
EACH UNIT REQUIRES 1-9V BATTERY (NOT INCLUDED).  
REPLACE BATTERY COMPARTMENT COVER AND SCREW.  
ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.  
DO NOT MIX OLD AND NEW BATTERIES.  
DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.  
NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.  
BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.  
EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.  
THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.  
RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.  
RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.  
ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.  
DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

## TO OPERATE

- Switch the **ON/OFF SWITCH** control **ON** by sliding upwards.
- To transmit, press the **PUSH TO TALK** button with the speaker about 4" from your mouth.
- To receive a message, release the **PUSH TO TALK** Button.
- After you have finished using the walkie talkie, switch the **ON/OFF SWITCH** control **OFF** by sliding downward.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE DEVICE.

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

## CAUTION:

- Operation performance may be affected by surrounding structures and equipment. For best results, use the walkie talkies in an open area.
- If your walkie talkies are not operating properly, install a new battery. The manufacturer recommends alkaline batteries for maximum performance.
- Always turn the walkie talkies "OFF" when you are finished using them.
- To prevent damage, do not expose them to rain or moisture.
- Do not touch the antenna with your fingers or hand, it may cause weak transmission.
- Your walkie talkies have been set and fully adjusted by the manufacturer prior to shipping. Do not touch internal parts other than replacing the battery.
- Modifications not authorized by the manufacturer should not be made.