

PROFESSIONAL FM WIRELESS MIKE™ WITH TRANSMITTER

AGES 5 & UP

INSTRUCTIONS FOR FM MICROPHONE

TO GET THE MOST USE AND ENJOYMENT OUT OF YOUR FM MICROPHONE. PLEASE READ AND UNDERSTAND THE INSTRUCTIONS BEFORE USING.

BATTERY INSTALLATION

1. Remove the screw and slide the cover downward from the microphone handle and lift the cover off.
2. Install two new batteries (AAA size) in accordance with the instructions located in the battery compartment. Replace the battery cover and screw the cover back on.
3. The microphone can be tested for operation by moving the ON/OFF button to the "ON" position and the red light should light up.

NOTE: When using the FM Microphone, hold the Microphone (2 inches) 5.08cm from your mouth and speak in a normal voice into the top of the microphone cover.


TO OPERATE WITH YOUR FM RADIO

1. Use any good FM radio. Turn the radio ON and face the radio towards you. Adjust the radio volume to a LOW LEVEL.
2. Place the Microphone near the radio and turn it on. Hold the Microphone cover (2 inches) 5.08cm from your mouth and speak in a normal voice while tuning your FM radio back and forth across the 100 mark on the tuning dial.
3. After the FM radio is tuned to the Microphone, move about (5 feet) 152.4cm away from the radio. Face with the antenna towards the radio and speak into the Microphone while someone carefully tunes the radio to the best reception. When using the Microphone at a distance of (10 feet) 304.8cm or more from the radio, it may be necessary to increase the radio volume and carefully tune the radio again for best reception.
4. For best results, stand (5 feet) 152.4cm to (10 feet) 304.8cm away from the radio with the antenna pointed towards the radio.

IMPORTANT NOTES:

- This Microphone is for use with FM radios only and will not work on the AM band.
- The tuning range of your FM Microphone is 100 on the FM dial.
- When using Microphone, keep the antenna facing toward the receiver and the receiver facing the Microphone.
- When using the Microphone, hold the Microphone (2 inches) 5.08cm from your mouth and speak in a normal voice.
- The reception of the Microphone may be affected by the environment i.e. metal structure or the movement of people between the Microphone and the radio. The reception is also affected by the condition of the Microphone and/or radio batteries.
- If the Microphone is not to be used for an extended period, remove the batteries from the set.
- For best results, the manufacturer recommends the use of alkaline batteries.
- To prevent damage, do not expose the set to rain or moisture.
- Modifications not authorized by the manufacturer may void users authority this device.

THIS MICROPHONE HAS BEEN FACTORY TESTED. PLEASE READ AND FOLLOW THE INSTRUCTIONS FOR BEST PERFORMANCE AND ENJOYMENT.

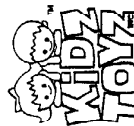

because kidz like toyz

KIDZ TOYZ, INC. WHITE PLAINS, N.Y. 10605

For Product Questions,
Call 1-877-KIDZTOY (877-543-9869)
Ask for CUSTOMER SERVICE
Only in the U.S. and CANADA



Kawasaki

Kawasaki Motors Corp., U.S.A.

OFFICIAL • LICENSED • PRODUCT

87-11504-0628

ADDITIONAL INFORMATION: THIS PRODUCT IS A TRADEMARK OF KAWASAKI MOTOR CORP., U.S.A. CONSUMER AFFAIRS SHOULD BE REFERRED TO KIDZ TOYZ, INC. 200 WINDYBROOK AVENUE WHITE PLAINS, N.Y. 10605

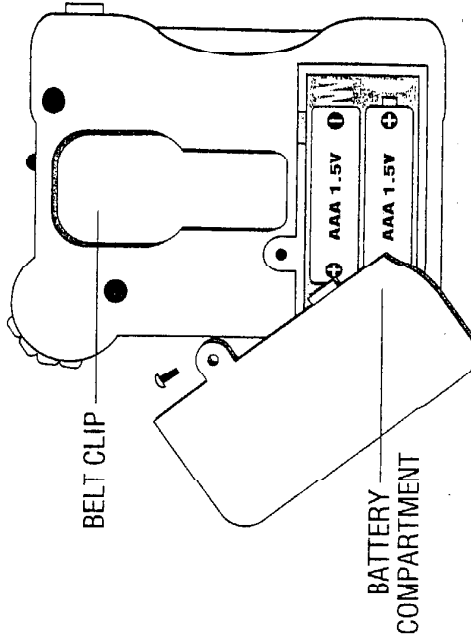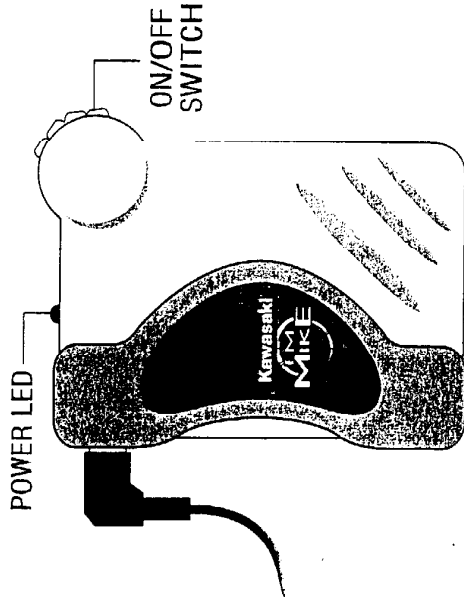

BATTERY REPLACEMENT

REMOVE THE SCREW AND SLIDE THE BATTERY COMPARTMENT COVER. THIS UNIT REQUIRES 2 "AAA" BATTERIES (NOT INCLUDED). ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME. REPLACE THE BATTERY COVER AND SCREW THE COVER BACK ON. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

Please visit us on the web at: www.kidztoyz.com

MADE IN CHINA
ITEM NO. 88042