


DAX800XR

Antenna Location

Front View (Front panel)




Body (remove the monitor from body)

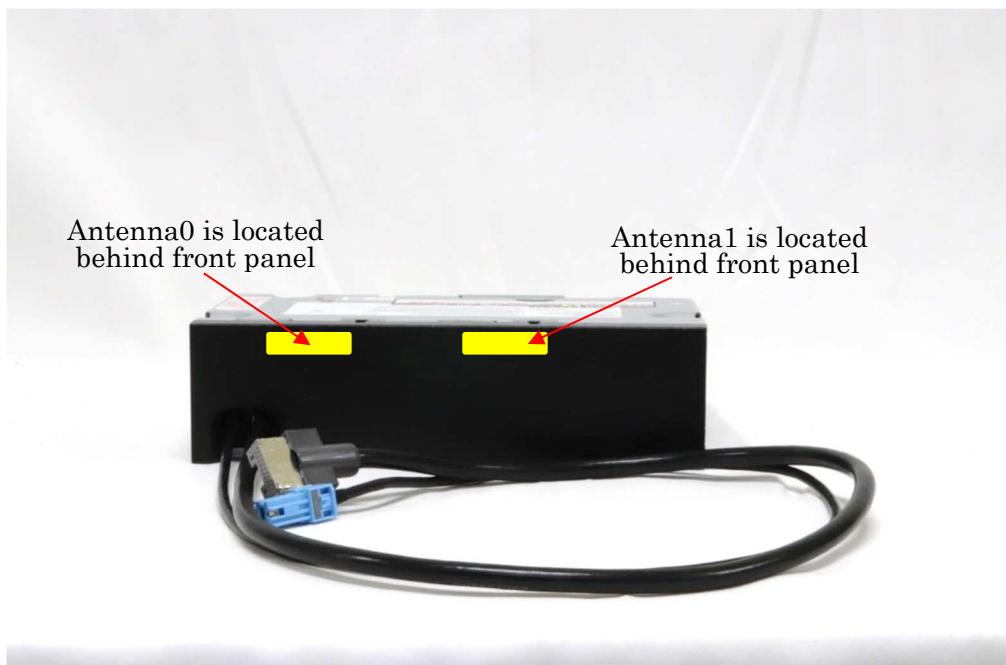


DAX800XR

PCB (A side)

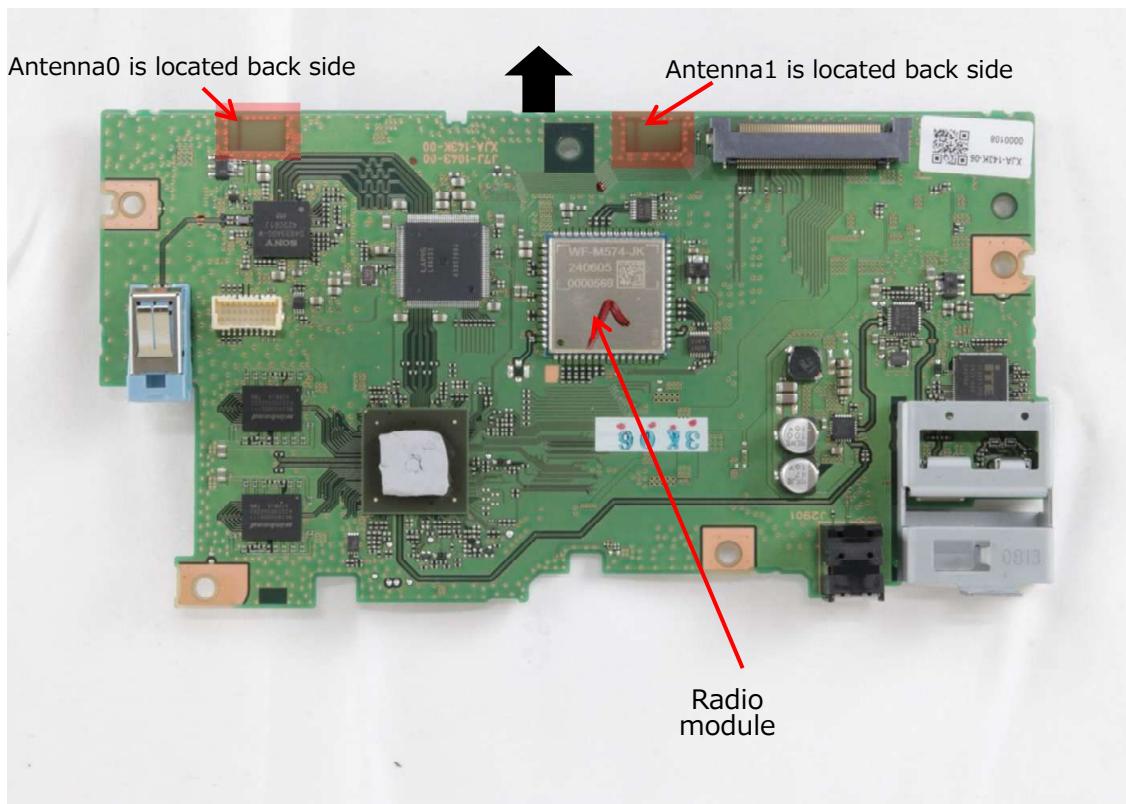

PCB (B side)

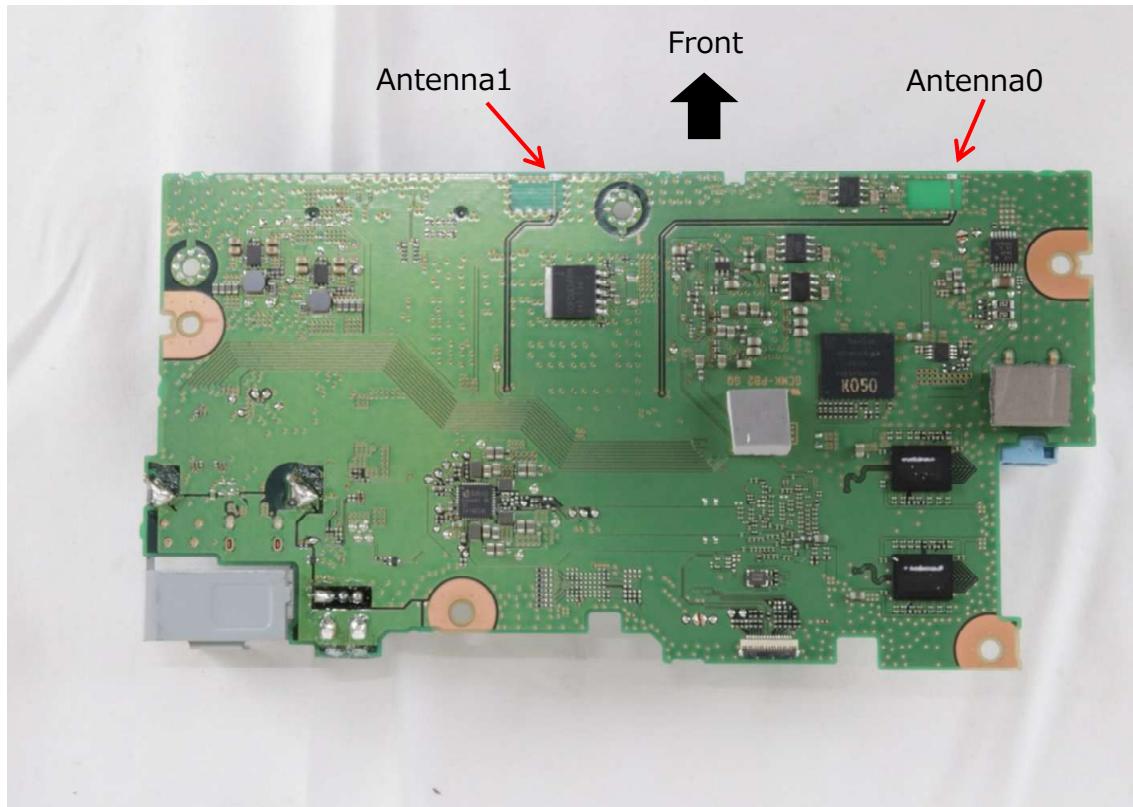

Setup Photo : DAX800XR

Antenna Radiated pattern

