

GARMIN®



 
Quick Start Manual

Introduction

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Device Overview

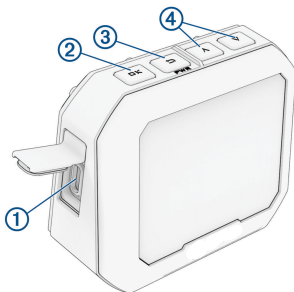

- ① **USB-C® port (under weather cap):**
Connect the USB-C cable to charge the device or download software updates using your computer.
- ② **OK:** Press to select menu options.
- ③ **↻ (PWR):** Press to turn the device on. Press to return to the previous screen.

 
Hold for two seconds to turn off the device.

- ④ **^ v:** Press to scroll through the menu.

Installing the Tripod

The tripod mount uses $\frac{1}{4}$ -20 thread size and is compatible with most tripods.

Screw the tripod ① into the bottom.

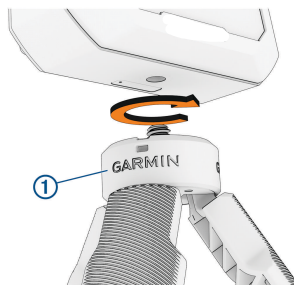

Charging the Device

WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage

caused by battery exposure to extreme heat, store the device out of direct sunlight.

NOTICE

To prevent corrosion, thoroughly dry the USB port, the weather cap, and the surrounding area before charging or connecting to a computer.

The device is powered by a built-in lithium-ion battery that you can charge using a standard AC adapter or a USB port on your computer.

NOTE: The device will not charge when outside the approved temperature range (page 5).

- 1 Pull up the weather cap from the USB-C port.
- 2 Plug the small end of the USB cable into the USB-C port on the device.
- 3 Plug the large end of the USB cable into an external power source, such as an AC adapter or a USB port on your computer.
- 4 Charge the device completely.
It can take up to 4 hours to fully charge the battery.

Turning the Device On or Off

- To turn on the device, press **PWR**.
- To turn off the device, hold **PWR** for 2 seconds.

Alignment Considerations

For best results, you should always follow these alignment considerations.

- Always observe the position diagram that appears before each session.
- Always ensure the large, flat side is pointed at the target and the screen is facing you.
- Always ensure an unobstructed view of the target.
- Always ensure the projectile can travel at least 20 meters or 20 yards in front.

Starting a Session

NOTICE

Always ensure that you position so that it is not directly exposed to ejecting cartridge cases, muzzle blast, or other hazards that may damage the product.

 
- 1 Select **NEW SESSION**.
- 2 Select a mode.
- 3 Follow the on-screen instructions to enter projectile information and position for the selected mode.

- 4 Press **OK**.

Shot Data

Each time you take a shot during a session, records the shot automatically.

TIP: You can press OK, and select DATA FIELDS to change the information displayed in each data field.

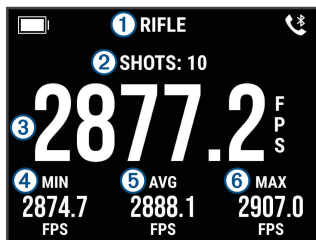

① Mode

② Shots recorded

③	Velocity of the most recent shot
④	Minimum velocity recorded during the session (DATA FIELD 1)
⑤	Average velocity recorded during the session (DATA FIELD 2)
⑥	Maximum velocity recorded during the session (DATA FIELD 3)

Ending a Session

- 1 During a session, press ↩.
- 2 Select **END SESSION**.

Core App

You can download the Core app on your smartphone to view detailed statistics and shot analyses that are recorded.



You can scan the QR code, or go to **garmin.com** for more information.

Getting the Owner's Manual

The owner's manual includes instructions for using device features and accessing regulatory information.

Go to **garmin.com/manuals**.

Getting More Information

You can find more information about this product on the Garmin® website.

- Go to **support.garmin.com** for additional manuals, articles, and software updates.
- Go to **buy.garmin.com**, or contact your Garmin dealer for information about optional accessories and replacement parts.

Specifications

Wireless frequency and transmit power	2.4 GHz @ 4.04 dBm maximum 24 GHz @ 18.68 dBm maximum
Operating temperature range	From -10° to 55°C (from 14° to 131°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)

support.garmin.com

© 2023 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Express™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

USB-C® is a registered trademark of USB Implementers Forum. Other trademarks and trade names are those of their respective owners.



Printed in Taiwan
June 2023
I90-02977-01_0A

