


# Operation

## Preference page

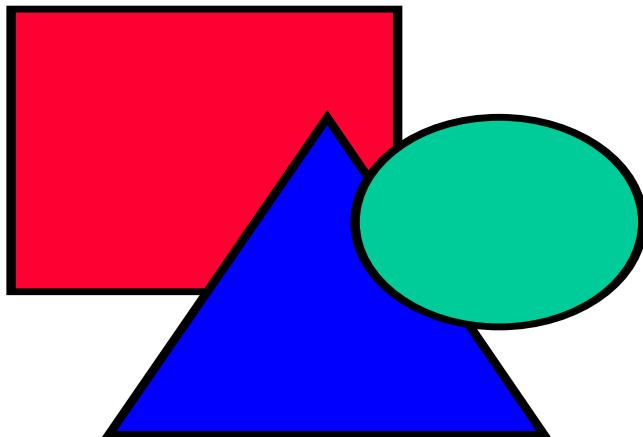


## Auto Scanning Setting

Note: If your scanner does not have one touch button feature, you will not be able to use this function.

---

Auto Scanning is a fully automatic function, which enables you to perform a complete scan at your fingertips. By checking the "Enable auto scanning" option in the Auto Scanning Setting area, the auto scanning function will be enabled. Please note that the default settings for Auto Scanning Setting appears as follows.

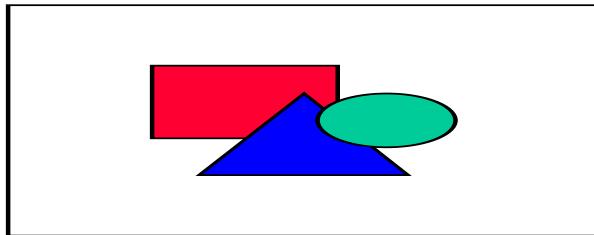

### **The steps for auto scanning are:**

1. Open the TWAIN source window.
2. Locate the Auto Scan button which is situated in the front panel of the scanner
3. Press the Auto Scan button. The scanner will start the scanning process.
4. The scanner will perform the auto area detect function if the "Prescan Image Area Auto Detection" option is checked to define the actual area of your scanned image. Later, this defined area will be used for the final scan.

### **The auto scanning options are:**

- If neither of the "Prescan" or "Scan and send to destination" are checked, no action will be taken.
- If only the "Prescan" is checked, the scanned image will be displayed in the Preview Window.
- If only the "Scan and send to destination" is checked, no image will be displayed in the Preview Window, and the scanned image will be sent directly to the designated destination.
- If both the "Prescan" and "Scan and send to destination" are checked, the scanned image will be displayed in the Preview Window and sent to the designated destination after completion.

## **Prescan Image Area Auto Detection**

---

If the Prescan Image Area Auto Detection is checked, the scanner will automatically detect the area of the image scanned and define the actual area of your scanned image in the Preview Window. This defined area will be used for the final scan. If the Prescan Image Area Auto Detection is not checked, the whole Preview Window area will be defined as the scan area.

## **Calibration**

---

The preview scanned image has uneven vertical lines or incorrect color registration. Use this function to rectify the value and acquire better screen display.

## Color/Gray Depth


---

Some application programs are not capable of processing 36-bit color and 12-bit gray image data. If you select 36/12 bits option, your scanned image may be abnormal or your system may be crashed. Please check whether your image processing program supports 36/12 bits image data. We would like to suggest that you check the 24/8 bits option. For more information about image data, refer to the user's manual of your application program.

## Default Destination Setting

---

The Default Destination Setting area lets you set up your default printer and fax. You can select Printer and Fax in this area. However, please be aware that at least one printer or fax driver must be installed on your computer to perform this function.

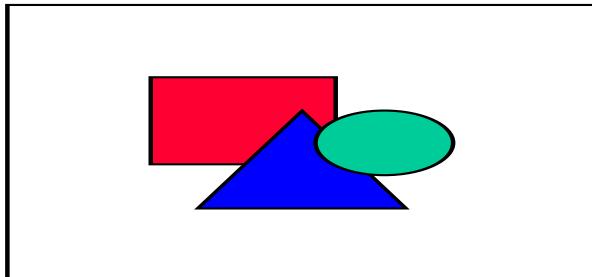

### To setup default printer and fax:

Press  or  to enter the setting.

This setting will be enabled when you designate the Printer or Fax as your scan destination.