

**WALKIE TALKIE FEATURES:**

- 2 x 9 Volt Battery operated
- Power On/OFF switch
- Push to talk, release to listen
- Flexible Antenna for best transmission and reception
- Morse Code signal key or call key

HOW TO OPERATE:

1. To put batteries into one pair of walkie talkie, open battery compartment (fig.) and snap in a 9 Volt battery to each unit. Replace the cover firmly.
2. To operate the walkie talkie, switch the power ON/OFF (fig.) to "ON".
3. Press the "Push-To-Talk" button (fig.) for transmitting and speak in a normal voice level into the microphone (fig.).
4. Release the "Push-To-Talk" button (fig.) for receiving, then just listen from the speaker (fig. 2).
5. Morse Code signal key or call key (fig.) is used to send Morse Code signals or to send a call signal. To send Morse Code signals, push the "Push-To-Talk" button (fig.), press the Morse Code signal key (fig.) and quickly release to send a dot (.), or hold key longer to send a dash (-).
6. To turn off the power, switch the power ON/OFF (fig.) to "OFF".

Caution:

1. Your transceiver set have been fully adjusted prior to shipment. Be sure not to touch the internal components other than replacing the battery.
2. When the sound becomes weak, it is time to change the battery.
3. After use, always turn the ON/OFF switch to the "OFF" position.
4. Keep your set in a dry place.
5. Take out batteries when walkie talkies are not in use.
6. Replacement of batteries must be done by an adult or under adult supervision.
7. Recommended for children over 3 years of age.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such Modifications could void the user's authority to operate the equipment.