



億順電子玩具製造廠有限公司

YICK SHUN ELECTRONIC TOYS MANUFACTORY LIMITED

香港：新利工業中心33號復興大廈8樓 電話：8977393 圖文傳真：(852) 5588430

8/F., Fook Hing Industrial Bldg., 33 Lee Chung Street, Chai Wan, H.K. Tel: 8977393 Fax: (852) 5588430

廠址：中國廣東省東莞市長安鎮沙田工業區 電話/圖文傳真：86-769 531794

Changan Wusa Ind. Zone, Dongguan City, Guangdong Province, China. Tel./Fax: (86-769) 531794

5018 76101

FOR AGES 3 AND UP

WALKIE TALKIE FEATURES

- 2X9-Volt battery operated
- Power ON button
- Push-to-talk, release to listen
- Powerful signal (with transistors)
- Flexible antenna for best transmission & reception
- Signal keys
- Communication distance up to 100 meters approximately

HOW TO OPERATE

1. To put batteries into one pair of walkie talkie. Open Battery Compartment (Fig. 8) with a screw driver and snap in a 9 volt battery to each walkie talkie. Replace the cover firmly.
2. To operate the walkie talkie, push the Power ON button (Fig. 5). The Condenser Mic (Fig. 7) will spring out of the condenser mic holder and the LED Lamp On Indicator (Fig. 4) will light up to indicate that the walkie talkie is ready for use.
3. Press the "Push-to-talk" button (Fig. 3) for transmitting and speak in a normal voice level into the Condenser Mic (Fig. 7).
4. Release the "Push-to-talk" button (Fig. 3) for receiving, then just listen from the Speaker (Fig. 2).
5. Signal keys (Fig. 6) are used to send Morse code signals or to send a call signal. To send Morse code signals, push the "Push-to-talk" button (Fig. 3), press the Signal keys (Fig. 6) and quickly release to send a • (dot), or hold key longer to send a - (dash).
6. To turn off the power, fold back the condenser mic (Fig. 7) into the condenser mic holder and the power will automatically shut off.

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION:

1. Your transceiver set have been fully adjusted prior to shipment. Be sure not to touch the internal components other than replacing the battery.
2. When the sound becomes weak, it is time to change the battery.
3. After use, make sure that the power is shut off.
4. Keep your set in a dry place.
5. Take out batteries when walkie talkies are not in use.

TRANSCIVER

FIG. 1 FLEXIBLE ANTENNA

FIG. 2 SPEAKER

FIG. 3 "PUSH-TO-TALK" BUTTON

FIG. 4 LED LAMP ON INDICATOR

FIG. 6 SIGNAL KEYS

FIG. 7 CONDENSER MIC

FIG. 5 POWER ON BUTTON

• BATTERY INSTALLATION

FIG. 8 BATTERY

COMPARTMENT
9 Volt Battery
(Battery Not Included)

