

OPERATION MANUAL



ALPS

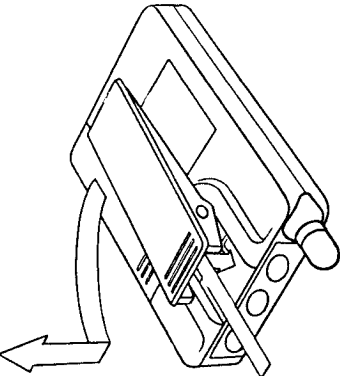


FIGURE 2

Low Battery Alarm

This function omits a constant alert tone when the battery voltage has dropped to a voltage deemed insufficient for reliable operation. A new alkaline battery should be inserted or the nickel-cadmium battery should be recharged.

2-Channel

This function allows a second channel frequency to be used. The channels are accessed by Channel Select Switch, located on the bottom of the pager. All standard and optional features are operable on both channels.

Fixed Alert

This function sets the alert tone volume at the maximum level, regardless of the Volume Control setting.

Alert Option

This option provides a "Silent Page" mode by using the side switch. In the Vibrate mode, the pager vibrates for about 8 seconds when a call is received, instead of emitting an alert tone and voice message. To receive the voice message portion of the call, slide the switch up to the Monitor position. To reinstate the alert function, slide the switch to the down position.

Features

Features are programmable. The specified listed features are only applicable if enabled through programming.

Automatic Reset


This function automatically resets the pager to the Vibrate mode after a preset time has elapsed from the last alert tone received. The manual reset can still be used to reset the pager.

Clip Removal

The clip can be removed in the following manner:

1. Press down on the stopper claw on the rear cover using a screwdriver, see Figure 2. Turn the clip counterclockwise until it is unlocked.
2. Turn the clip a full 90 degrees and lift the clip up and out.
3. For installation of a clip reverse the procedures of steps 1 & 2.

Note: When using a PP-A1 single unit charger with the a nicad-cadmium battery "ONLY" is to be used. Section 15.21 The intentional or unintentional changes or modifications not expressed approved by SCA could void the users authority to operate this equipment.

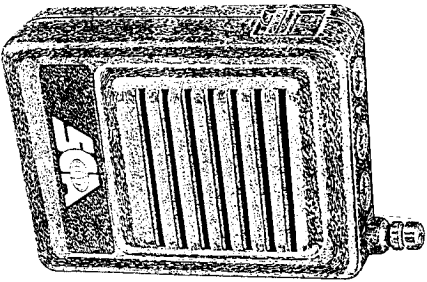

ALPS TONE & VOICE PAGER

Your Alps pager is a highly reliable, extremely compact synthesized receiver for tone and voice paging.

Your Alps pager is equipped with a built-in speaker and antenna and is shipped with a single standard "AA" nickel-cadmium battery.

Battery Installation

The pager can be operated with a single "AA" size battery, which can be either a dry type (alkaline) or rechargeable type (nickel-cadmium) battery.

1. Insure the pager is in the off position.
2. Slide the locking slide switch toward the center of the battery cover, as shown in Figure 1. Then slide the cover toward the bottom of the pager to remove. Insert the negative (-) end of the battery into the pager first, then press the positive (+) end down. The

ALPS TONE & VOICE PAGER OPERATION

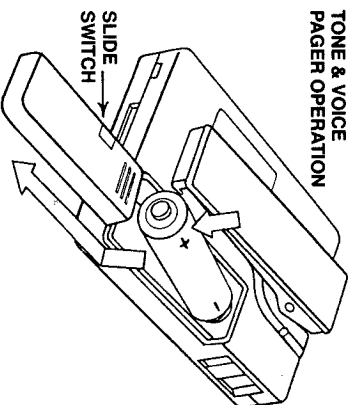


FIGURE 1

battery compartment is marked with negative and positive positions.

3. Replace the battery cover.

This Tone & Voice pager operated as a Selective ("SEL") signal receiver and Monitor ("M") receiver.

"SEL" MODE

1. While in squelch slide the Power ON/MUTE/OFF (N/M/OFF) switch to the ON (N) position to turn on the power for the pager.
2. Press the Volume control buttons (∇ Δ) to set the volume level to a desired level.
3. Press and release the Reset button. The pager is now in the standby mode.
4. When a call is received, the pager emits an alert tone ("N mode"), followed by a voice message. Operation for the ("M" mode) is to

keep the alert tone and visual indications, flashing call has been received.

5. When the message is finished button to reset the pager.
6. To turn the pager off, slide the OFF position.

"MON" mode

1. Follow the procedures to the pager on and adjust
2. The Monitor mode is active and holding the Power S seconds. After releasing pager will continually monitor on the channel.