 


1. FUNCTION OF THE BUTTONS

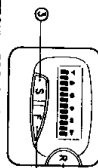

1. (READ BUTTON) : FOR READING MESSAGES AND SETTING CONDITIONS ON LCD.
2. (FUNCTION BUTTON) : FOR SELECTING MENU/CHANGING MESSAGE LOCKING MESSAGES AND SELECTING INDIVIDUAL MESSAGE CLEARING.
3. (SELECTION BUTTON) : FOR SELECTING FUNCTIONS, MOVING AND OPERATING LAMPS.

- 1 -

4. VIBRATION/SILENT/BEEP/MELODY 1 MELODY 2 SELECTION

1. IN THE CURRENT TIME/STARTING STAGE, PUSH [F] BUTTON ONE TIME. IF YOU PUSH [F] BUTTON ONE TIME, 'SILENT' WILL BE DISPLAYED AND VIBRATION WILL BE OPERATED FOR A FEW SECONDS. IF YOU PUSH [F] BUTTON, VIBRATION FUNCTION WILL BE SELECTED AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED.
2. IN THE FIG. 1, IF YOU PUSH [F] BUTTON TWO TIMES, 'BEEP' WILL BE DISPLAYED ON LCD AND YOU CAN HEAR BEEP SOUND. IF YOU PUSH [F] BUTTON, BEEP SOUND WILL BE SELECTED AS PAGING SOUND AND CURRENT TIME (STARTING STAGE) WILL BE DISPLAYED.
3. IN THE FIG. 1, IF YOU PUSH [F] BUTTON THREE TIMES, 'MELODY 1' WILL BE DISPLAYED AND YOU CAN HEAR MELODY. IF YOU PUSH [F] BUTTON, CURRENT TIME/STARTING STAGE WILL BE DISPLAYED AND 'MELODY 1' WILL BE SELECTED AS PAGING SOUND.
4. IN THE FIG. 1, IF YOU PUSH [F] BUTTON FOUR TIMES, 'MELODY 2' WILL BE DISPLAYED AND YOU CAN HEAR MELODY. IF YOU PUSH [F] BUTTON, 'MELODY 2' WILL BE SELECTED AS PAGING SOUND AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED.

 
- 5 -

6. MESSAGE CHECKING (LOCKING/ UNLOCKING/INDIVIDUAL CLEARING)

1. IN THE CURRENT TIME/STARTING STAGE, IF YOU PUSH [F] BUTTON ONE TIME, RECEIVED MESSAGE ADDRESS AND CALL TYPE OF THE MESSAGE WILL BE DISPLAYED.
2. IN THE FIG. 1, IF YOU PUSH [F] BUTTON TWO TIMES, RECEIVED MESSAGE WILL BE DISPLAYED CONTINUOUSLY AT THIS TIME. IF THE RECEIVED MESSAGES ARE OVER 15 DIGITS, [F] BUTTON WILL BE DISPLAYED AND THE MESSAGE WILL BE EXTENDED.
3. IN THE FIG. 2, IF YOU PUSH [F] BUTTON ONE TIME, MESSAGE WILL BE LOCKED AND SECONDS CONTINUOUSLY, MESSAGE WILL BE CLEARED AND THE NEXT MESSAGE WILL BE DISPLAYED.
4. IN THE FIG. 2, IF YOU PUSH [F] BUTTON OVER TWO SECONDS, MESSAGE WILL BE RELEASED AND AT THE SAME TIME, NORMAL MESSAGES WILL BE STORED. AT THIS TIME, IF YOU PUSH [F] BUTTON, THE NEXT MESSAGE WILL BE DISPLAYED.
5. IN THE FIG. 2, IF YOU PUSH [F] BUTTON, MESSAGE WILL BE CLEARED AND YOU CAN HEAR BEEP SOUND AND CURRENT TIME (STARTING STAGE) WILL BE DISPLAYED.

- 9 -


2. ICONS DESCRIPTION ON LCD

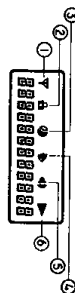

1. SERVICE AREA INDICATION (V)
2. RECEIVED MESSAGE(S) LOCKING INDICATION (A)
3. MORNING CALL INDICATION (M)
4. AUTOMATIC ON/OFF SELECTION INDICATION (P)
5. PAGING SOUND(MELODY) SELECTION INDICATION (B)
6. MESSAGE EXTENSION INDICATION (E)

- 2 -

 3. FUNCTION SELECTION AND DISPLAY IN SEQUENCE

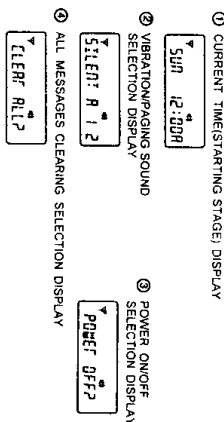

- 3 -

 
5. POWER ON/OFF SELECTION

1. IN THE CURRENT TIME/STARTING STAGE, PUSH [F] BUTTON TWO TIMES.
2. IF YOU PUSH [F] BUTTON ONE TIME, POWER TURNS OFF (AT THIS TIME, PAGER CAN'T RECEIVE MESSAGE AND TIME ONLY WILL BE DISPLAYED).
3. TO TURN POWER ON, PUSH [F] BUTTON IN THE FIG. 2 (POWER OFF) AND DISPLAY WILL BE RETURNED TO CURRENT TIME/STARTING STAGE.

- 7 -

7. ALL MESSAGES CLEARING (EXCEPTING THE LOCKED MESSAGE)

1. IN THE CURRENT TIME/STARTING STAGE, PUSH [F] BUTTON THREE TIMES.
2. IN THE FIG. 1, IF YOU PUSH [F] BUTTON ONE TIME, ALL RECEIVED MESSAGES WILL BE CLEARED AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED (EVEN AT THIS TIME, THE LOCKED MESSAGE WON'T BE CLEARED, USE LOCKING FUNCTION FOR NECESSARY MESSAGE PRIOR TO CLEARING).

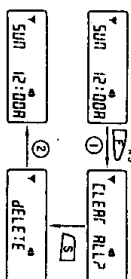

- 11 -

 
TIME AND A DAY OF THE WEEK SELECTION DISPLAY

1. TIME AND A DAY OF THE WEEK SELECTION DISPLAY
2. ALARM ON SELECTION DISPLAY
3. ALARM OFF SELECTION DISPLAY
4. ALARM POWER OFF SELECTION DISPLAY
5. ALARM ON SELECTION DISPLAY
6. ALARM OFF SELECTION DISPLAY
7. ALARM POWER OFF SELECTION DISPLAY

- 4 -

8. A DAY OF THE WEEK AND TIME ADJUSTMENT

1. PUSH [F] BUTTON FOUR TIMES IN CURRENT TIME/STARTING STAGE.
2. IF YOU PUSH [F] BUTTON ONE TIME IN THE FIG. 1, A DAY OF THE WEEK WILL BE RETURNED IN THE FIG. 2.
3. AFTER ADJUSTMENT, IF YOU PUSH [F] BUTTON, ADJUSTED TIME AND THE DAY OF THE WEEK WILL BE DISPLAYED.

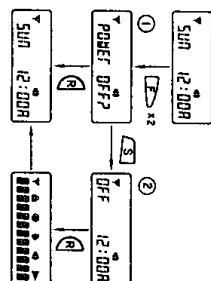


- 6 -

- 12 -

9. ALARM ON/OFF SELECTION

- IN CURRENT TIME (STARTING STAGE), PUSH **[ON/OFF]** BUTTON FIVE TIMES
 - IN THE FIG. 1, IF YOU PUSH **[ON/OFF]** BUTTON ONE TIME, THE FIG. 2 WILL BE DISPLAYED. YOU CAN CHANGE DIGITS WITH **[ON/OFF]** BUTTON AND CAN ADJUST THEM AFTER ADJUSTMENT. IF YOU PUSH **[ON/OFF]** BUTTON, ALARM WILL BE ON AND CURRENT TIME (STARTING STAGE) WILL BE DISPLAYED. (IN POWER OFF OR AUTOMATIC POWER OFF, YOU CAN ALSO DO IT.)
 - IN THE FIG. 1, IF YOU PUSH **[ON/OFF]** BUTTON ONCE MORE AND PUSH **[ON/OFF]** BUTTON, ALARM WILL BE OFF AND CURRENT TIME (STARTING STAGE) WILL BE DISPLAYED.
- ** IN ALARM, YOU CAN HEAR BEEP SOUND FOR 30 SECONDS.
 (IF YOU WANT TO STOP ALARMING, PUSH ANY BUTTON ON YOUR PAGER.)

 -13-

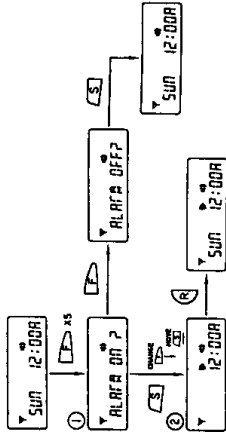

-14-

11. OTHER MAIN DISPLAYS

- LOW VOLTAGE ALARMING
 (SHORT ALERTING SOUND/VIBRATION PER 60 MINS.)
 --PLEASE CHANGE BATTERY TO NEW ONE.
 Display: LOW BATT: ETV
- DUPLICATE MESSAGE RECEIVING
 --THE LATEST RECEIVED TIME, ADDRESS AND CALL TYPE (A,B,C AND D) ARE DISPLAYED.
 Display: 12:00R TP JA, REPEAT INDICATION, ADDRESS, CALL TYPE (A,B,C,D)



-17-

MEMO

FCC: Compliance Statements
 Section 15.19 Labelling
 requirements.
 Compliance with section 15.19 part (A) and (#5).
 This device complies with Part 15 of the FCC Rules. Operation is subject to the conditions that this device does not cause harmful

 
MEMO

interference.
 Section 15.21 Information to user.
 The intentional or unintentional changes or modifications not expressly approved by SCA could void the user's authority to operate this equipment

10. AUTOMATIC POWER ON/OFF SELECTION

- IN CURRENT TIME (STARTING STAGE), PUSH **[ON/OFF]** BUTTON SEVEN TIMES
 - IF YOU PUSH **[ON/OFF]** BUTTON ONE TIME, SELECTION CONDITION WILL BE AUTOMATIC POWER OFF.
 - IN THE FIG. 2, YOU CAN CHANGE DIGITS WITH **[ON/OFF]** BUTTON AND CAN ADJUST THEM AFTER ADJUSTMENT. IF YOU PUSH **[ON/OFF]** BUTTON, AUTOMATIC POWER ON/OFF CONDITION WILL BE SELECTED AND CURRENT TIME (STARTING STAGE) WILL BE DISPLAYED.
- EXAMPLE: IN CASE YOU WANT TO SELECT TIME LIKE THE FIG. 2, POWER WILL TURN OFF AT TWELVE O'CLOCK NIGHT AND TURN ON AT SIX O'CLOCK MORNING (THE PAGER CAN'T RECEIVE MESSAGE DURING POWER TURNING OFF AND ONLY TIME WILL BE DISPLAYED)
- IN THE FIG. 1, IF YOU PUSH **[ON/OFF]** BUTTON ONCE MORE AND PUSH **[ON/OFF]** BUTTON, AUTOMATIC POWER ON/OFF WILL BE CANCELED AND DISPLAY WILL TURN TO CURRENT TIME (STARTING STAGE)

-15-

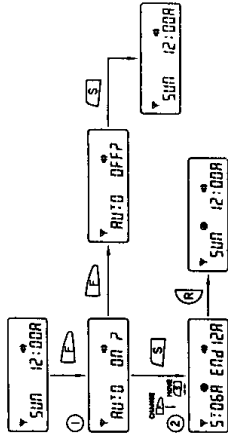


-16-

12. HOW TO REPLACE BATTERY

- DURING REPLACING BATTERY, ALL UNLOCKING MESSAGES SHOULD BE CLEARED SO REPLACE BATTERY AFTER "LOOKING" NECESSARY MESSAGES.
- IN LOW VOLTAGE, ALERT SOUND (SHORT ALERT SOUND/VIBRATION PER ONE HOUR) WILL COME OUT AND "LOW BATTERY" WILL BE SHOWN ON LCD IN THIS TIME. REPLACE BATTERY AT ONCE.
- WHEN YOU REPLACE BATTERY, PUSH THE BATTERY LOCKING TAB BACK SIDE OF THE PAGER TO ARROW DIRECTION AS FIG. 1.
- SLIDE THE BATTERY DOOR UNTIL IT IS COMPLETELY FREE FROM THE HOUSING AND THE BATTERY IS EXPOSED AS FIG. 2.
- ORIENT NEW AAA-SIZE BATTERY SO THAT THE "+" AND "-" MARKING MATCH THE DIRECTION OF THE POLARITY MARKING EMBOSSED ON THE BATTERY COMPARTMENT AS FIG. 1 AND INSERT NEW BATTERY.
- ALIGN THE GROOVES ON THE BATTERY DOOR WITH THE GROOVES ON THE FRONT AND BACK HOUSING. SLIDE THE BATTERY DOOR UNTIL IT IS FULLY CLOSED AND POSITIVE CLICK IS HEARD.

 -19-

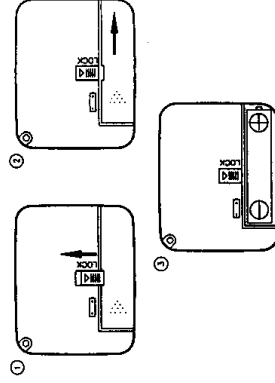

-20-

MEMO

OPERATION MANUAL

NUMERIC
 DISPLAY PAGER
 Model SH-780

