


FCC ID: JH4114

SPECIFICATIONS

Item	Rating Specification
Power Supply	120V 20A single phase with grounding 60Hz AC.
Power Consumption	1550W
Microwave Output Power	1100W
Microwave Frequency	2450MHz
Outside Dimensions	20.5(W) x 15(D) x 11.5(H) inches
Cavity Dimensions	13.5(W) x 13.5(D) x 9.2(H) inches
Weight	34 Lbs (Approx)
Cooking Time	Digital 99 minutes, 99 seconds

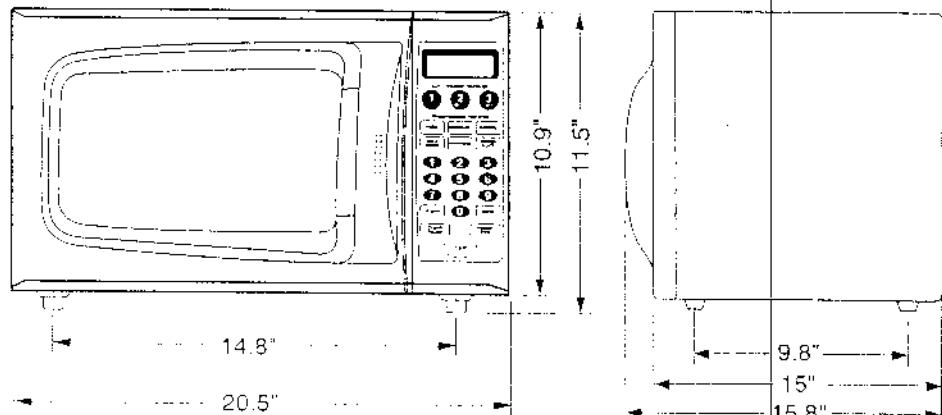

BEFORE YOU CALL FOR SERVICE

Refer to the following checklist before you call for service.

The oven does not work:

1. Check that the power cord is securely plugged in.
2. Check that the door is firmly closed.
3. Check that the cooking time is set.
4. Check for a blown circuit fuse or tripped main circuit breaker in your house.
5. Check that the Child Lock feature is not engaged.

Sparking in the cavity:

1. Check the containers, dishes or utensils in the oven and make sure they are not metal or have metal trim.

If there is still a problem, contact the nearest Emerson Authorized Service Center.