

CARE OF YOUR MICROWAVE OVEN

1. Turn the oven off before cleaning.
2. Keep the inside of the oven clean. When food spatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. The use of harsh detergent or abrasives is not recommended.
3. The outside oven surface should be cleaned with soap and water, rinsed and dried with a soft cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. If the Control Panel becomes wet, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on Control Panel.
5. When cleaning the Control Panel, leave oven door open to prevent unit from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates a malfunction of the unit.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The turntable and oven cavity floor should be cleaned regularly. Simply wipe the bottom surface of the oven with mild detergent water and dry. The turntable may be washed in mild sudsy water or in the top rack of dishwasher. Cooking vapors collect during repeated use but in no way affect the bottom surface or roller ring wheels. When removing the turntable from cavity floor for cleaning, be sure to replace in the proper position.

DOOR SEAL


The inner door seal ensures that the microwave energy is kept within the oven. The seal must be kept clean to be effective. Do not use abrasive cleaners.

WINDOW SCREEN

The punched metal screen reflects microwave energy into the oven while permitting you to view inside. Wipe the windows as needed but do not use abrasive cleaners.

DOOR

To open the door, push the door release button.
To close press gently on door face.

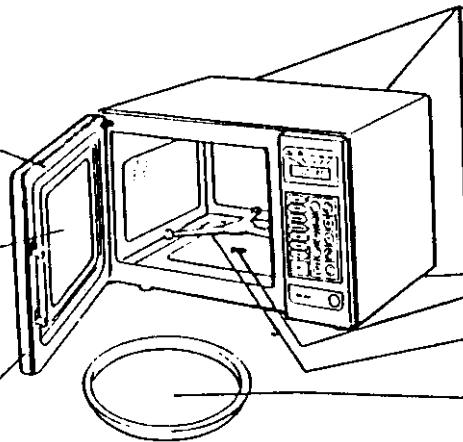

AIR INTAKE AND EXHAUST

To minimize moisture on oven walls while oven is in use, air is drawn from the air intake at the right rear of oven and then forced out to the vents at the left rear and the bottom of oven. (Do not block these intake and exhaust openings.)

TURNTABLE DRIVE

TURNTABLE

The turntable rotates the glass tray for more even cooking

GLASS COOKING TRAY

The glass cooking tray does not react to microwave energy and holds the food so microwaves can also bounce back from the oven bottom to cook the food from all sides.

If this oven is dropped or damaged, do not use it until it is thoroughly checked by a trained service technician. This oven has a short power supply cord. Extension cords may be used if you are careful in their use. If an extension cord is used, it must be a type S, with 3 number 16 wires and have a 3-prong grounded plug. The extension cord should not drape over a countertop where it can be pulled on or tripped over accidentally. The electrical power cord must be kept dry and must not be pinched or crushed in any way. Do not store burnable material, such as food, in a microwave oven.

THIS MICROWAVE OVEN IS DESIGNED FOR HOUSEHOLD USE ONLY AND MUST NOT BE USED FOR COMMERCIAL PURPOSES.

- This oven may possibly cause reception interference on radio and/or televisions.
- In order to eliminate or minimize interference to radios and televisions from this microwave oven, the oven should be on a separate electrical circuit within the building. In addition, the oven should be physically as far away from the radio or television as possible.
- There are no user maintenance requirements for this appliance, except for normal cleaning as outlined in this owner's manual.

2999
EXHIBIT "D"
FCC ID: JHU655

NISSHIN IND. CO., LTD. (USA)
645 Dauphine Ct., Suite D
Elk Grove, IL 60007