

SPECIFICATIONS

Item	Rating Specification
Power Supply	120V 15A single phase with grounding 60Hz AC.
Power Consumption	12 5 0W
Microwave Output Power	8 00W
Microwave Frequency	2450 M Hz
Outside Dimensions	18.1 (W) x 13.2 (D) x 10.5 (H) inches
Cavity Dimensions	12 (W) x 12.5 (D) x 7.6 (H) inches
Weight	30 Lbs (Approx)

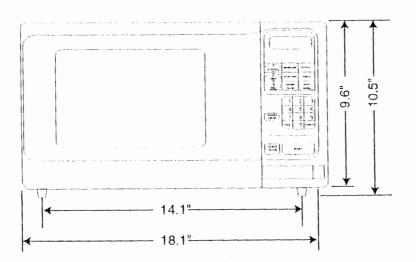

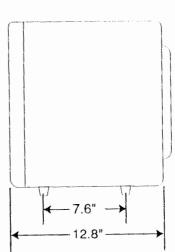

BEFORE YOU CALL FOR SERVICE

Refer to the following checklist before you call for service.

The oven does not work:

- 1. Check that the power cord is securely plugged in.
- 2. Check that the door is firmly closed.
- 3. Check that the cooking time is set.
- 4. Check for a blown circuit fuse or tripped main circuit breaker in your house.
- 5. Check that the Child Lock feature is not engaged.

Sparking in the cavity;

1. Check the containers, dishes or utensils in the oven and make sure they are not metal or have metal trim.

If there is still a problem, contact the nearest Emerson Authorized Service Center.

FCC 10: JHU755

