

## SPECIFICATIONS

Model	MFM-7TP/MFM-7TPW/MFM-7TPS
Power Source	AC120V, 60HZ
Power Consumption	1200W
Maximum Output	700W*
Defrost Output	350W
Oven Capacity	0.7 cu. ft.
Turntable Diameter	10.7" (272mm)
Dimensions (w x d x h)	18.1"(W) x 12.8"(D) x 10.6"(H) (460mm x 325mm x 269mm)
Weight (Approx.)	29lbs (13.2kg)

\*According to IEC test procedures.  
Specifications subject to change without notice.

## PROPER AND SAFE USE OF YOUR OVEN

- The oven must be level.
- The turntable and turntable roller guide must be in the oven during cooking.
- Place the cookware gently on the turntable and handle it carefully to avoid possible breakage.
- Use only the specified bag size when using Popcorn. See page 8.
- The oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
- Do not operate the microwave oven empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
- Do not cook bacon directly on the turntable. Excessive local heating of the turntable may cause it to break.
- Do not heat baby bottles or baby food in the microwave oven. Uneven heating may occur and cause physical injury.
- Do not heat narrow-necked containers, such as syrup bottles.
- Do not attempt to deep-fry in your microwave oven.
- Do not do home canning in this microwave oven as it is impossible to be sure all contents of the jar have reached a boiling temperature.
- Do not use this microwave oven for commercial purposes. This microwave oven is made for non-commercial use only.
- Do not use the socket located on the back panel of the Microwave Oven for any purpose other than to plug in the refrigerator cord. Do not plug other electrical items into this socket.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## INSTALLATION OF MICROWAVE MODELS


Remove all packing material and accessories.

Examine the oven for any damage, such as dents or broken door. Do not install if oven is damaged.

1. Place the oven on top of the approved MicroFridge® refrigerator carefully lining up screw holes of the refrigerator sash with microwave side holes.
  - Do not block the inlet and outlet openings located at the rear and bottom of the oven.
  - Do not remove the feet from the bottom of oven.
  - Blocking the inlet and/or outlet openings can damage the oven.
2. Attach the microwave oven to the refrigerator by screwing in the four (4) side screws.
  - Screws can be found in the attached bag.
3. Plug refrigerator into the socket provided in the rear of the microwave oven.
  - The socket is intended for use with approved MicroFridge® refrigerators. Use of this socket for other appliances may be hazardous.
  - Model Number for approved MicroFridge® refrigerator is located on the label on the rear of the microwave oven.

## NOTE:

If your oven does not operate properly, unplug it from the 120 volt household outlet and then plug it back in. This unit is not designed for 50Hz or any circuit other than 120 volt/60Hz AC current.

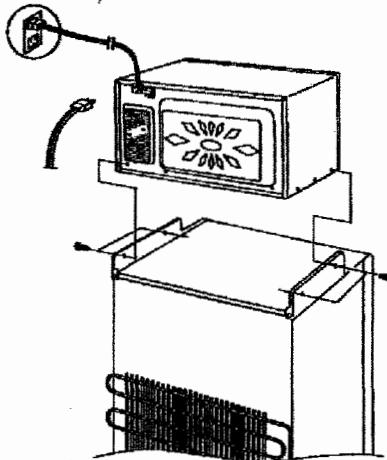

4. Plug your oven into a standard 120-volt/60Hz household outlet. Be sure the electrical circuit is at least 15 amperes and that your microwave oven is the only appliance on the circuit.

The MicroFridge® combination appliance will now operate without exceeding eleven (11) amps of current draw.

5. Radio & TV reception ... Poor television reception and radio interference may result if the oven is located close to TV, radio, antenna or antenna wire. Position the oven as far from them as possible and plug them in to a separate circuit if it is available.

UNAUTHORIZED MODIFICATIONS TO THIS DEVICE COULD VOID THE USER'S AUTHORITY TO OPERATE IT.

## CLEANING

Wipe the oven inside and outside with a soft cloth and a mild detergent solution. Then rinse and wipe dry. This should be done on a weekly basis, more often if needed. Never use cleaning powders or rough pads. Excessive oil splatters on the inside top will be difficult to remove if left for many days. Wipe splatters with a wet paper towel, especially after cooking chicken or bacon.

## REMOVABLE PARTS

The following parts may be removed as described. They should be washed in warm (not hot) water with a mild detergent and a soft cloth. Once they are clean, rinse them well and dry with a soft cloth. Never use cleaning powders, steel wool or rough pads.

- The turntable may be cleaned at the sink. Be careful not to chip or scratch the edges as this may cause the turntable to break during use.
- The turntable roller rest should be cleaned regularly.

## SPECIAL CARE

For best performance and safety, the inner door panel and the oven front frame should be free of food or grease buildup. Clean them often with a mild detergent. Then rinse and wipe dry. Never use cleaning powders or rough pads.

After cleaning the control panel, touch the STOP/CLEAR pad to clear any entries that might have been entered accidentally while cleaning the panel.

MAINTENANCE  
CLEANING