



## INSTRUCTION MANUAL

### MFM-9NTP MFM-9NWTP

#### Microwave Oven

#### TABLE OF CONTENTS

##### Safety Instructions

■ PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY .....	1
■ Specifications .....	1
■ Proper and Safe Use of Your Oven .....	1
■ Important Safety Instructions .....	2



##### Setting Up & Getting to Know Your Oven

■ What is Safe Plug™ Technology ? .....	3
■ Electrical Grounding Instructions .....	3
■ Installation .....	4
■ Names of Oven Parts and Accessories .....	6
■ Control Panel and Features .....	7
■ Utensils .....	8



##### Operating Instructions

■ Operating Instructions .....	9
• Setting Clock .....	9
• Child Lock-Out .....	10
• Automatic Popcorn .....	10
• Beverage/Soup .....	11
• Potatoes .....	11
• 45 Sec/Quick-On Cooking .....	12
• Reheating (Dinner Plate) .....	12
• Auto Weight Defrosting .....	13
• Time Cooking .....	13
• Wattage Output Chart .....	14
• Hold Warm .....	15
• To Stop the Oven While it is Operating .....	15



##### Care of Your Microwave Oven

■ Questions and Answers .....	16
■ Cleaning .....	17
■ Before Calling for Service .....	17



##### Charts

■ Defrost Chart .....	18
■ Cooking Chart .....	19
■ Warranty .....	20
■ Techniques .....	21



Read these instructions carefully before using these ovens. If you follow the instructions, your microwave oven will provide you with many years of good service.

UNAUTHORIZED MODIFICATIONS TO THIS DEVICE COULD VOID THE USER'S AUTHORITY TO OPERATE IT.

SAVE THESE INSTRUCTIONS



## SPECIFICATIONS

Model	MFM-9NTP/MFM-9NWTP
Power Source	AC120V, 60Hz
Power Consumption	1350W
Maximum Output	850W*
Defrost Output	300W
Oven Capacity	0.9 cu. ft.
Turntable Diameter	11-5/8" (295mm)
Dimensions (w x h x d)	18-1/2" x 12-9/16" x 13-7/8" (470mm x 319mm x 352mm)
Weight (Approx.)	34lbs (15.5kg)

\* According to IEC test procedures.

Specifications subject to change without notice.

## PROPER AND SAFE USE OF YOUR OVEN

- The oven must be level.
- The turntable and turntable roller rest must be in the oven during cooking.
- Place the cookware gently on the turntable and handle it carefully to avoid possible breakage.
- Incorrect use of browning dish may cause the turntable to break. See page 8.
- Use only the specified bag size when using Automatic Popcorn. See page 10
- The oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
- Do not operate the microwave oven empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
- Do not cook bacon directly on the turntable. Excessive local heating of the turntable may cause it to break.
- Do not heat baby bottles or baby food in the microwave oven. Uneven heating may occur and cause physical injury.
- Do not heat narrow-necked containers, such as syrup bottles.
- Do not attempt to deep-fry in your microwave oven.
- Do not do home canning in this microwave oven as it is impossible to be sure all contents of the jar have reached a boiling temperature.
- Do not use this microwave oven for commercial purposes. This microwave oven is made for non-commercial use only.
- Do not use the socket located on the back panel of the Microwave Oven for any purpose other than to plug in the refrigerator cord. Do not plug other electrical items into this socket.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY


- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## CARE OF YOUR MICROWAVE OVEN

1. Turn the oven off before cleaning.
2. Keep the inside of the oven clean. When food spatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. The use of harsh detergent or abrasives is not recommended.
3. The outside oven surface should be cleaned with soap and water, rinsed and dried with a soft cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. If the Control Panel becomes wet, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on Control Panel.

When cleaning the Control Panel, leave oven door open to prevent unit from accidentally turning on.

5. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates a malfunction of the unit.
6. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
7. The turntable and oven cavity floor should be cleaned regularly. Simply wipe the bottom surface of the oven with mild detergent water and dry. The turntable may be washed in mild sudsy water or in the top rack of dishwasher. Cooking vapors collect during repeated use but in no way affect the bottom surface or roller ring wheels. When removing the turntable from cavity floor for cleaning, be sure to replace in the proper position.

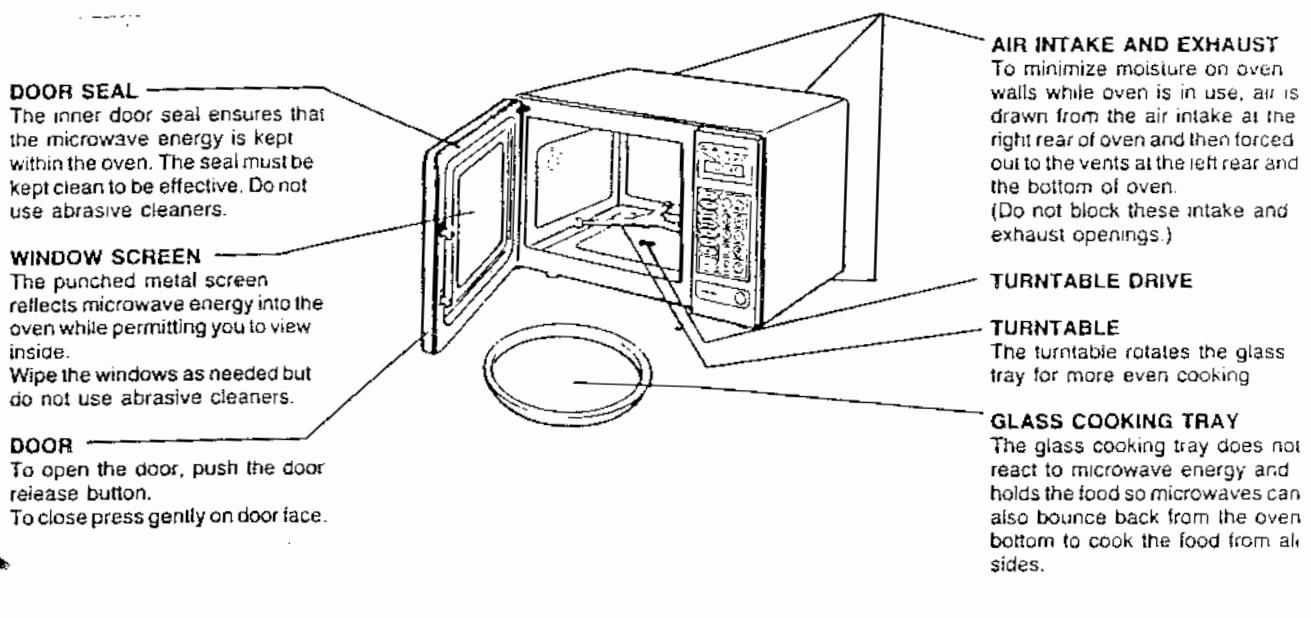

If this oven is dropped or damaged, do not use it until it is thoroughly checked by a trained service technician. This oven has a short power supply cord. Extension cords may be used if you are careful in their use. If an extension cord is used, it must be a type S, with 3 number 16 wires and have a 3-prong grounded plug.

The extension cord should not drape over a countertop where it can be pulled on or tripped over accidentally, the electrical power cord must be kept dry and must not be pinched or crushed in any way. Do not store burnable material, such as food, in a microwave oven.

**THIS MICROWAVE OVEN IS DESIGNED FOR HOUSEHOLD USE ONLY AND MUST NOT BE USED FOR COMMERCIAL PURPOSES.**

- This oven may possibly cause reception interference on radio and/or televisions.
- In order to eliminate or minimize interference to radios and televisions from this microwave oven, the oven should be on a separate electrical circuit within the building. In addition, the oven should be physically as far away from the radio or television as possible.
- There are no user maintenance requirements for this appliance, except for normal cleaning as outlined in this owner's manual.