

Mobile Phone

User Manual

QS-G3UCT5BK

FCC ID:JJMELEQTRON

LEGAL INFORMATION

Copyright © 2012 Shenzhen CEIEC Technical Center.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of Shenzhen CEIEC Technical Center Corporation.

Shenzhen CEIEC Technical Center Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Version No.: R0.1

Edition Time: 20130120

Contents

For Your Safety	8
General Safety	8
Distraction	9
Driving	9
Operating Machinery	9
Product Handling	9
General Statement on Handling and Use.....	9
Small Children	11
Demagnetization	11
Electrostatic Discharge (ESD).....	11
Antenna	11
Normal Use Position.....	11
Air Bags.....	12
Seizures/ Blackouts.....	12
Repetitive Motion Injuries.....	12
Emergency Calls	12
Loud Noise	13
Phone Heating.....	13
Electrical Safety	13
Accessories	13
Connection to a Car	13
Faulty and Damaged Products.....	13
Interference.....	14
General Statement on Interface	14

Pacemakers	14
Hearing Aids	14
Medical Devices.....	15
Hospitals	15
Aircraft.....	15
Interference in Cars	15
Explosive Environments	16
Petrol Stations and Explosive Atmospheres	16
Blasting Caps and Areas	16
Getting Started	17
Overview	17
Keys Explained.....	18
Starting up	18
Installing the SIM/SD Card and Battery	18
Removing the Battery and SIM/SD Card	20
Charging the Battery	20
Switching Your Phone On/Off	21
Setting Up Your Phone for the First Time	21
Switching to Sleep Mode	21
Waking Up Your Phone	22
Getting Around Your Phone	22
Touch Control	22
Home Screen	23
Status and Notification Icons	24
Using the Notification Panel.....	24

Phone Calls	25
Making Calls	25
Calling from the Phone	25
Calling from Your Contacts	25
Calling from Your Call Log	26
Calling from a Text Message.....	26
Receiving Calls	26
Answering a Call	26
Rejecting a Call	27
Muting a Call	27
Turning the Speakerphone On/Off	27
Ending a Call	27
Contacts	27
Creating a Contact	28
Searching for a Contact	28
Messaging	28
The Message Box	28
Sending an Message	29
Message Settings	29
Touch Input Settings.....	30
Getting Connected to the Internet.....	30
Adding a New Network Connection	30
Turning On Wi-Fi.....	31
Connecting to a Wi-Fi Network	31
Checking the Wi-Fi Network Status	31

USB tethering & portable hotspot	31
Enabling USB tethering.....	32
Disabling USB tethering.....	32
Enabling the Wi-Fi Hotspot	32
Disabling the Wi-Fi Hotspot	33
Browsing the Internet	33
Browsing Options	33
Using Bookmarks	34
Editing a Bookmark.....	34
Deleting a Bookmark.....	34
Changing Browser Settings.....	35
Bluetooth	35
Making the Most of Multimedia.....	36
Taking Pictures with Your Camera.....	36
Listening to Your FM Radio.....	36
Playing Your Music.....	36
Opening Your Gallery.....	37
Making Voice Memos	37
Using Your Google Applications	37
Gmail	38
Local.....	38
Latitude.....	39
Sorting out Your Phone Settings.....	39
Setting Date and Time.....	39

Display Settings	39
Sound Settings.....	40
Language Settings.....	40
Disabling Data Services	40
Switching Network Modes	40
Switching Networks	41
Setting Access Point Names	41
Security Settings.....	41
Protecting Your Phone with a Pattern	41
Protecting Your Phone with Slide.....	42
Protecting Your Phone with a PIN or Password.....	42
Disabling Screen Unlock Security	43
Protecting Your SIM Card with a PIN	43
Managing Your Device Memory	44
Privacy: Reset to Factory Settings.....	45
Applications.....	45
Installing an Application.....	45
Removing an Application.....	46
Moving an Application	46
Managing Other Settings	46
Text-to-speech Output.....	46
Accessibility	47
Other Applications.....	47
Clock	47
Calculator.....	47

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contacting with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contacting with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.

	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don't rely on your phone for emergency communications.		

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- The phone's normal operating temperature is -20°C ~ 60°C .In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could

break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/ Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls 错误！未找到引用源。

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety**Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing

device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a

hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

 
Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Getting Started

Overview

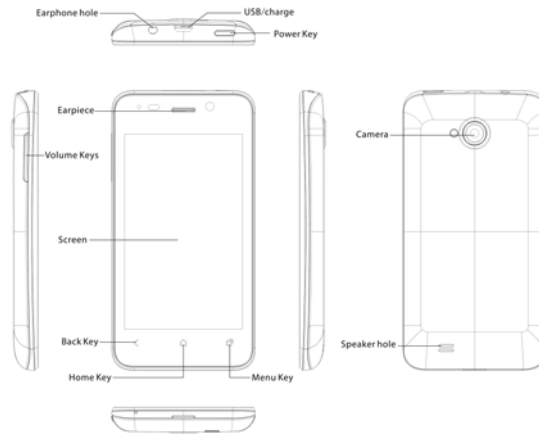

Keys Explained

Key	Function
Power Key	• Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off. • Press to switch your phone to Sleep mode. • Press to wake up your phone.
Home Key	• Press to return to the Home Screen from any application or screen. • Hold to see recently used applications.
Menu Key	Press to get the options for the current screen.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

Starting up

 
Installing the SIM/SD Card and Battery 错误！

未找到引用源。


Switch off your phone before installing or replacing the battery, SIM, or memory card.

1. Remove the back cover.


2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

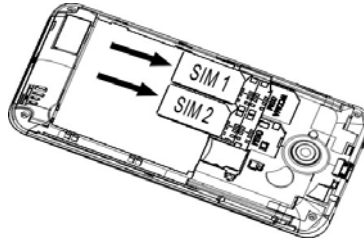

 3. Insert the memory card into the metal slot with the metal contacts facing down until it clicks to the right position.

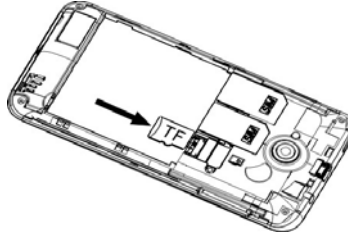

 4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.

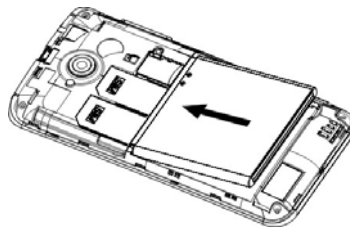

5. Press the cover gently back into place until you hear a click.

Removing the Battery and SIM/SD Card 错误！未找到引用源。

1. Make sure that your mobile phone is off.
2. Remove the back cover.
3. Lift the battery up and out.
4. Slide the SIM card out.
5. Slide the SD card out.

Charging the Battery 错误！未找到引用源。

When you first get your new phone you'll need to charge the battery.

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

Switching Your Phone On/Off

Make sure the SIM card is in your device and the battery is charged.

- Hold **Power Key** to switch on your phone.
- To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see chapter *Sorting out Your Phone Settings – Privacy: Reset to Factory Settings*), you need to do some settings before using it.

Tap **Menu Key** in the standby mode, then select **System settings > Language & input > language** to change the language you want to use, if needed.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time. You can start sleep mode by the following method.

Press **Power Key** to switch to Sleep Mode.

Waking Up Your Phone

1. Press **Power Key** to activate your screen display.
2. Drag the  icon to the right.

NOTE: If you have set an unlock pattern, PIN or password for your phone (see chapter *Sorting out Your Phone Settings – Security Settings*) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Flick the screen to scroll up, down, left or right.
3. Point, drag and drop to move particular items across the screen.
4. Double-tap the screen to zoom in/out an image.

NOTE: You can view the phone screen in portrait or landscape orientation simply by holding it upright or turning it on its side. Not all screens are viewable in landscape.

Home Screen 错误！未找到引用源。

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.

Choosing Your Wallpaper

1. Press **Home Key** to return to the Home Screen.
2. Tap **Menu Key** and select **Wallpaper**.
3. Tap **Gallery**, **Live Wallpapers**, **Video Wallpaper**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for Gallery images.
4. Tap **Set wallpaper**.

Adding Items to Your Home Screen

1. Press **Home Key** > tap  to enter the Application Program Interface
2. In the list of applications, touch and hold the icon until its vibration, when the main screen appears, move the application icon to the idle position, release the finger.

Removing Items from Your Home Screen

- 1. Press **Home Key** to return to the Home Screen.
- 2. Tap and hold the item you want to delete until the remove icon appears on the top of the screen.
- 3. Drag the item to the remove icon and release your finger when the item turns red.

Status and Notification Icons 错误! 未找到引用源。

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

	USB connected		Missed call
	Airplane mode		Signal strength
	Battery charge		New message
	Meeting mode		Wi-Fi network
	Silent mode		Signal searching
	Bluetooth icon		USB debugging connected
	Data Conn off		New Wi-Fi network detected

Using the Notification Panel 错误！未找到引用源。

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new Messaging, and current settings – such as call forwarding or call status. From here you can also open new Messaging, reminders, etc.

Open Recently-Used Applications 错误！未找到引用源。

1. Hold **Home Key** from any screen. The phone will display the applications you used recently.
2. Tap the application you want to open.

Phone Calls

Making Calls 错误！未找到引用源。

There are many ways to make a call with your phone. And they're all easy to do.

Calling from the Phone

1. Press **Home key** > tap  > **Phone** or tap  on the Home Screen.
2. Enter the phone number using the on-screen keypad.
Tap  to delete wrong digits.
3. Tap the dial icon.

TIPS: To make international calls, hold  to enter the “+”.

Calling from Your Contacts 错误！未找到引用源。

1. Press **Home key** > tap  > **People**.
2. Slide your finger to scroll the contacts list and tap the contact name you want to call, when the contact details appear, click on the number to dial.
You can search for a contact by tapping  on the bottom of the screen.

Calling from Your Call Log

1. If you have opened the dialer, touch the call log tab to open the call records, respectively touch all, dialed, received, missed call button to display a list of the corresponding call records.
2. Tap dial icon on the right side of the current record.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Press **Home key** > tap  > **Messaging**.
2. Tap the conversation and then find the message that contains the phone number you need.
3. Tap the message, the phone will list the options.

Receiving Calls 错误！未找到引用源。

Answering a Call

Drag the  icon to right to answer the call.

Rejecting a Call

Drag the  icon to left to reject the call.

Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them.

Tap  to turn your microphone off. To turn your microphone back on, tap  again.

Turning the Speakerphone On/Off

Tap  during a call to turn the speakerphone on. Tap  again to turn off the speakerphone.

Ending a Call

Tap  to finish a call.

Contacts 错误！未找到引用源。

You can add contacts on your phone and synchronize them with

the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press **Home key** > tap  > **People**.

Creating a Contact 错误！未找到引用源。

1. Tap  from the Contacts Screen.
2. Choose the storage location to save the contact.
3. Enter the contact name, phone numbers, and other information, and then save it.

Searching for a Contact 错误！未找到引用源。

1. Tap  on the bottom of the Contacts Screen.
2. Input the contact name you want to search for.

The contacts matched will be listed.

Messaging

Your SMS (text message) and MMS (multimedia messaging service) are combined into one menu in **Home Key** >  > **Messaging**.

The Message Box

Instead of an inbox and outbox, your phone organizes all Messaging you sent and received into one box, where Messaging exchanged with the same number are grouped

into one message thread in the Messaging Screen. You can tap a thread to see the conversation you have had with someone.

Sending an Message 错误！未找到引用源。

1. Press **Home key** > tap  > **Messaging**.
2. Tap  to create new message.
3. Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient. You can also tap  to select recipients from the contacts.
4. Tap **Type message** and type your message.
 - Tap **Menu Key** to insert quick text, smiley, or contact.
 - If you are sending an MMS, tap **Menu Key** to add a subject, or tap  to attach pictures, videos, audio, or slideshow.
5. Tap  to send your message.

NOTE: Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an MMS, it'll automatically become a text message.

Message Settings

The phone's message settings are pre-configured for you to

use immediately. To change them, tap **Menu Key > Settings** from the Messaging Screen.

NOTE: From SMS settings screen tap **Menu Key > Restore default settings** to change all the message settings back to the original.

Touch Input Settings

Choose the touch input settings by tapping **Menu Key > System settings > Language & input** from Home Screen.

In the **KEYBOARD & INPUT METHODS** section, you can choose the settings that you need.

Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.

You can use default connection settings to connect to the Internet via your mobile network, or Wi-Fi.

The network connection can be enabled /disabled manually.

Just press **Home key > tap  > Settings > SIM management > Data connection** from the Home Screen. You can according to the need to set.

Adding a New Network Connection

To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone, please contact your

provider to get the necessary information.

You can view settings by pressing **Home key** > tap  > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Access Point Names**.

Turning On Wi-Fi 错误！未找到引用源。

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

1. Press **Home key** > tap  > **Settings**.
2. Click  next to the Wi-Fi menu to turn it on, click  you can turn off the Wi-Fi function.

Connecting to a Wi-Fi Network 错误！未找到引用源。

1. Press **Home key** > tap  > **Settings** > **Wi-Fi**.
When the Wi-Fi is on, the Wi-Fi access points, or “hotspots”, that your phone has detected are displayed with their names and security settings.
2. Tap an access point to connect to it.

NOTE: If security features are implemented, you'll need to enter a password.

Checking the Wi-Fi Network Status 错

误！未找到引用源。

You can check the Wi-Fi network by looking at the  icon in the status bar.

USB tethering & portable hotspot

Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

Enabling USB tethering

TIPS: The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem.

Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and tick the **USB tethering** check box.

Disabling USB tethering

Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and clear the **USB tethering** check box.

You can also just pull out the USB cable.

Enabling the Wi-Fi Hotspot

You can use the phone as a portable Wi-Fi router, to share your phone's internet connection with one or more PC or other devices.

NOTE:

- When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.
- You can configure the Wi-Fi hotspot as follows:
 1. Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and tick the **Portable Wi-Fi hotspot** check box.
 2. Tap **Configure Wi-Fi hotspot** to set up & manage portable Wi-Fi hotspot.
 3. Tap **Save**. Now you can find the hotspot on other devices and connect to it.

Disabling the Wi-Fi Hotspot

Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and clear the **Portable Wi-Fi hotspot** check box.

Browsing the Internet 错误！未找到引用源。

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Press **Home Key** > tap  > **Browser**.

There are different ways to open web pages:

- Tap the address bar to enter the website you want to browse. Then tap  on the touch keyboard.
- Tap **Menu Key** > **Bookmarks/History** and select a bookmark or history to open.

Browsing Options

When you browse the Web, you can also do the following:错误！未找到引用源。

- Press **Menu Key** > **Close** and select **Quit** to exit.
- Press **Menu Key** > **Bookmarks/History** and select a bookmark or history to open.
- Press **Menu Key** > **Settings** to configure browser settings.

Using Bookmarks

If you know the Web address, you can manually add bookmarks. To bookmark a web page, open it and tap **Menu**

Key > Save to bookmarks. Give the bookmark a name and save it.

Editing a Bookmark 错误！未找到引用源。

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks/History**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name or location, and then tap **Ok** to save it.

Deleting a Bookmark 错误！未找到引用源。

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks/History**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and tap **OK** to confirm.

Changing Browser Settings 错误！未找到引用源。

Tap **Menu Key > Settings** from a browser window to change browser settings.

Bluetooth 错误！未找到引用源。

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

1. Press **Home Key** > tap  > **Settings**.
2. Click  next to the Bluetooth menu to turn it on, When Bluetooth is on, the  icon will appear in the status bar.
3. Tap **Bluetooth**. Your phone will show all visible Bluetooth devices in range.
4. Tap the device you want to pair with and operate according to the message prompt.
When the owner of the device to be paired accept the connection, the pairing is completed.

TIPS: Tap your device name to make your phone discoverable if other devices try to pair with your phone.

Making the Most of Multimedia

Taking Pictures with Your Camera 错

误！未找到引用源。

Your phone has camera function. Open it by pressing **Home**

Key > tap  > **Camera**.

Tap  to take a shot. To view it, just tap the picture in the right corner of the screen.

Listening to Your FM Radio

With the FM Radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio.

- To tune in, plug your headset into your phone. Press **Home key** > tap  > **FM Radio**.

Playing Your Music

You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.

1. Press **Home Key** > tap  > **Music** to open the Music Screen.
2. Click the Music category label > music files to start playing.
3. Adjust the volume with **Volume Keys**.

Opening Your Gallery

Press **Home Key** > tap  > **Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact photo, and sharing with friends.

Making Voice Memos

Sound Recorder enables you to record your voice memos. You need a SD card to use it.

1. Press **Home Key** > tap  > **Sound Recorder**.
2. Tap  to start recording.
3. Tap  to stop recording.
4. Tap  to play back the voice recording.
5. Save the voice recording after stop, or tap **Discard** to delete the recording.

Using Your Google Applications 错

误！未找到引用源。
Signing in to your Google Account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one.

1. Tap a Google application that needs a Google account,

such as **Play Store**.

2. If you've got a Google account, tap **Existing**. Enter your username and password. Then tap **Sign in**. (Or tap **New** if you don't have a Google account.)

Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web. This is how to enter Gmail:

Open **Gmail** by Pressing **Home Key** > tap  > **Gmail**.

Local

Local helps you find all kinds of businesses near you. Please enable GPS or wireless networks in settings application, under location settings.

1. Press **Home Key** > tap  > **Local**.
2. Select a business category and the information of that type of business near you will be displayed.
3. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Google Maps, find out how to get there, or give that business a call.

Latitude

Google's Latitude service is a social tool for sharing your location information with selected friends. You can also find on the map the location of your friends - to see nearby friends and met with them (if necessary).

Press **Home key** > tap  > **Latitude** to enable Latitude service.

Sorting out Your Phone Settings

Setting Date and Time

1. Press **Home key** > tap  > **Settings** > **Date & time**.
2. Tap **Automatic Date & time** and select **Off** if you want to set the time and date by yourself.
3. Set date, time and change the other options.

Display Settings

Press **Home key** > tap  > **Settings** > **Display**, you can adjust the display settings as you like:

- **Brightness**: Adjust brightness of the screen.
- **Auto-rotate screen**: Rotate the screen display as you rotate the phone.
- **Screen timeout**: Set the delay for the screen to automatically turn off.

Sound Settings

By pressing **Home Key** > tap  > **Settings** > **Audio profiles**, you can select the profile. In general mode you can adjust the sound settings, such as ringtones, volume and vibrate.

Language Settings

You can change the language of your phone system in two simple steps.

1. Press **Home key** > tap  > **Settings** > **Language & input** > **language**.
2. Select a language from the list given.

Disabling Data Services

Press **Home key** > tap  > **Settings** > **SIM management** > **Data connection**, then tap **Off**.

Switching Network Modes

1. Press **Home key** > tap  > **Settings** > **SIM management** > **3G service** > **Network Mode**.
2. Select one of the following: **GSM/WCDMA (auto mode)**, **WCDMA only**.

Switching Networks

1. Press **Home key**> tap  > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Network operators**. The phone automatically searches for all available networks.
2. Tap the SIM card you want to set.
3. Tap a network to register manually, or tap **Select automatically**.

Setting Access Point Names 错误！未找到引用源。

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to find out more.

Press **Home key**> **Menu Key** > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Access Point Names**.

Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

Protecting Your Phone with a Pattern 错误！未找到引用源。

Creating Your Screen Unlock Pattern 错误！未找到引用源。

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock** > **Pattern**.
2. Read the instructions on-screen and watch the example pattern, and select **Next**.
3. Drag your finger to connect at least four dots, draw the pattern.
4. Touch **Continue**.
5. Redraw your pattern to confirm.

Unlocking the Screen with Your Pattern

1. Press **Power Key** to wake up the screen.
 2. Draw the pattern you set to unlock the screen.
- If you make a mistake, your phone will ask you to try again.

Protecting Your Phone with Slide 错误！未找到引用源。

Creating Your Screen Unlock Slide 错误！未找到引用源。

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock** > **Slide**.

Unlocking the Screen with Slide

1. Press **Power Key** to wake up the screen.
2. Drag the  icon to the right to unlock the screen.

Protecting Your Phone with a PIN or Password

Creating a PIN or Password 错误！未找到引用源。

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Tap **PIN** or **Password**.
3. According to the instruction to complete your PIN or password settings.

Unlocking the Screen with Your Password

1. Press **Power Key** to wake up the phone.
2. Enter the password you set then select  on the touch keyboard.

Unlocking the Screen with Your PIN

1. Press **Power Key** to wake up the phone.
2. Enter the PIN you set then select  on the touch keyboard.

Disabling Screen Unlock Security

If you have created an unlock pattern, PIN or password, you

can disable it.

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Draw the screen unlock pattern or enter your PIN/ password you have created if required.
3. Tap **None**.

Protecting Your SIM Card with a PIN

Every SIM card comes with a PIN. The initial PIN is provided by your mobile phone carrier. It's best to lock your SIM card as soon as you can.

1. Press **Home key** > tap  > **Settings** > **Security** > **Set up SIM card lock**.
2. Choose the SIM card you want set.
3. Tick the **Lock SIM card** check box.
4. Enter the PIN you've been given and tap **OK**.

TIPS: If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM card.

Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

1. Press **Home key** > tap  > **Settings** > **Security** > **Set**

up **SIM card lock**.

2. Make sure you already tick the **Lock SIM card** check box.
3. Tap **Change SIM PIN**.

Managing Your Device Memory 错误！未

找到引用源。

Press **Home Key** > tap  > **Settings** > **Storage**.

You can view the space information of the SD card and the internal storage.

- **Unmount SD card:** You can unmount the SD card to safely remove it.
- **Erase SD card:** Erase all data on the SD card.

Privacy: Reset to Factory Settings

Press **Home key** > tap  > **Settings** > **Backup & reset** > **Factory data reset** > **Reset phone** > **Erase everything**.

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.

Applications 错误！未找到引用源。

Press **Home Key** > tap  > **Settings** > **Apps**.

Installing an Application

You can install an application from the Play store (**Home Key** >  > **Play Store**).

You can also install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Copy the application file to the SD card and install the card on your phone.
2. Press **Home key** > tap  > **File Manager**, and open the folder where the application file is.
3. Tap the file to start installation.
4. Read the installation instructions that come with the application and follow it to complete the setup.

NOTE: please take your handset as the standard.

Removing an Application

1. Press **Home key** > tap  > **Settings** > **Apps**.
2. Select the application you want to delete.
3. Tap **Uninstall** and **OK** to confirm.

Moving an Application

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is

full. You can also move applications to your phone if the memory card is getting full.

NOTE: Not all applications can be move to your phone or memory card.

1. Press **Home key** > tap  > **Settings** > **Apps**.
2. Click the application you want to move on the Downloaded tab.

Managing Other Settings

Text-to-speech Output

You can set the text-to-speech and voice recognition options by pressing **Home Key** > tap  > **Settings** > **Language & input** > **Text-to-speech output**.

NOTE: You need to download voice data in order to use the text-to-speech function.

Accessibility

You can configure accessibility options for accessibility-related applications by pressing **Home Key** > tap  > **Settings** > **Accessibility**.

Other Applications

Clock

1. Press **Home key** > tap  > **Clock**.
2. Tap the default alarm to configure it. Or to create a new alarm, tap **Menu key** > **Add alarm**.
3. Set up the alarm options and tick the Turn alarm on box.

Calculator

You can use the phone directly perform simple mathematical calculations.

1. Press **Home Key** > Tap  > **Calculator**.
2. Click the button corresponding with the calculator display, perform basic arithmetic.

TIPS: Tap **Menu Key** > **Advanced panel** to use scientific calculation.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is **1.423W/kg**, next to the head is **1.177W/kg**. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Ad Hoc function is supported but not able to operate on non-US frequencies.---WIFI

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.