



Logitech M/N : E-R0005
Wireless Guitar Controller



English

IMPORTANT! Before using the Xbox 360® with the Logitech® Wireless Guitar Controller, read the Xbox 360 instruction manual for safety, health, and other information regarding the use of the Xbox 360.

Español

IMPORTANT! Before using the Xbox 360® with the Logitech® Wireless Guitar Controller, read the Xbox 360 instruction manual for safety, health, and other information regarding the use of the Xbox 360.

Français


IMPORTANT! Before using the Xbox 360® with the Logitech® Wireless Guitar Controller, read the Xbox 360 instruction manual for safety, health, and other information regarding the use of the Xbox 360.

Português


IMPORTANT! Before using the Xbox 360® with the Logitech® Wireless Guitar Controller, read the Xbox 360 instruction manual for safety, health, and other information regarding the use of the Xbox 360.



1

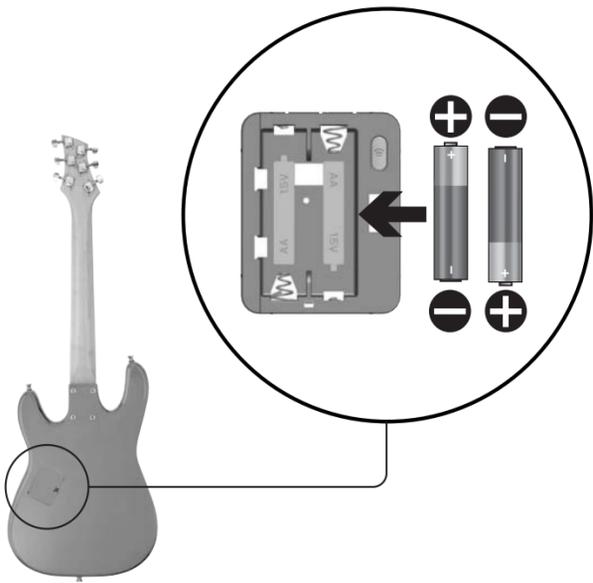

2

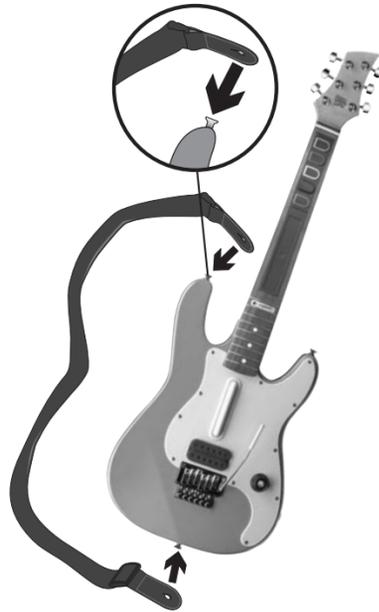


3



4



5

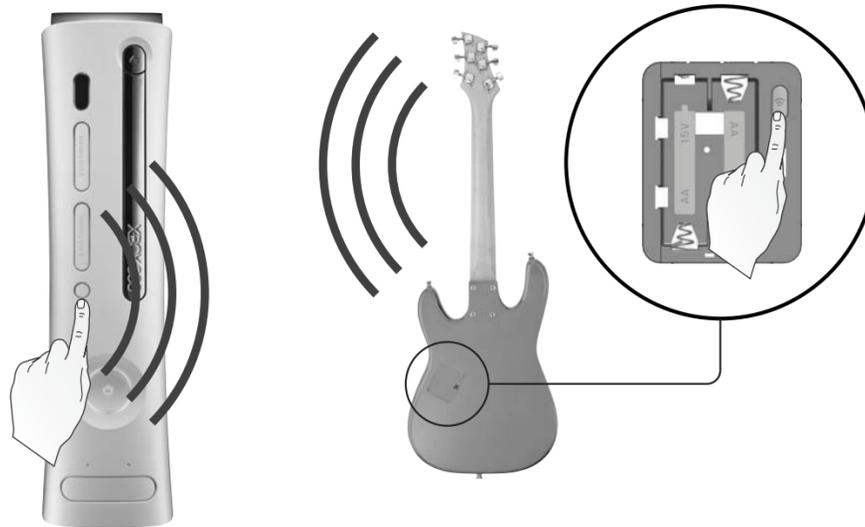

English

After the Ring of Light spins and flashes one time on the guitar controller and on the console, the guitar controller is connected. The quadrant that remains lit indicates the controller's position.

Español

After the Ring of Light spins and flashes one time on the guitar controller and on the console, the guitar controller is connected. The quadrant that remains lit indicates the controller's position.


Français

After the Ring of Light spins and flashes one time on the guitar controller and on the console, the guitar controller is connected. The quadrant that remains lit indicates the controller's position.

Português

After the Ring of Light spins and flashes one time on the guitar controller and on the console, the guitar controller is connected. The quadrant that remains lit indicates the controller's position.



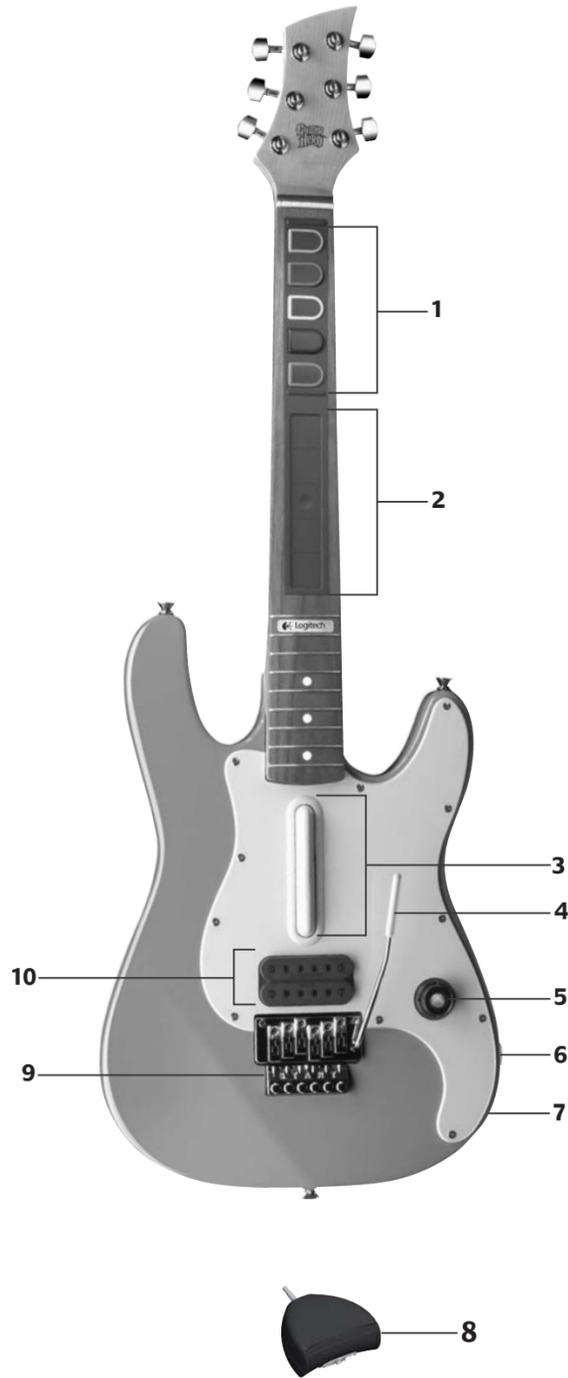

English

Product features

- 1 Fret buttons
- 2 The Touch Sensitive Neck Slider
- 3 Strum Bar
- 4 Whammy Bar
- 5 Xbox 360 Guide Button/Directional Pad
- 6 Expansion port
- 7 Xbox 360 Live headset port
- 8 Adapter for early version of Xbox 360 headset
- 9 Start button
- 10 Star Power/select button

Product safety

- Avoid long playing sessions
- Take frequent rest breaks
- Avoid high volume levels
- See **Important Information** document

Product care

- Keep product dry, dust free, and away from an open flame or heat source.
- To clean, use a dry, clean cloth and no chemicals or water.
- Do not disassemble product or subject it to rough handling or abuse.

Español

Product features

- 1 Fret buttons
- 2 The Touch Sensitive Neck Slider
- 3 Strum Bar
- 4 Whammy Bar
- 5 Xbox 360 Guide Button/Directional Pad
- 6 Expansion port
- 7 Xbox 360 Live headset port
- 8 Adapter for early version of Xbox 360 headset
- 9 Start button
- 10 Star Power/select button

Product safety

- Avoid long playing sessions
- Take frequent rest breaks
- Avoid high volume levels
- See **Important Information** document

Product care

- Keep product dry, dust free, and away from an open flame or heat source.
- To clean, use a dry, clean cloth and no chemicals or water.
- Do not disassemble product or subject it to rough handling or abuse.

Français

Product features

- 1 Fret buttons
- 2 The Touch Sensitive Neck Slider
- 3 Strum Bar
- 4 Whammy Bar
- 5 Xbox 360 Guide Button/Directional Pad
- 6 Expansion port
- 7 Xbox 360 Live headset port
- 8 Adapter for early version of Xbox 360 headset
- 9 Start button
- 10 Star Power/select button

Product safety

- Avoid long playing sessions
- Take frequent rest breaks
- Avoid high volume levels
- See **Important Information** document

Product care

- Keep product dry, dust free, and away from an open flame or heat source.
- To clean, use a dry, clean cloth and no chemicals or water.
- Do not disassemble product or subject it to rough handling or abuse.

Português

Product features

- 1 Fret buttons
- 2 The Touch Sensitive Neck Slider
- 3 Strum Bar
- 4 Whammy Bar
- 5 Xbox 360 Guide Button/Directional Pad
- 6 Expansion port
- 7 Xbox 360 Live headset port
- 8 Adapter for early version of Xbox 360 headset
- 9 Start button
- 10 Star Power/select button

Product safety

- Avoid long playing sessions
- Take frequent rest breaks
- Avoid high volume levels
- See **Important Information** document

Product care

- Keep product dry, dust free, and away from an open flame or heat source.
- To clean, use a dry, clean cloth and no chemicals or water.
- Do not disassemble product or subject it to rough handling or abuse.



English

Having problems?

- 1 You may be out of range with the game console. Stand within 10 meters of the console and do not place metal objects in front of it. Try removing other wireless devices near the game console that may cause radio interference.
- 2 Make sure the guitar controller is turned on: press the guitar controller's Xbox 360 Guide Button for one second.
- 3 Make sure your console is turned on and a Guitar Hero® game is loaded.
- 4 Check the guitar controller's Ring of Light to make sure one quadrant is lit. If it is not, reconnect (pair) the game console with the guitar controller (setup step 5).
- 5 Check battery installation and replace dead batteries (setup step 1).
- 6 Refer to the Guitar Hero game for detailed playing instructions.

Español

Having problems?

- 1 You may be out of range with the game console. Stand within 10 meters of the console and do not place metal objects in front of it. Try removing other wireless devices near the game console that may cause radio interference.
- 2 Make sure the guitar controller is turned on: press the guitar controller's Xbox 360 Guide Button for one second.
- 3 Make sure your console is turned on and a Guitar Hero® game is loaded.
- 4 Check the guitar controller's Ring of Light to make sure one quadrant is lit. If it is not, reconnect (pair) the game console with the guitar controller (setup step 5).
- 5 Check battery installation and replace dead batteries (setup step 1).
- 6 Refer to the Guitar Hero game for detailed playing instructions.

Français

Having problems?

- 1 You may be out of range with the game console. Stand within 10 meters of the console and do not place metal objects in front of it. Try removing other wireless devices near the game console that may cause radio interference.
- 2 Make sure the guitar controller is turned on: press the guitar controller's Xbox 360 Guide Button for one second.
- 3 Make sure your console is turned on and a Guitar Hero® game is loaded.
- 4 Check the guitar controller's Ring of Light to make sure one quadrant is lit. If it is not, reconnect (pair) the game console with the guitar controller (setup step 5).
- 5 Check battery installation and replace dead batteries (setup step 1).
- 6 Refer to the Guitar Hero game for detailed playing instructions.

Português

Having problems?

- 1 You may be out of range with the game console. Stand within 10 meters of the console and do not place metal objects in front of it. Try removing other wireless devices near the game console that may cause radio interference.
- 2 Make sure the guitar controller is turned on: press the guitar controller's Xbox 360 Guide Button for one second.
- 3 Make sure your console is turned on and a Guitar Hero® game is loaded.
- 4 Check the guitar controller's Ring of Light to make sure one quadrant is lit. If it is not, reconnect (pair) the game console with the guitar controller (setup step 5).
- 5 Check battery installation and replace dead batteries (setup step 1).
- 6 Refer to the Guitar Hero game for detailed playing instructions.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device

© 2009 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

This product is manufactured under license from Microsoft Corporation. Microsoft, Xbox, Xbox 360, and the Xbox logos are trademarks of the Microsoft group of companies and are used under license from Microsoft.

Guitar Hero © 2009 Activision Publishing, Inc., Guitar Hero, Activision and RedOctane are registered trademarks of Activision Publishing, Inc. U.S. Patents Pending.

ACTIVISION AUTHORIZES THE USE OF THIS GUITAR HERO CONTROLLER ONLY WITH A GUITAR HERO GAME PRODUCT OR OTHER ACTIVISION LICENSED PRODUCT. ACTIVISION EXPRESSLY PROHIBITS THE USE OF THIS GUITAR HERO CONTROLLER WITH ANY OTHER GAME. NO OTHER LICENSE, EXPRESS OR IMPLIED, IS GRANTED.

620-001827.002



www.logitech.com/support

United States	+1 646-454-3200
Argentina	+0800 555 3284
Brasil	+0800 891 4173
Canada	1-866-934-5644
Chile	1230 020 5484
Latin America	+55 11 3444 6761
Mexico	001 800 578 9619

What do you think?
¿Cuál es su opinión?
Qu'en pensez-vous?
O que você acha?

Please take a minute to tell us. Thank you for purchasing our product.

Nos gustaría conocerla, si puede dedicarnos un minuto.
Le agradecemos la adquisición de nuestro producto.

Prenez quelques minutes pour nous faire part de vos commentaires.
Vous venez d'acheter ce produit et nous vous en remercions.

Reserve um minuto para nos dizer. Obrigado por adquirir nosso produto.



www.logitech.com/ithink