


# OnePres™

## 罗技无线屏幕分享器快速指南 Wireless Screen Sharing Kit Quick Start Guide

### 产品示意图 Introduction

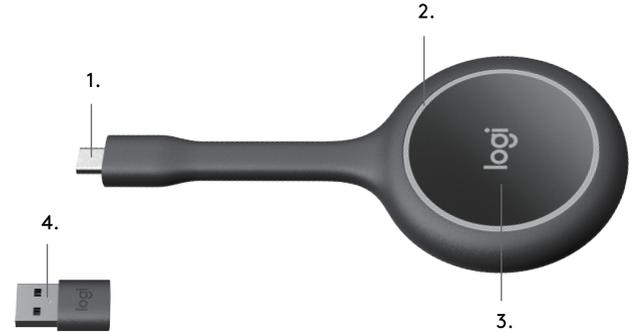

logitech 罗技®

www.logitech.com.cn

罗技（中国）科技有限公司

上海市静安区长寿路1111号悦达889中心25楼

客服热线

8008200338 (固定电话); 4008200338 (移动电话)

周一 ~ 周五 9:00 - 18:00

企业标准代码: Q/320500 LOGI 02-2018

扫码查看详细内容



版权所有©2020年罗技。罗技、Logitech、OnePres和其标志为罗技欧洲公司和/或其在美国及其他国家附属公司的商标，并或已注册。所有其它商标和标志均是其各自所有者的财产。

罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

©2020 Logitech. Logitech, 罗技, OnePres, and their logos are trademarks or registered trademarks of Logitech Europe S.A. or its affiliates in the United States and/or other countries. All other trademarks are the property of their respective owners.

Logitech is not responsible for any mistake in this quick start guide, subject to change without prior notice.

620-010152.002

#### 1.USB Type-C 连接器

1. USB Type-C connector

2.环形指示灯 “闪烁” 表示未连接，“常亮” 表示已连接

2. Circular indicator flash if not connected, light on if connected

3.按键 按压 开始/结束屏幕共享

3. Button press to start/stop screen sharing

4.USB Type-A 转换器 仅适用于接收端

4.USB Type-A adapter only applicable to receiving device

OnePres包装内，包含两只无线屏幕分享器，简称“分享器”。不区分发送端和接收端，可以互换使用。

OnePres includes two wireless screen sharing dongles which are swichable.

发送端：Transmitting device：

指连接分享器后，发送屏幕内容的设备，如电脑、手机等。

 
The device to share content with dongle, e.g. PC, SmartPhone, etc.

接收端：Receiving device：

指连接分享器后，接收屏幕分享的设备，如电视、电脑等。

The device to receive content with dongle, e.g. Smart-TV, PC, etc.

## 接收端-电脑 Receiving device - PC



1. 请将分享器插入接收端电脑，指示灯呈“闪烁”状态。

1. Plug in one dongle on receiving PC, the circular indicator starts flashing.



2. 打开“我的电脑”→“OnePres”磁盘驱动器→点击运行“01 Logitech\_OnePres\_Windows”。

2. Find "My computer" → "OnePres" disk driver → run "01 Logitech\_OnePres\_Windows".




3. 等待连接。

3. Wait for connecting.

## 发送端 Transmitting device

 提示：发送端的Type-C接口需支持DisplayPort功能。

Note: Transmitting device must have USB Type-C port with DisplayPort function.




4. 请将另一只分享器插入发送端的Type-C接口。

4. Plug in another dongle to the Type-C port of transmitting device.



5. 等待连接成功后，分享器指示灯由“闪烁”变成“常亮”。

 5. After connected, the indicator changes from "flashing" to "light on".




6. 按压发送端的分享器，开始分享屏幕。

6. Press the dongle on the transmitting device to start sharing.

## 接收端-智能电视 Receiving device - Smart-TV e.g. Mi Smart-TV

以小米智能电视为例

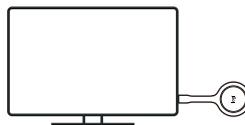


1. 请将分享器插入智能电视，指示灯呈“闪烁”状态。

1. Plug in one dongle on Smart-TV, the circular indicator starts flashing.



2. 打开“U盘”。

 2. Click to open USB disk.



3. 选中“02 Logitech\_OnePres\_TV”图标，点击“安装”，完成后打开应用。

3. Click the icon of "02 Logitech\_OnePres\_TV", run the application after installation.




4. 等待连接。

4. Wait for connecting.

## 发送端 Transmitting device

 提示：发送端的Type-C接口需支持DisplayPort功能。

Note: Transmitting device must have USB Type-C port with DisplayPort function.




5. 请将另一只分享器插入发送端的Type-C接口。

5. Plug in another dongle to the Type-C port of transmitting device.



6. 等待连接成功后，分享器指示灯由“闪烁”变成“常亮”。

 6. After connected, the indicator changes from "flashing" to "light on".



7. 按压发送端的分享器，开始分享屏幕。

7. Press the dongle on the transmitting device to start sharing.