

# INSTRUCTION MANUAL (PRELIMINARY)

## 900MHZ WIRELESS HANDSFREE

NOTICE: FOLLOWING MODIFICATIONS HAVE BEEN  
INTRODUCED TO OUR DEVICE:

1. TO TURN ON THE PHONE-SET (OZ4-0003), PRESS ITS  
BUTTONS FOR 20 SECONDS UNTIL LED FLASH  
CONTINUOUS FOR A FEW TIMES.
2. TO TURN OFF THE PHONE-SET, PRESS ITS BUTTONS FOR  
20 SECONDS UNTIL LED FLASH A FEW TIMES THEN  
GOES OFF.
3. TO BRING THE PHONESET ALREADY ON TO ACTIVE  
STATE, PRESS THE BUTTON FOR THREE SECOND. IN  
ACTIVE STATE, IT CAN WORK WITH EARSET TO  
ESTABLISH RF LINK;
4. TO BRING THE PHONESET IN ACTIVE STATE TO  
SLEEPING STATE, PRESS THE BUTTON FOR THREE  
SECOND.
5. TO TURN ON THE EARSET (OZ4-0004), PRESS ITS  
BUTTONS FOR 20 SECONDS UNTIL LED FLASH  
CONTINUOUS FOR A FEW TIMES.
6. TO TURN OFF THE EARSET, PRESS ITS BUTTONS FOR 20  
SECONDS UNTIL LED FLASH A FEW TIMES THEN GOES  
OFF.

**WARNING:**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - This device may not cause harmful interference, and
  - This device must accept any interference received, including interference that may cause undesired operation.
2. The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

# USER GUIDE

## *PREPARATIONS*

- **CHARGE THE HANDSFREE** Plug the car adapter into the DC supply & connect the car adapter into DC jack of both Earset and Phoneset. Earset and Phoneset LED will flash once a second during charging. LED will flash twice a second upon charging completion.
- **CONNECT HANDSFREE TO PHONE** Plug the 2.5mm audio plug of the Phoneset into audio jack of the phone. Different audio jack adapter may be required for different phone models. Check with your suppliers for adapter availability for your phone model.

## *MODE OF OPERATION*

There are three operation modes for handsfree:

- **OFF MODE** is a power down off mode. LED STATUS: Off.
- **STANDBY MODE** is the operating mode readies for user to pick/drop a call. LED STATUS: Flashes.
- **TALK MODE** means a link is established for user to talk over the handsfree system. LED STATUS: On.

## *TURN ON/OFF THE HANDSFREE*

- **TURN ON** – Press the key over 6 second until LED flashes rapidly for 3 sec. Stop pressing when flash stops and LED will continue to flash once every second.
- **TURN OFF** - Press the key over 6 second until LED flashes rapidly for 3 sec. Stop pressing when flash stops and the LED will stop flashing completely..

## *PICK & DROP A CALL*

- Make sure that Phoneset and Earset is in turned on & within 20m distance.
- **TO PICK-UP A CALL** press the Earset button once – line will be connected within at an average time of 1.5-sec (3 sec max). If connection fails, user will hear two beeps tone and need to reconnect the link again.
- **TO DROP A CALL**, just press the earset button once further.

## OUT OF RANGE REMINDER

- Earset generates a warning tone (1 beep per second for 15-sec) when distance between Earset & Phoneset exceed communication distance, approximately 20m.

## BATTERY-LOW REMINDER

Earset will remind user of low battery by:

- 4 beep & 4 LED flash every 5 seconds if Earset battery is low
- 2 beep & 2 LED flash every 5 seconds if Phoneset battery is low
- The Handsfree will terminate the communication link after 1-minute warning. No new calls will be allowed in low battery status before battery recharge.

## RESET

Users can reset the earset or Phoneset by plugging the provided car cigarette charger into its DC socket if the unit does not work properly.

## ID CODE MATCHING

All pair is factory programmed and user IS NOT REQUIRED TO DO ANY ID CODE MATCHING. Users are suggested to use this mechanism only that Earset & Phoneset are from the different package.

To program a Phoneset to work with another Earset, user shall:

- Put the pair close to each other and press the button on both units continuously for 3 seconds. LEDs will be continuously fast flashing.
- If the code matches successfully, LEDs will flash 4 times slowly and Earset will generate 4-beep tone.
- If the code matches fails, the Earset will generate 2 beep-tone.

### PRECAUTIONS

- Use ONLY provided car cigarette charger to charge the Handsfree.
- DO NOT CHARGE both Units outside the temperature range of 0 to +45 degree Celsius.
- DO NOT USE the both Units outside the temperature range of -5 to +50 degree Celsius.
- DO NOT STORE the Units outside the allowable temperature range of -10 to +60 degree Celsius.
- DO NOT TEMPER OR REMOVE THE LITHIUM ION BATTERIES
- SHALL DISPOSE WITH EXTREME CARE. DISPOSE IN FIRE MAY HIGH POTENTIAL RISK OF EXPLOSION.