


Get Ready

Install Batteries in the Transmitter

1. On the transmitter, set the **ON/OFF/CHG** switch to **OFF**.
2. Use a screwdriver to open the battery compartment.
3. Insert six AA batteries (not included), matching the polarities marked inside. Use alkaline batteries for optimal performance.

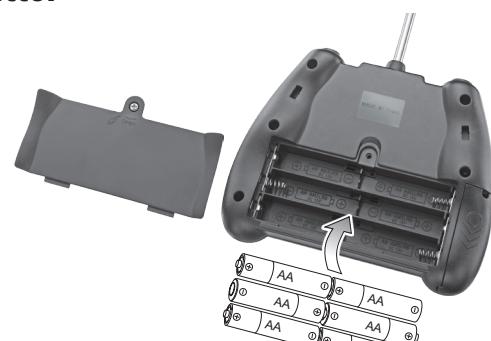


Charge the Twin Turbine

1. Switch **OFF** the Twin Turbine.
2. Set the transmitter's **ON/OFF/CHG** switch to **CHG**. The **CHARGE Indicator** lights.
3. Connect the charging cable (on the left side of the transmitter) to the Twin Turbine plane. The **CHARGE Indicator** flashes during charging.
4. When charging is complete, the **CHARGE Indicator** stops flashing and remains lit. Disconnect the charging cable and switch the transmitter to **OFF**.

Notes:

- A full charge takes 25 – 35 minutes. When fully charged, the Twin Turbine can fly for up to 5 minutes.
- Use only the included transmitter to charge the Twin Turbine.

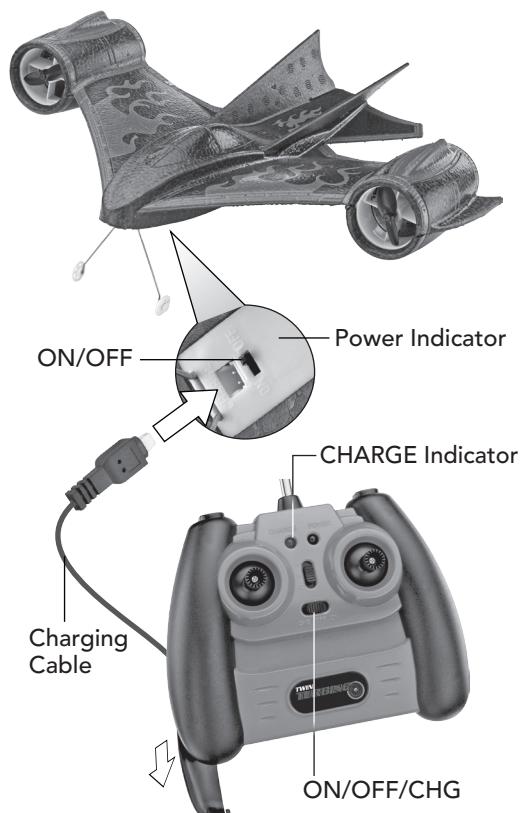

Flying Safely

- Do not touch the turbines while they are spinning.
- Do not fly your plane near transmitters with the same frequency (27.145 MHz).
- A nearby CB radio can interfere with your plane's control. If this happens, move the plane away from the radio.
- Adult supervision is recommended at all times.
- Never fly your plane in the street.
- Avoid high-impact collisions with people and objects.

Battery Notes

- Dispose of the old batteries promptly and properly. Do not burn or bury them. Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the plane for a long period, remove the batteries from the transmitter. Batteries can leak chemicals that can damage electronic parts.


Lithium Battery Notes

- Do not puncture or crush. Do not disassemble.
- Do not dispose of lithium batteries in the trash. Recycle at your local **RadioShack** store.
- If the electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention.
- Follow the manufacturer's instructions for charging the plane and do not charge longer than recommended. Unplug the charging cable when the battery is charged.
- Do not attempt to charge or operate damaged toys.


Fly Your Twin Turbine

- Find an open area to fly your plane. Avoid overhead high-voltage power lines and other sources of radio frequency interference.
- Choose sunny days or when there is gentle breeze. Avoid strong winds, rain, snow, and severe weather.

1. Screw the antenna onto the transmitter and fully extend it.
2. Set **Channel Switch (A/B/C)** correctly. Make sure the transmitter's channel switch matches the plane's channel. See label marking on the plane's bottom.
3. Switch **ON** the plane. The plane's **POWER Indicator** lights. Hold the plane by the underside or leave it on level ground for take off.
4. Set the transmitter's **Throttle** to the stop position, then switch **ON** the transmitter. The **POWER Indicator** flashes.
5. With the **Steering** set to the middle, push the **Throttle** all the way up and down once to initialize the plane.
6. Push the **Throttle** to the fly position, then toss the plane horizontally into the wind. Do not toss the plane heading up or down, or the plane will stall.

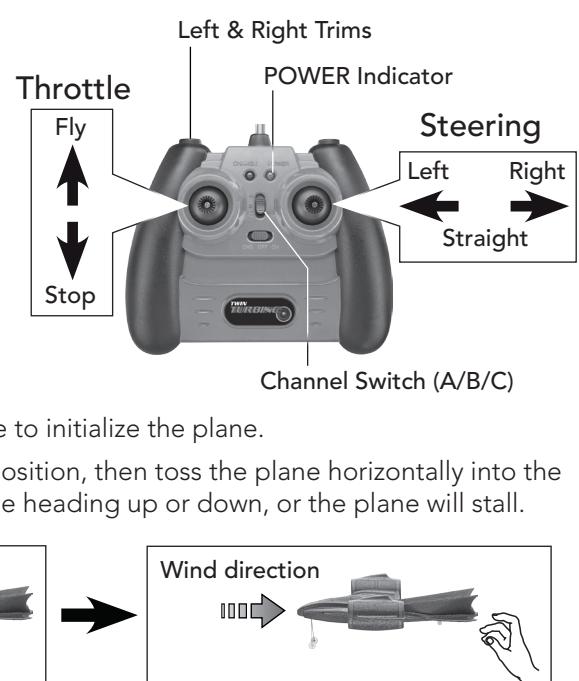

7. Trim the plane:
 - If the plane tends to turn right, press **Left Trim**; if it tends to turn left, press **Right Trim**.
 - Trim the plane until it flies straight. When the plane is properly trimmed, you can set the **Throttle** to the **Fly** position before tossing the plane.
8. To land the plane, let the plane face the wind, then push the **Throttle** to the stop position.
9. Turn **OFF** the plane and transmitter when you finish flying.

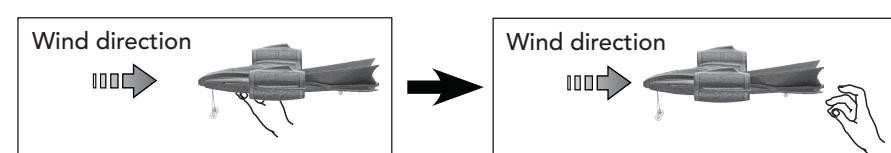

Thank you for purchasing your Twin Turbine Plane from **RadioShack**. Please read this user's guide before setting up and using your new plane.

What's Included

- Twin Turbine – Radio Controlled Plane
- Transmitter
- Antenna
- User's Guide

Features

- Suitable for outdoor playing
- Built-in landing gear for easy take-off and landing
- Up to 200 feet (61 meter) control distance

⚠ Warning: CHOKING HAZARD – Small parts. Not for children under 3 years.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local **RadioShack** store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES**.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser. Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact **RadioShack** at:

RadioShack Customer Relations,
300 RadioShack Circle,
Fort Worth, TX 76102

04/08

www.RadioShack.com