

Size : 140 x 198mm

— ⊕ — C M K


**RDB-68**

# REMOTE DOOR CHIME

- ▶ Trigger alarm when someone move your properties
- ▶ Easy install, no wiring needed
- ▶ Ultra loud alarm sound

## REMOTE DOOR CHIME

### Installation

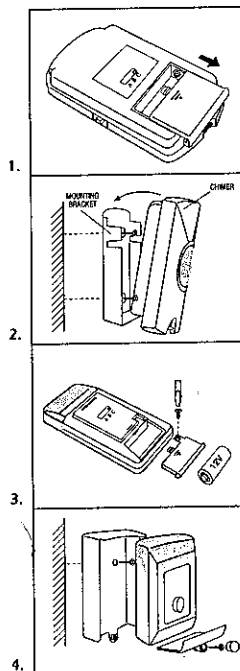

1. Remove the Door Chime from the mounting bracket by sliding it upward.
2. Open the battery door gently at the back of the unit. Take out the A23 battery and mounting accessories.
3. Insert 3 pieces of 'AAA' size batteries (not included) into the battery compartment (Fig 1).
4. Make sure batteries are in correct polarity as shown on the battery compartment before replace the battery door.
5. The unit can be fixed by mounting bracket provided. To mount the mounting bracket, drill two holes by placing the template on the desired location. Ensure holes aligned vertically. Insert screws into mounting holes, let the screws' head extend 3 mm (1/8 in) from the surface (Fig 2).
6. Put the Door Chime back to the mounting bracket by sliding it down.
7. Open the battery door of the remote controller by remove the screw.
8. Insert the A23 battery (included) into the battery compartment. Make sure battery is in correct polarity as shown on the battery compartment before replace the battery door. Replace the screw (Fig 3).
9. Test the remote controller by pressing the button. The LED on top of remote controller should flash. Make sure the remote controller and Door Chime are on the same channel by setting the channel switch.
10. Mount the mounting bracket onto the wall and fix it by the screw included. Then put the remote controller to the mounting bracket and secure it with the locker and locker screw provided (Fig 4).

### Operation

Set the selector switch of the Door Chime to either "Ding-Dong" or "Melody". It is now ready to use.

### Warning


Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Note

1. It is recommended that the unit to be placed in a dry clean place and avoid water infiltrate.
2. When the sound becomes weak, replace batteries. It is important that batteries are periodically check to obtain optimum performance.
3. When the unit is not in use, it is recommended to remove all batteries from the battery compartment.
4. The Door Chime can also powered by 4.5V (positive center) AC/DC adapter. If AC/DC adapter is used, the internal batteries should not be installed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

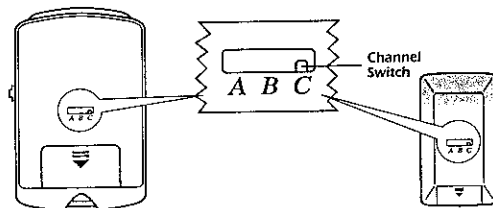

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- \* Consult the dealer or an experienced radio/TV technician for help.

FCC ID:  
JYT SUNAXRDB68T (TX)  
JYT SUNAXRDB68R (RX)