JL10 (WiFi, US) User Manual

Version: 1.0

A. General

1. User interface (for WiFi version)



- Top side (from left to right): MicroSD socket (under cover), *Power* key
- Front side: LCD; *Zoom* key (#11); *Page-up/Page-down* keys (#3); Dual-color LED (#13); *Number* keys (#4); *Directional* keys (#6); Optical finger navigation/OFN and *OK* key (#6); *Menu* key, *Home* key, *Return* key (#11)
- Right side: *WiFi* key (#5)
- Back side: Reset key
- Bottom: Mini-B connector; Phone jack
- Gravity sensor to change the display in Portrait and Landscape modes.
- 2. User interface of non-WiFi version is same as that of WiFi version except there is no *WiFi* key on the right side.

B. <u>Basic Operation</u>



- 1. Charging. With the USB cable included, connect the unit with AC/DC adaptor or computer's USB port. When charging, red LED will turn on. When the unit is full-charged, red LED will turn off. Typical charging time is 3 hours
- 2. Turn on the unit. Press the *Power* key under boot up screen is shown.
- 3. Turn off the unit. Press the *Power* key for around 4 seconds
- 4. Enter suspend mode. When the unit is on, press *Power* key once to enter suspend mode.
- 5. Key operation. To scroll, use OFN or *Directional* key. To select, press *OK* key once (i.e. press the OFN once). To escape, press *Return* key once.
- 6. Book reading. In Menu page, select "eBook Library". Scroll and select desired ebook you want to read.
- 7. Music playing. In Menu page, select "Music" and play the music. Scroll and select desired music you want to play.
- 8. Picture viewing. In Menu page, select "Picture" and select the picture shows in thumbnail. Scroll and select desired picture you want to watch

FCC Regulations:

- •This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- ◆This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.
- •Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The County Code Selection feature is disabled for products marketed in the US/Canada. For product available in the USA/ Canada markets, only channel 1~11 can be operated. Selection of other channels is not possible.