

User Manual

Starting the engine

When driving the vehicle, be sure to carry the remote controller.

1. The shift knob located in the Parking position.
2. Securely depress the brake pedal.
3. Securely push the push engine start switch and the engine will be started.

△ WARNING

Do not start the engine from outside the vehicle through the window. Doing so could lead an accident and injury. Be sure to sit in the driver seat to use the remote controller.

For important safety information, see “Starting the engine “ in the Starting and driving section.

- The warning indicated in the instrument panel (meter) if the push engine start switch is pushed under the following condition. It is not possible to start the engine when.
 - You don't have the remote controller.
 - The remote controller battery has run down.
 - You have a remote controller for another vehicle.
 - The engine may not start if the remote controller is placed in below.
 - a) In the glove box
 - b) In the door pocket
 - c) On the instrument panel
 - d) Corner of interior compartment

Stopping the engine

Remove the shift knob to the Parking position.

Push the push engine start switch and the engine will be stopped.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.