

INSTALLATION

Unpack the AC cord and connect it to a conveniently located AC outlet having 110V and 60Hz only. The Clock Display will illuminate and a flashing time will appear on the window. The Clock Display will continue to flash until the time has been set.


CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert. If the AC cord is disconnected or if there is a power failure, the AC cord must be reconnected. It is recommended to unplug the unit from the AC outlet during lightning storms or when unused for long periods of time.

15A) An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

16) Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

17) Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

18) AC Outlet

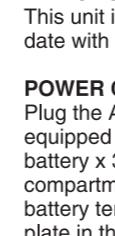

INTRODUCTION
This unit is designed to automatically synchronize its current time and date with radio signal generated from 'WWVB'.

POWER CONNECTION
Plug the AC power cord to a household outlet AC source. This unit is equipped with a battery back up system, it requires a 3V flat lithium battery x 3 CR2025 (not included). Insert battery in the battery compartment and connect the positive and negative (+ and -) battery terminals to the corresponding terminals on the plate in the battery compartment. If an AC power failure occurs, the clock automatically switches to the battery power supply, the clock and timer memory continue running. When the AC power resumes, the clock switches back to AC again.

GETTING STARTED

Press the reset button (24) located on the back of unit after AC plug in.

The unit will display full segment for 2 seconds, then it will enter the normal mode.


Display will light up.

Color will keep flashing.

The unit will display indoor temperature for 4 seconds.

Remote Unit will start searching for 433 MHz transmission signal in 5 minutes.

The unit will start searching RCC (RADIO CONTROLLED CLOCK) signal automatically.

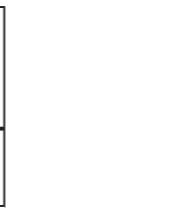


Display in good reception mode




- Antenna tower icon and all wave icons will keep displaying.



Display in poor reception mode

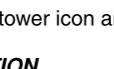


- Antenna tower icon and all wave icons will turn off.

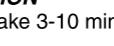

(1) **RECEPTION**

- It will take 3-10 minutes to complete.

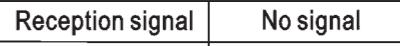

Note : For best results, place the radio controlled clock antenna (25) away from metal or electrical objects and near a window with a clear view to the sky.

