


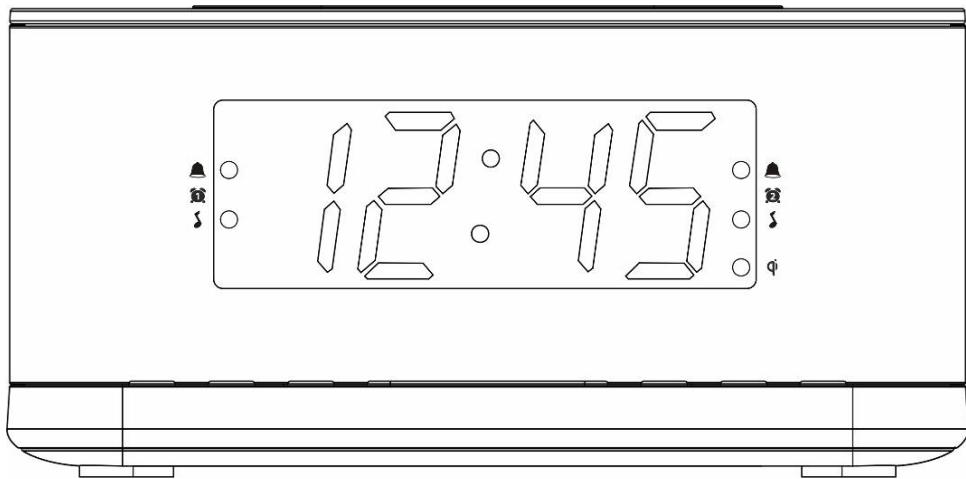

## Clock radio

### User manual

Qi-1110



Manufacturer: Wai Hang Electronic Co., Ltd.

Address: Room 1807-1808, 18/F., New Trade Plaza, Block B, 6 On Ping Street, Siu Lek Yuen, Shatin, NT., Hong Kong

Importer: xxxxxx

Address: xxxxxx

## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

|   |   |   |
|---|---|---|
|    | <p><b>CAUTION</b><br/>RISK OF ELECTRIC SHOCK<br/>DO NOT OPEN</p>  |    |
| <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p> | <p>CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> | <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p> |

### **CAUTION**

Use of controls or adjustments or performance other than those specified may result in hazardous radiation exposure.

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




15. This apparatus shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. **Mains** plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus completely, the main plug should be disconnected from the main socket outlet completely.
17. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
18. The marking information is located at the bottom of the apparatus.
19. The Caution Marking is located at the bottom of the apparatus.
20. **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
21. Minimum distances 5 cm around the apparatus for sufficient ventilations.
22. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
23. No naked flame sources such as lighted candles should be placed on the apparatus.
24. Attention should be drawn to the environmental aspects of battery disposal.
25. Use of apparatus in moderate climate.
26. **WARNING**

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

## **CAUTION:**

TO PREVENT ELECTRIC SHOCK, MATCH  
WIDE BLADE OF AC PLUG TO WIDE SLOT.  
FULLY INSERT.

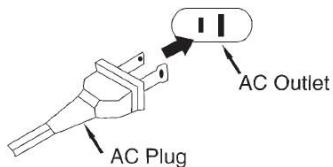

## COMPLIANCE WITH FCC REGULATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**⚠️ WARNING**


**DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD**

This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## Overview of the product

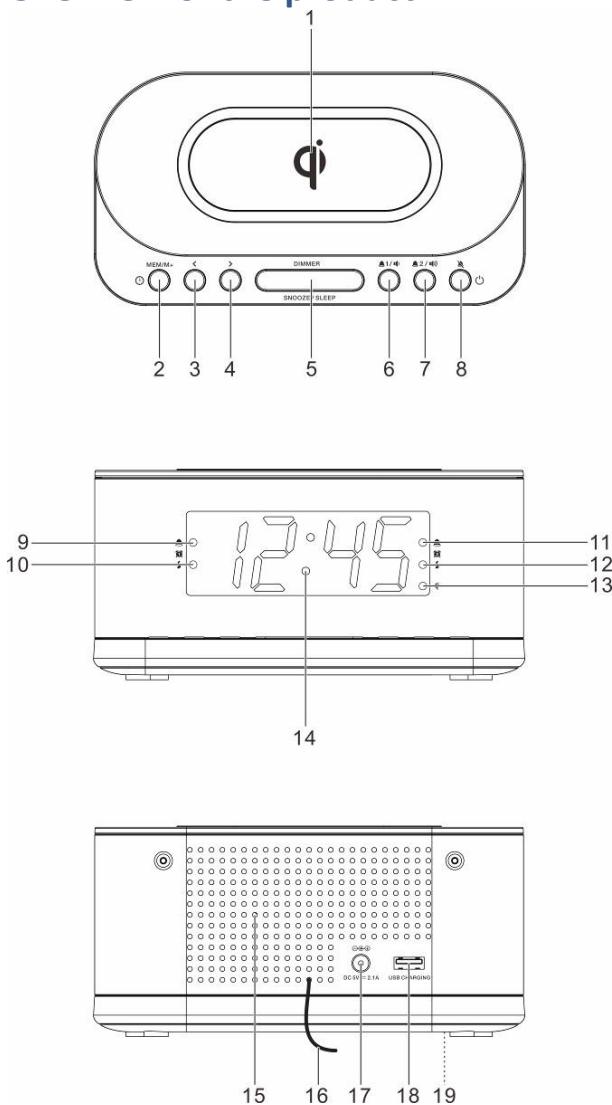

1. Qi (Wireless Charging) Area
2. CLOCK button / MEM/M+ button / SET button / Y-M-D button
3. BACKWARD button
4. FORWARD button
5. SNOOZE / SLEEP button / DIMMER button
6. ALARM 1 button / VOL DOWN button
7. ALARM 2 button / VOL UP button
8. POWER button / ALARM OFF button
9. Alarm 1 indicator (alarm)
10. Alarm 1 indicator (radio)
11. Alarm 2 indicator (alarm)
12. Alarm 2 indicator (radio)
13. Qi (Wireless Charging) Indicator
14. Display
15. Speaker
16. Antenna
17. DC IN jack
18. USB charging port
19. Battery compartment

## Connecting to power

1. Connect the cord of the power adapter to the DC IN jack of the radio.
2. Connect the plug of the power adapter to a wall socket.  
The radio is powered and in standby mode when you see the display is switched on.

## Backup system

The radio is equipped with a backup system. Open the battery door on the rear of the unit by press the tab and then lifting it. Insert 2x AAA size batteries (not included) according to the polarity diagram inside the battery compartment. (Alkaline batteries are recommended.)

- If a power cut occurs, the radio automatically switches to the battery power supply and keeps the clock and timer settings.
- When replacing the battery, do not disconnect the power adapter. Otherwise, all clock and alarm settings will be lost.

## Setting the clock

1. In standby mode, press and hold the CLOCK button to enter the clock setting mode.
2. Press the CLOCK button repeatedly to cycle through the setting options:

Year > Month/Day > Time

- **Setting year:** Press the BACKWARD or FORWARD button.
- **Setting month/day:** Press the BACKWARD button to set the month and FORWARD button to set the day.
- **Setting the time:** Press the BACKWARD button to set the hour time and FORWARD button to set the minute time.
- Press the SET button to confirm each setting option.

## Listening to radio

1. Press the POWER button to switch the radio on.
2. Press the BACKWARD or FORWARD button to adjust frequency.
3. Press and hold the BACKWARD or FORWARD button to automatically tune to the next available FM station.
4. Press the POWER button to switch the radio off.  
\*\*Unroll and extend the antenna to improve FM signal reception.

## Setting preset stations

You can store up to 10 preset stations.

1. Tune to a station.
2. Press and hold the MEM/M+ button until "P01" (or the next available preset slot) shows on the display.
3. Press the BACKWARD or FORWARD button to select a preset number (P01-P10).
4. Press the SET button to confirm. The preset station has been set up.
5. Press the MEM/M+ button repeatedly while listening to the radio to select a preset station.  
Alternatively, press the MEM/M+ button once and then press the BACKWARD or FORWARD button to select a preset station.

## Using the alarms

### Setting alarms

The radio lets you have 2 alarm settings. To set the alarms:

1. In standby mode, press and hold the ALARM 1 or ALARM 2 button to enter the alarm time setting mode.
2. In the alarm setting mode, press the ALARM 1 or ALARM 2 repeatedly to cycle through the setting options:

Alarm time > Alarm sound source > Alarm frequency

- **Setting alarm time:** Press the BACKWARD to set the hour time and FORWARD button to set the minute time.
- **Setting alarm sound source:** Press the BACKWARD or FORWARD button to select the alarm or radio as the alarm sound source. The corresponding alarm indicator will turn on according to your selection.
- **Setting alarm frequency:** Press the BACKWARD or FORWARD button to select an alarm frequency (1-5 = Monday to Friday, 1-7 = Everyday, 6-7 = Weekend only).

Once the alarm setting is done, the alarm will be automatically activated with the corresponding alarm indicator (alarm or radio) switched on.

### Turning the alarms on or off

When the clock time is displayed, press the ALARM 1 or ALARM 2 button to enable or disable the respective alarm. The corresponding Alarm 1 or Alarm 2 indicator (alarm or radio) will switch on when the alarm is enabled.

### Deactivating a sounding alarm

- Press ALARM OFF button to switch off a sounding alarm.
- When the alarm sounds, the corresponding Alarm 1 or Alarm 2 indicator (alarm or radio) flashes on the display.

### Snooze

- To temporarily silence a sounding alarm, press the SNOOZE button. The alarm will sound again when the snooze period (9 minutes) is over.
- The corresponding Alarm 1 or Alarm 2 indicator (alarm or radio) flashes on the display during the snooze period.
- To cancel the snooze period and the alarm, press ALARM OFF button.

### Sleep

- This sleep function defines the duration of time before the radio switches itself off automatically.
- When the radio is switched on, press the SLEEP button repeatedly to select a sleep period (Options: Off, 10, 20, 30, 40, 50, 60, 70, 80 and 90 minutes).
- The radio will automatically switch off when the sleep period is over.
- Press the SLEEP button to check the remaining time before the radio switches off.
- Press the POWER button to cancel this function.

### Display information

- In standby mode, press the Y-M-D button repeatedly to change showing the year, date, time and day of the week (d1 = Monday, d2 = Tuesday, d3 = Wednesday, d4 = Thursday, d5 = Friday, d6 = Saturday and d7 = Sunday).


- In radio mode, press the BACKWARD or FORWARD button once to briefly change the display from the clock time to the current radio frequency.

## Display brightness

- In standby mode, press the DIMMER button to change the brightness level of the display (low, high or off).

## Qi wireless charger:

1. Place a supported mobile device on the center of the charging surface on the top of unit as illustrated below. Qi Indicator on the display will illuminate. Charging will start automatically.

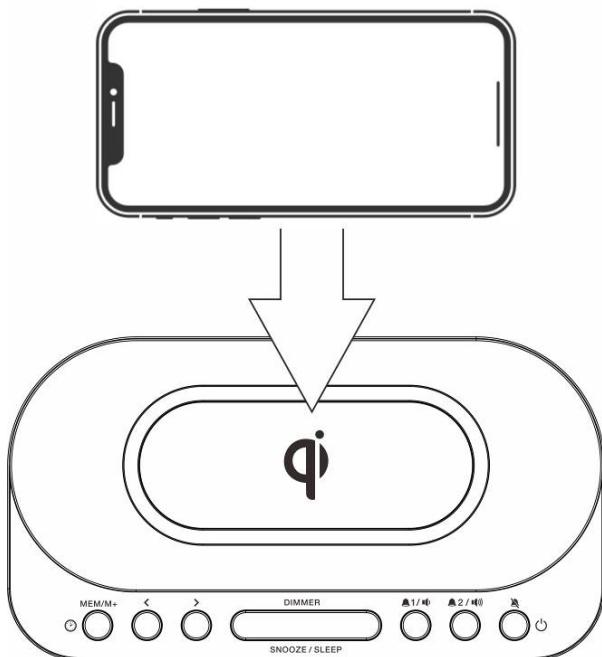

2. When finished, remove the mobile device from the unit.

### Notes:

- Check the mobile device's battery charging status using the charging icon displayed on the screen.
- Do not place any other object between the mobile device and the Qi wireless charger. The mobile device may not charge properly.
- If you connect a travel adaptor to the mobile device during wireless charging, the wireless charging feature may not be available.

| Qi (Wireless Charging) LED Indicator Operational States |         |         |                 |       |
|---|---------|---------|-----------------|-------|
| LED Color   | Standby | Charger | Charge Complete | Fault |
| Red   | Off     | Off     | Off             | On    |
| Blue  | Off     | On      | On              | Off   |

## **Built-in USB charger charging external device**

Connect an external device (e.g. smartphone, mp3 player) via a USB cable (not provided) to the USB jack on the back of the radio for charging. The radio cannot access the contents in the connected external device.

## **Specifications**

Tuner Range: FM: 87.5 – 108 MHz

Number of preset radio stations: 10

AC power adaptor: Input: AC 100-240 V, 50/60Hz  
Output: DC 5V 2.1A