

48452 TALKMAN OPERATION INSTRUCTIONS

一. HOW TO OPERATION

1. OPEN THE BATTERY DOOR AND INSERT ONE "9-VOLT" BATTERY AS INDICATED IN FIG .1.
2. SET WORKING BY USING "VOLUME CONTROL POWER ON/OFF"
3. ADJUST THE HEADBAND AND BOOM MIC AS INDICATED IN FIG .2.
4. WHEN TRANSMITTING, SPEAK CLEALY IN A NORMAL VOICE.

二. CAUTION:


1. WHEN THE SOUND BECOME WEAK IT IS TIME TO CHANGE THE BATTERY.
2. AFTER USE ALWAYS TURN POWER TO "OFF" POSITION.
3. KEEP YAUR HAND-FREE DUPLEX COMMUNICATOR IN A DRY AND CLEAN PLACE.

NOTE: THE MANUFACTURE IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY.

DSI (HK) LTD.
FCC ID: KNZ-48452
EXHIBIT #: CoA


DSI (HK) LTD.
FCC ID: KNZ-48452
EXHIBIT #: 63

FIG.1

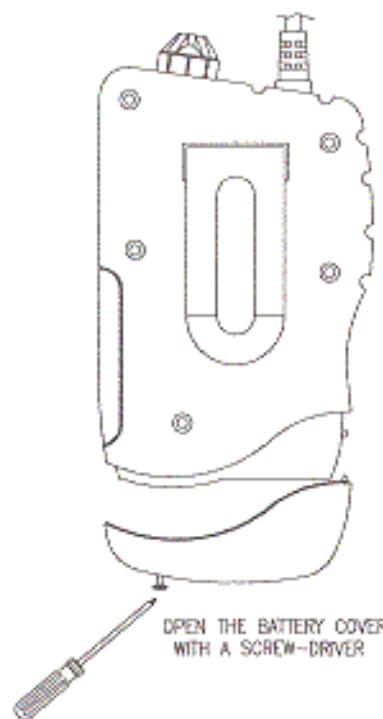


OPEN THE BATTERY COVER
WITH A SCREW-DRIVER

FIG.2

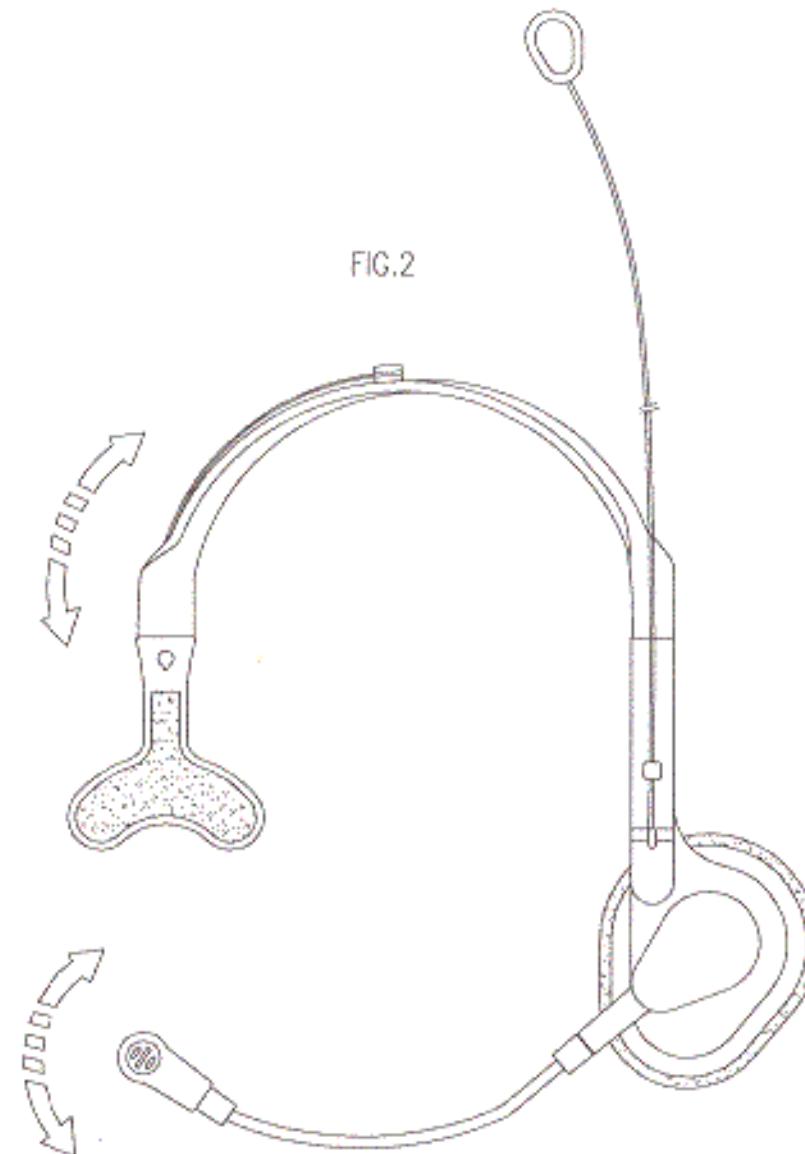

DSI (HK) LTD.
FCC ID: KNZ-48452
EXHIBIT #: 6c

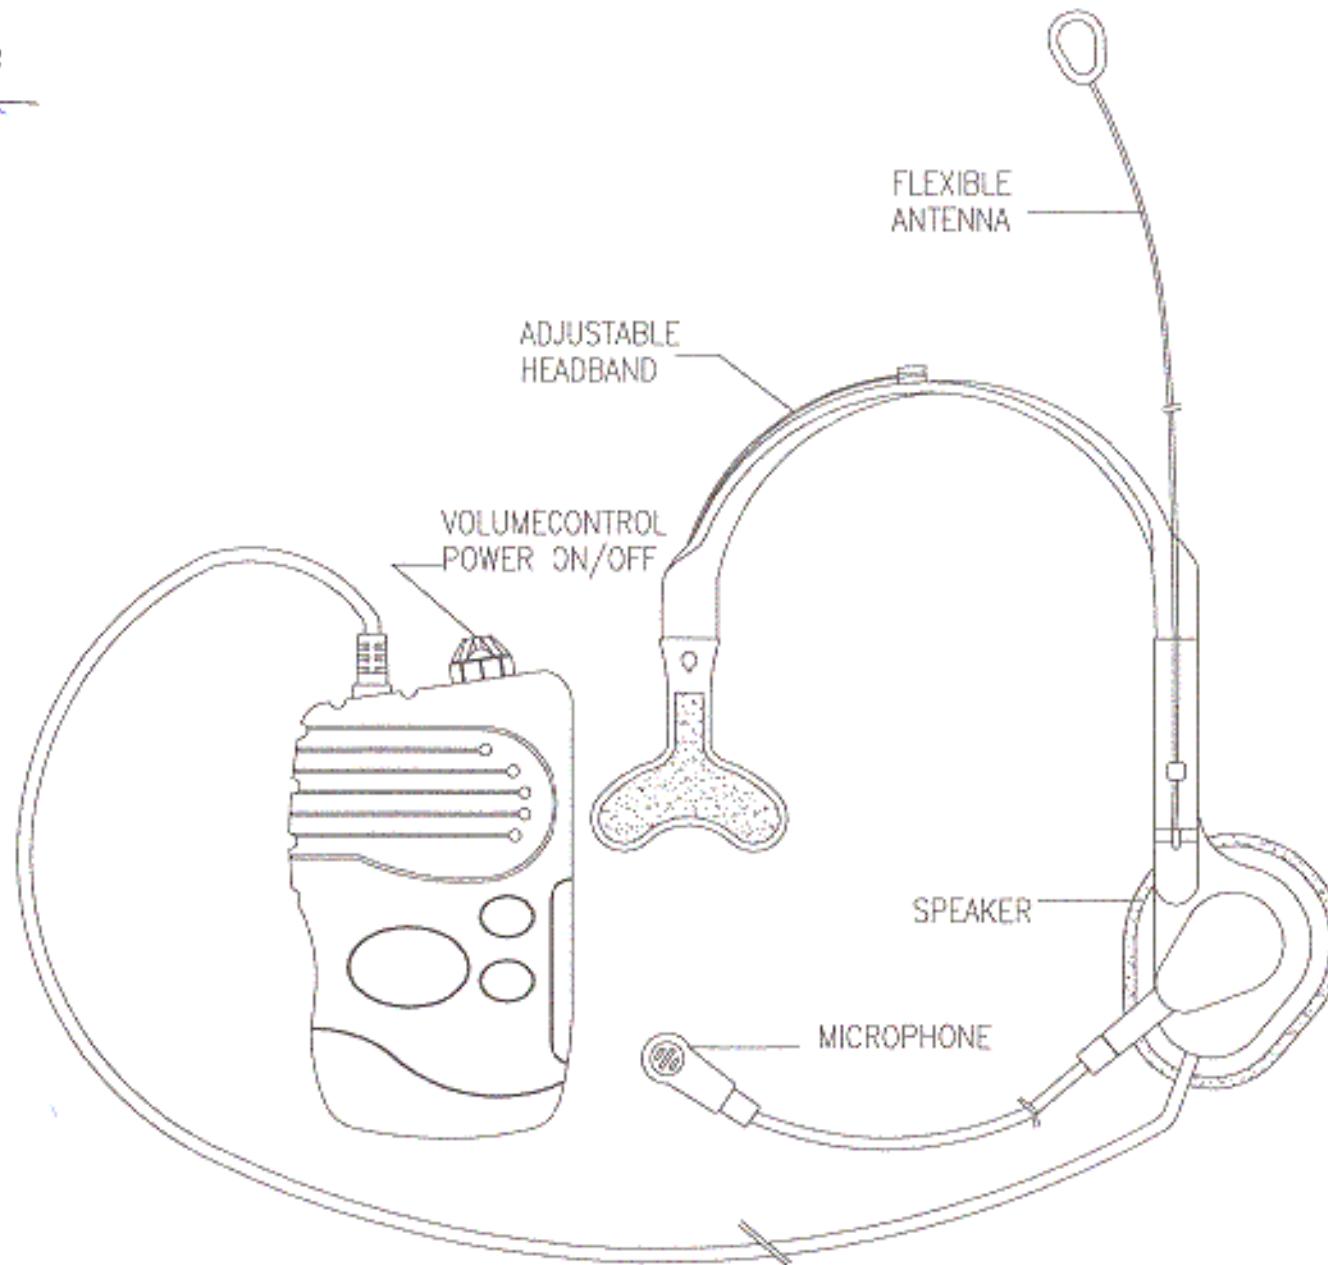

LOYAL TECHNOLOGY CO., LTD

DSI 48452 TALKMAN SPECIFICATION

- (1) OPERATION VOLTAGE : DC 9V (6F22 X 1)
- (2) MAXIMUM CURRENT : 35MA
- (3) MAXIMUM OUTPUT POWER : 3MW
- (4) OPERATION FREQUENCY : 72.100 / 72.900 MHZ

DSI (HK) LTD.
FCC ID: KNZ-48452
EXHIBIT #: 61