

FOR AGES 8 AND UP



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

How to Operate

1. Power on both the controller and the R/C vehicle. (See Figures 1 and 3).
2. Your transmitter (controller) has a left and right control stick. The left stick makes the left wheel move forward and backward. The right stick makes the right wheel move forward and backward.

Figure 1

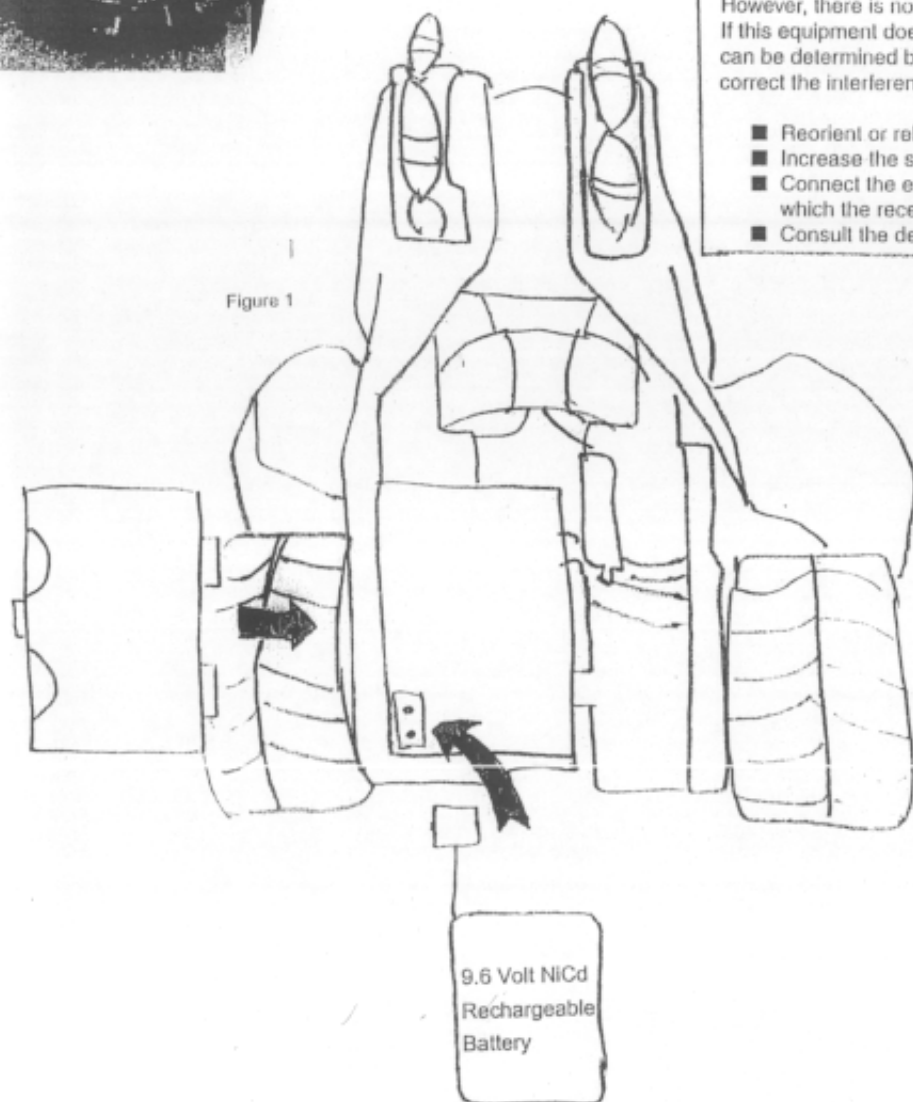 


Figure 3

 
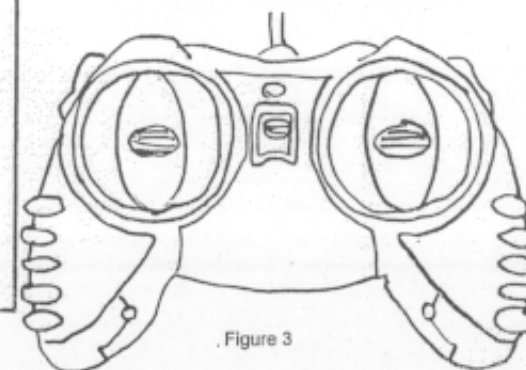 


Figure 2

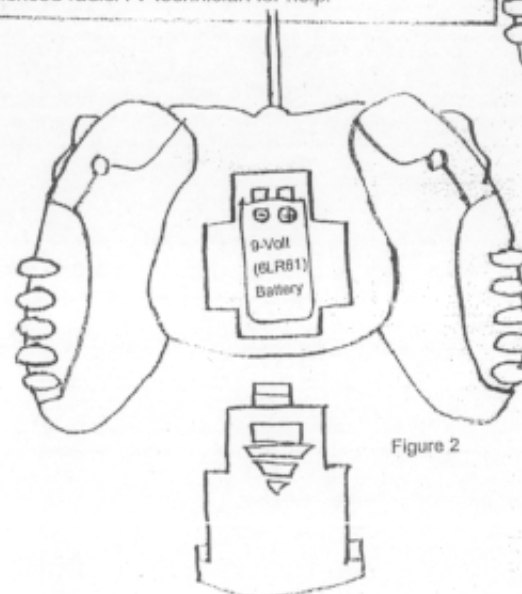

Battery Information

VEHICLE BATTERY INSTALLATION

1. Turn latch to open the battery door.
2. Place one 9.6 Volt NiCd battery plug into battery compartment.
3. Turn latch to close the battery door.

CONTROLLER BATTERY INSTALLATION

1. Slide open battery compartment door.
2. Insert one 9-Volt (6LR61) battery as illustrated. (Figure 2)
3. Replace battery compartment door.

BATTERY LIFE

Your vehicle should receive approximately a 15 minute run time at normal speed on a freshly charged 9.6 Volt NiCd battery. Please allow used batteries to cool down after each use and before recharging the batteries. Always follow the battery's manufacturer instructions regarding maintenance and care of the battery.

For Product Questions

Call 1-800-628-8882

Ask For Customer Service

ONLY IN THE US AND CANADA

MADE IN CHINA



© 2001 DSI Toys, Inc.,
Distributed by DSI Toys, Inc.
1100 West Sam Houston Parkway (North),
Houston, TX 77043

No. 27148

DSI Electronics™