



## HOW TO OPERATE YOUR WALKIE TALKIE

1. OPEN THE BATTERY COVER WITH A SCREWDRIVER AND SNAP IN A "9V" BATTERY.
2. TURN VOLUME CONTROL POWER KNOB CLOCKWISE TO ACTIVATE THE UNIT. YOUR WALKIE TALKIE IS NOW READY TO OPERATE.
3. PRESS THE "PUSH-TO-TALK" BUTTON FOR TRANSMITTING.
4. RELEASE THE "PUSH-TO-TALK" BUTTON FOR RECEIVING.
5. WHEN TRANSMITTING, SPEAK CLEARLY IN A NORMAL VOICE, HOLDING THE SET ABOUT 3" (7CM) FROM YOUR MOUTH.
6. TURN VOLUME CONTROL KNOB TO ADJUST SOUND LEVEL.
7. FOR BEST, FLIP UP THE ANTENNA.

## CAUTION

1. YOUR WALKIE TALKIE HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY. BE SURE NOT TO TOUCH INTERNAL COMPONENTS OTHER THAN REPLACING BATTERIES.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERIES.
3. AFTER USE, ALWAYS TURN OFF POWER.
4. KEEP YOUR WALKIE TALKIE IN A DRY AND CLEAN PLACE.
5. PLEASE DO NOT EXERT EXCESSIVE FORCE ON THE BOOM MICROPHONE OR THE HEADBAND OF THIS HEADSET UNIT.

### WARNING:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

MODEL NO: 48435

loyal  
model 48435.

Feb. 99.