

20-JAN-1999 17:15

DSI (HK) LTD.

**DSI (HK) LTD.**  
**FCC ID: KNZ48440**  
**EXHIBIT #: 5A**

ITEM NO. 48440

1. BASE STATION AND THE TWO WALKIE TALKIES ARE ON THE SAME FREQUENCY. WHEN ALL UNITS ARE ON, IT IS POSSIBLE FOR THREE PEOPLE TO COMMUNICATE WITH EACH OTHER AT THE SAME TIME.
2. OPEN BATTERY COMPARTMENTS AND SNAP IN ONE 9-VOLT BATTERY, CLOSE BATTERY COMPARTMENT. (FIG. 2)
3. TURN THE ON/OFF/VOLUME CONTROL TO DESIRED SOUND LEVEL.
4. FOR BASE STATION USE, PRESS THE PUSH TO TALK BUTTON ON HAND HELD MICROPHONE FOR TRANSMITTING WHILE SPEAKING IN A NORMAL VOICE LEVEL INTO THE MICROPHONE GRILLE.
5. FOR HAND HELD WALKIE TALKIE USE, PRESS THE PUSH TO TALK BUTTON FOR TRANSMITTING WHILE SPEAKING IN A NORMAL VOICE LEVEL INTO THE SPEAKER/MICROPHONE GRILLE.
6. RELEASE THE PUSH TO TALK BUTTON FOR RECEIVING.
7. TO SEND MORSE-CODE SIGNALS; WHILE PUSHING THE PUSH-TO-TALK BUTTON, PRESS THE MORSE CODE BUTTON MOMENTARILY AND RELEASE FOR DESIRED SIGNALS.
8. YOU CAN PRACTICE MORSE-CODE WITHOUT TRANSMITTING TO OTHER BY PRESSING THE MORSE-CODE BUTTON AND NOT PRESSING THE PUSH TO TALK BUTTON.
9. REQUIRE 3 "9 VOLT" BATTERIES (NOT INCLUDED)
10. THE UNITS MAY HAVE FEEDBACK (SQUEALING NOISE) WHEN PLAYED TOO CLOSE TOGETHER. MOVE FARTHER APART WHEN IT HAPPENS.

**CAUTION :**

1. YOUR TRANSCEIVER SET HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERY.
3. AFTER USE, ALWAYS RETURN THE ON-OFF SWITCH TO THE OFF POSITION.
4. KEEP YOUR SET IN DRY AND CLEAN PLACE.

WARNING : THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY

20-JAN-1999 17:16

DSI (HK) LTD.

+ 852 2375 1010 F.04

RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**LIMITED WARRANTY**

WE WARRANT ALL PRODUCTS TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 1 YEAR AFTER DELIVERY TO THE ULTIMATE USER, AND WILL REPAIR FREE OF CHARGE OR REPLACE AT NO CHARGE SHOULD IT BECOME DEFECTIVE UNDER THIS WARRANTY.

THIS WARRANTY DOES NOT COVER CARRY CASES, EARPHONES, BATTERIES, ANTENNAS, BROKEN OR CRACKED CABINETS OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE CABINET. BE SURE TO PACK CAREFULLY AND RETURN POSTAGE PAID INSURED TO:  
DSI TOYS, Inc.  
SERVICE DEPT. 1100 WEST SAM HOUSTON PKWY (NORTH)  
HOUSTON, TX 77043; U.S.A.  
THIS WARRANTY VALID IN U.S.A. ONLY.

DSI (HK) LTD.  
FCC ID: KNZ48440  
EXHIBIT #: SB