

THE OPERATION MANUAL FOR MODEL 48471

48471 is appreciated for its low power transmission, wide communication range & low interference. The operation frequency is 27.145 MHZ. In open area the effective communication range is around 900 meters and the handset is an ideal partner in outing, in camping, in downtown and other outdoor activities.

OPERATION

1. Open the battery compartment and install AA 1.5Vx6 battery with good contact.
2. Adjust the volume button with black color to turn on the red LED Now is in working condition turn the volume button clockwise to get the desired volume.
3. Turn the SQ button with red color to cut the noise.
4. Press TR/RC button in order to talk. Release TR/RC button in order to listen .
Approach mouth to Mic when talking.

CAUTIONS

1. Whistle will be heard if battery is used continuously for a long period. Replace a new battery.
2. Take out the batter when the walkie talkie is not in used.
3. Keep away from telecommunication building, elevator chambers and places where strong interference exist.
4. Avoid the exposure of walkie talkie to water.
5. The user are not allowed to modify the low power transmitters.