

1. BASE STATION AND THE HAND-HELD WALKIE TALKIE ARE ON THE SAME FREQUENCY. WHEN ALL UNITS ARE ON, IT IS POSSIBLE FOR TWO PEOPLE TO COMMUNICATE WITH EACH OTHER AT THE SAME TIME.
2. OPEN BATTERY COMPARTMENTS AND SNAP IN ONE "9V" (6LR61) BATTERY, CLOSE BATTERY COMPARTMENT. (FIG.2)
3. TURN THE ON/OFF/VOLUME CONTROL TO DESIRED SOUND LEVEL.
4. FOR BASE STATION USE, PRESS THE PUSH-TO-TALK BUTTON ON HAND HELD MICROPHONE FOR TRANSMITTING WHILE SPEAKING IN A NORMAL VOICE LEVEL INTO THE MICROPHONE GRILLE.
5. FOR HAND HELD WALKIE TALKIE USE, PRESS THE PUSH-TO-TALK BUTTON FOR TRANSMITTING WHILE SPEAKING IN A NORMAL VOICE LEVEL INTO THE SPEAKER / MICROPHONE GRILLE.
6. RELEASE THE PUSH-TO-TALK BUTTON FOR RECEIVING.
7. TO SEND SECRET-CODE SIGNALS; WHILE PUSHING THE PUSH-TO-TALK BUTTON, PRESS THE SECRET CODE BUTTON MOMENTARILY AND RELEASE FOR DESIRED SIGNALS.
8. YOU CAN PRACTICE SECRET-CODE WITHOUT TRANSMITTING TO OTHER BY PRESSING THE SECRET-CODE BUTTON AND NOT PRESSING THE PUSH-TO-TALK BUTTON.
9. REQUIRES 1 "9 V" (6LR61) BATTERY PER UNIT (NOT INCLUDED)
10. THE UNITS MAY HAVE FEEDBACK (SQUEALING NOISE) WHEN PLAYED TOO CLOSE TOGETHER. MOVE FARTHER APART WHEN IT HAPPENS.

NOTE:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

1. YOUR TRANSCEIVER SET HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY AND BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING THE BATTERY.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERY.
3. AFTER USE, ALWAYS RETURN THE ON-OFF SWITCH TO THE OFF POSITION.
4. KEEP YOUR SET IN A DRY AND CLEAN PLACE

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

LIMITED WARRANTY
DSI ELECTRONICS™

We warrant all products to be free from defects in material and workmanship under normal use for a period of one year after delivery to the ultimate user, and will repair free of charge or replace at no charge should it become defective under this warranty. This warranty does not cover carrying cases, earphones, batteries, antennas, broken or cracked cabinets or any other accessories used in connection with the cabinet. Be sure to pack carefully and return postage paid insured to:

DSI ELECTRONICS™, Service Dept.
1100 West Sam Houston Parkway (North),
Houston, TX 77043
This warranty is valid in the U.S.A. only.

CAUTION: BASE STATION EQUIPPED WITH A BREAKAWAY BUCKLE AS A SAFETY PRECAUTION. TO AVOID POSSIBILITY OF ENTANGLEMENT OR STRANGULATION. DO NOT ADD ANY STRINGS OR STRAPS TO THE BASE STATION OR IN ANY WAY BY-PASS THE BREAKAWAY BUCKLE.