


CRUISER 200

200 RANGE OUTDOOR LINE OF SIGHT

HANDLEBAR MOUNTED
WALKIE TALKIES

HARLEY-DAVIDSON

 Microphone
Antenna
Removable
Clip

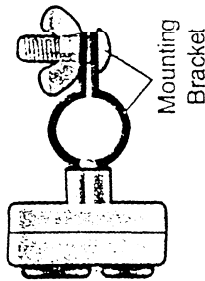


Mounting
Bracket

Ear Bud

On/Off
Volume Control


Battery
Compartment

 Mounting
Bracket

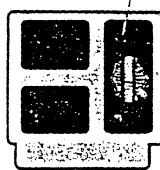

Stretch Cord

 Talk Button

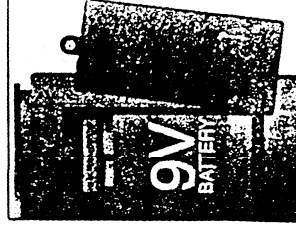

BATTERY INSTALLATION

INTRODUCTION

YOUR CRUISER 200 HEADSETS HANDLE BAR MOUNTED WALKIE TALKIES ATTACH DIRECTLY TO YOUR BIKE. THEY ALLOW YOU AND A FRIEND TO TALK TO EACH OTHER WHILE ON YOUR BIKES.

HOW TO OPERATE YOUR WALKIE TALKIES

1. LOOSEN SCREW TO REMOVE THE BATTERY DOOR.
2. INSERT ONE "9V" BATTERY IN EACH BASE UNIT. (SEE FIGURE 2)
3. REPLACE BATTERY DOOR.
4. TURN ON THE UNIT BY TURNING THE ON/OFF VOLUME KNOB. THE VOLUME WILL INCREASE AS THE DIAL IS TURNED. ADJUST SOUND AS DESIRED.
5. REMOVE THE "EARTHPIECE CLIP" AND THE EAR BUD AND MICROPHONE UNIT. CLIP THE EARTHPIECE UNIT TO YOUR SHIRT TO KEEP WIRES OUT OF YOUR WAY. PLACE THE EAR BUD INTO YOUR EAR AND ADJUST THE MICROPHONE SO THAT IT IS IN FRONT OF YOUR MOUTH.
6. PRESS THE "PUSH TO TALK" BUTTON AND BEGIN SPEAKING. YOUR MESSAGE WILL BE RECEIVED ON THE OTHER EARTHPIECE UNIT.
7. ONLY ONE PERSON CAN TRANSMIT AT ONE TIME. YOU CANNOT TALK AND LISTEN AT THE SAME TIME.
8. UNITS MAY HAVE FEEDBACK (HOWLING NOISE) WHEN PLAYED TOO CLOSE TOGETHER. MOVE FURTHER APART WHEN THIS OCCURS.
9. IN THE EVENT OF INTERFERENCE CAUSED BY OTHER RADIO SIGNALS IN THE VICINITY, MOVE TO A DIFFERENT LOCATION.

HOW TO PROPERLY MOUNT UNITS

THE CRUISER UNIT SHOULD BE MOUNTED DIRECTLY TO THE HANDLEBARS USING THE MOUNTING HARDWARE ATTACHED TO THE UNIT. UNIT WITH "PUSH TO TALK" BUTTON SHOULD BE MOUNTED NEAR HANDLE BAR GRIP SO THAT THE "PUSH TO TALK" BUTTON CAN BE EASILY PRESSED.

CAUTION:

1. YOUR TRANSCEIVER SET HAS BEEN FULLY ADJUSTED PRIOR TO SHIPMENT FROM THE FACTORY. BE SURE NOT TO TOUCH THE INTERNAL COMPONENTS OTHER THAN REPLACING BATTERIES.
2. WHEN THE SOUND BECOMES WEAK, IT IS TIME TO CHANGE THE BATTERIES.
3. AFTER USE, ALWAYS TURN THE "ON/OFF" VOLUME DIAL TO THE "OFF" POSITION.
4. KEEP YOUR SET IN A DRY AND CLEAN PLACE.

NOTE: BE SURE UNIT IS ALWAYS TIGHTLY MOUNTED. DO NOT RIDE WITH UNIT(S) HANGING FROM HANDLEBARS IN ORDER TO AVOID ENTANGLEMENT.


WARNING:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

LIMITED WARRANTY

DSI ELECTRONICS
We warrant all products to be free from defects in material and workmanship under normal use for a period of 1 year after delivery to the ultimate user, and will repair or replace or refund the purchase price of the defective unit at no charge should it become defective under this warranty. This warranty does not cover carrying cases, earphones, batteries, antennas, broken or cracked cabinets or any other accessories used in connection with the cabinet. Be sure to pack carefully and return postage paid insured to:

DSI ELECTRONICS, Service Dept.
1100 West Sam Houston Parkway (North),
Houston, TX 77063
This warranty is valid in the U.S.A. only.

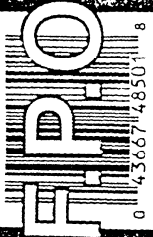

#48592

Requires 1 "9V" Battery Per Unit (Not Included)

For Product Questions
Call 1-800-628-8882
Ask For Customer Service

MADE IN CHINA

© 2001, H.D. All Rights Reserved.
Manufactured by DSI Toys, Inc. under license
from Harley-Davidson Motor Company

Distributed by DSI Toys, Inc.
1100 West Sam Houston Parkway (North),
Houston, TX 77063

PRECAUTION:
Do not mix old and new batteries.
Do not mix alkaline and carbon zinc (carbon zinc) batteries.
Do not use rechargeable batteries.
Check and replace batteries periodically to prevent corrosion.
Keep unit away from extreme heat.

PERIODIC
WARRANTY

SEE BACK PANEL FOR DETAILS

ASSEMBLE