

1.6. EUT Exercise Software

Test Mode		Mode 1: Transmit
1	Setup the EUT and simulators as shown on 1.5.	
2	Enable RF signal and confirm EUT active.	
3	Modulate output capacity of EUT up to specification.	