

Eclipse Series

RF Technology
rfinfo@rftechnology.com.au

November, 2001

R50 Receiver

Operation and Maintenance Manual

This manual is produced by RF Technology Pty Ltd
10/8 Leighton Place, Hornsby NSW 2077 Australia
Copyright © 2001 RF Technology

Contents

| | | |
|----------|--|-----------|
| 1 | Operating Instructions 1 | |
| 1.1 | Front Panel Controls | 4 |
| 1.1.1 | MON. Volume | 4 |
| 1.1.2 | MON. SQ | 4 |
| 1.1.3 | N. SQ | 4 |
| 1.1.4 | C. SQ | 5 |
| 1.1.5 | LINE | 5 |
| 1.2 | Front Panel Indicators | 5 |
| 1.2.1 | PER LED | 5 |
| 1.2.2 | SQ LED | 6 |
| 1.2.3 | ALARM LED | 6 |
| 2 | Receiver Options | 6 |
| 2.1 | Serial I/O Parameters | 6 |
| 2.2 | Receiver Low Battery Level | 7 |
| 2.3 | Audio High Pass (Notch) Filter | 7 |
| 2.4 | Audio Response | 7 |
| 2.5 | LOOP VOLTS Select | 7 |
| 2.6 | COS Polarity Select | 7 |
| 2.7 | COS Source/Sink Select | 7 |
| 2.8 | Channel Selectable Parameters | 7 |
| 3 | Receiver I/O Connections | 8 |
| 3.1 | 25 Pin Connector | 8 |
| 3.2 | 9 Pin Front Panel Connector | 9 |
| 4 | Channel Programming and Option Settings | 9 |
| 4.1 | Setting Options | 9 |
| 4.2 | Setting Channel Parameters | 10 |
| 5 | Circuit Description | |
| 5.1 | R50 Master Schematic (Sheet 1) | 11 |
| 5.2 | Microprocessor (Sheet 2) | 12 |
| 5.3 | RF Section (Sheet 3) | 14 |
| 5.4 | Receiver Section (Sheet 4) | 15 |
| 5.5 | Voltage Controlled Oscillator (Sheet 5) | 16 |
| 5.6 | Audio Processing Section (Sheet 6) | 16 |
| 5.7 | Power Generation Section (Sheet 7) | 17 |
| 6 | Field Alignment (Calibration) Procedure | 18 |
| 6.1 | Standard Test Equipment | 18 |
| 6.2 | Invoking the Calibration Procedure | 18 |
| 6.3 | The "Miscellaneous" Calibration Procedure | 19 |
| 6.4 | The "Line" Calibration Procedure | 20 |
| 6.5 | The "Reference" Calibration Procedure | 20 |
| 7 | Specifications | 21 |
| 7.1 | Overall Description | 21 |
| 7.1.1 | Channel Capacity | 21 |

| | | |
|-------------------|---|-----------|
| 7.1.2 | CTCSS | 21 |
| 7.1.3 | Channel Programming | 21 |
| 7.1.4 | Channel Selection | 21 |
| 7.1.5 | Microprocessor | 22 |
| 7.2 | Physical Configuration | 22 |
| 7.3 | Front Panel Controls, Indicators and Test Points | 22 |
| 7.3.1 | Controls | 22 |
| 7.3.2 | Indicators | 22 |
| 7.3.3 | Test Points | 22 |
| 7.4 | Electrical Specifications | 23 |
| 7.4.1 | Power Requirements | 23 |
| 7.4.2 | Frequency Range and Channel Spacing | 23 |
| 7.4.3 | Frequency Synthesizer Step Size | 23 |
| 7.4.4 | Frequency Stability | 23 |
| 7.4.5 | Number of Channels | 23 |
| 7.4.6 | RF Input Impedance | 23 |
| 7.4.7 | IF Frequencies | 23 |
| 7.4.8 | Sensitivity | 24 |
| 7.4.9 | Selectivity | 24 |
| 7.4.10 | Spurious and Image Rejection | 24 |
| 7.4.11 | Intermodulation | 24 |
| 7.4.12 | Modulation Acceptance BW | 24 |
| 7.4.13 | Noise Squelch | 24 |
| 7.4.14 | Carrier Level Squelch | 24 |
| 7.4.15 | Receiver Frequency Spread | 24 |
| 7.4.16 | Receiver Conductive Spurious | 25 |
| 7.4.17 | Audio Frequency Response | 25 |
| 7.4.18 | Audio Output Level | 25 |
| 7.4.19 | Audio Distortion | 25 |
| 7.4.20 | Channel Select Input / Output | 25 |
| 7.4.21 | Carrier Operated Switch Output | 26 |
| 7.4.22 | Current Source/Sink, Collector Voltage | 26 |
| 7.4.23 | CTCSS | 26 |
| 7.4.24 | External Squelch Input | 26 |
| 7.5 | Connectors | 26 |
| 7.5.1 | Antenna Connector | 26 |
| 7.5.2 | Power and I/O Connector | 26 |
| 7.5.3 | Test Connector | 27 |
| Appendix A | EIA CTCSS Tone Frequencies | 28 |
| Appendix C | Parts List | 29 |
| Appendix C | Engineering Diagrams | |
| C.1 | Block Diagram | |
| C.2 | Circuit Diagrams | |
| C.3 | Component Overlay Diagrams | |

WARNING

Changes or modifications not expressly approved by RF Technology could void your authority to operate this equipment. Specifications may vary from those given in this document in accordance with requirements of local authorities. RF Technology equipment is subject to continual improvement and RF Technology reserves the right to change performance and specification without further notice.

1 Operating Instructions

1.1 Front Panel Controls

1.1.1 MON. Volume

The Mon. Volume control is used to adjust the volume of the internal loudspeaker and any external speaker connected to the test socket. It does not effect the level of the 600 Ohm line or direct audio output.

1.1.2 MON.SQ

The MON. SQ. switch allows the normal squelch functions controlling the monitor output to be disabled. When the switch is in the MON. SQ. position the audio at the monitor speaker is controlled by the noise detector. The CTCSS, carrier and external squelch functions are disabled. This can be useful when you are trying to trace the source of on channel interference or when setting the noise squelch threshold. The audio from the 600 Ohm line and direct outputs is not effected by the switch position.

1.1.3 N.SQ

The N.SQ trimpot is used to set the noise squelch sensitivity. Use the following procedure to set the noise squelch to maximum sensitivity.

- (a) Set the toggle switch to the MON.SQ. position and set the MON VOLUME control to 9 o'clock.
- (b) Turn the N.SQ. adjustment counter clockwise until the squelch opens and noise is heard from the speaker. Adjust the VOLUME to a comfortable listening level.

(c) In the absence of any on channel signal, Turn the N.SQ. screw clockwise until the until the noise in the speaker is muted. Then turn the screw two additional turns in the clockwise direction.

1.1.4 C.SQ

The C.SQ trimpot is used to set the carrier squelch sensitivity. Carrier squelch is useful at higher signal levels than noise squelch and can be used from 1 - 200 uV input.

It is provided mainly for use in fixed link applications where a high minimum signal to noise ratio is required or where very fast squelch operation is required for data transmission. The carrier squelch will open and close in less than 2 mSec.

In most base station applications carrier squelch is disabled by turning the adjustment counter clockwise until the screw clicks.

The carrier squelch may be set to a predetermined level with the TecHelp software or by using the following procedure:

- (a) First turn the adjustment fully counter-clockwise. Then set the noise squelch as above.
- (b) Connect a source of an on channel signal with the desired threshold level to the receiver's RF input.
- (c) Turn the screw clockwise until the SQ LED goes OFF. Then turn the screw back until the LED just comes ON.

1.1.5 LINE

The LINE trimpot is used to set the line and direct audio output level. It is normally set to give 0 dBm (775 mV) to line with a standard input signal equal to 60% of maximum deviation at 1 KHz. The level can be measured between test socket pins 6 & 1 and set as desired.

1.2 Front Panel Indicators

1.2.1 PWR LED

The PWR LED shows that the dc supply is connected to the receiver and that the microprocessor is not being held in a RESET state.

1.2.2.1 **SQ LED**

The SQ LED comes on when the audio to the line and direct outputs is un-squelched.

The LED and squelch function are controlled by noise, carrier and tone squelch circuits.

1.2.3 **ALARM LED**

The ALARM LED can indicate several fault conditions if they are detected by the self test program. The alarm indicator shows the highest priority fault present. See Table 1.

| LED Flash Cadence | Fault Condition |
|--------------------------|---|
| 9 flashes, pause | External PA failure |
| 8 flashes, pause | Low dc supply on External PA |
| 7 flashes, pause | External PA Over Current Condition |
| 6 flashes, pause | External PA Over Temperature |
| 5 flashes, pause | Synthesizer unlocked |
| 3 flashes, pause | Unable to communicate with External PA |
| 2 flashes, pause | The current channel is not programmed or the frequency is out of range. |
| 1 flash, pause | Low dc supply voltage |
| LED ON continuously | Transmitter timed out |

Table 1: Interpretations of LED flash cadence

2 **Receiver Options**

There are many software selectable options. Some options are selected on a per channel basis, and some are defined globally (i.e. the parameter is fixed irrespective of which channel is selected). Below is a description of these global parameters

2.1 **Serial I/O Parameters**

There are two serial ports. There is the main serial port which is brought out to the front panel connector. This is referred to as PORT0. There is another serial port which is for factory use only. It is referred to as PORT1.

The baud rate, parity, and whether hardware flow control is enabled can be defined for PORT0. PORT0 is set by default to 57.6Kbps, with No parity, and No Hardware Flow Control.

2.2 Receiver Low Battery Level

This is factory set to 24.0V, and defines the level of the DC supply that will cause an Receiver dc supply low alarm.

2.3 Audio High Pass (Notch) Filter

At the audio output ports, the sub tone (CTCSS) can be notched by a high pass filter, this high pass filter can be software selected as enable or disable (the filter was bypassed). The default factory setting is audio high pass filter enable.

2.4 Audio Response

The output audio frequency response can be selected as 750uSec. De-emphasis or flat response, the default factory setting is 750uSec. De-emphasis.

2.5 LOOP Volts Select

The receiver can key up the transmitter with a DC current between Line+ and Line- of the audio output terminals. If this option is selected enable, it will be active by the squelch switch, then a 12Vdc supply is applied to the pair through 660 ohms of source impedance. If this option is disable, the loop is not used. The default factory setting is LOOP VOLTS enable.

2.6 COS Polarity Select

The COS (Carrier Operated Switch) can be selected as on with Signal or on with no Signal. The default factory setting is COS on with Signal.

2.7 COS Source/Sink Select

The COS can be used as a DC source or a free switch, if the Source option is selected, a 12Vdc voltage will be applied between COS+ and COS- terminals when the COS is off. The default factory setting is COS Source.

2.8 Channel Selectable Parameters

Each channel defines two complete set of parameters. One set of parameters is used when a transmitter keys up from the PTT-in input, and the other set is used when the transmitter keys up from the LOOP-in, the PTT switch, or the microphone PTT input.

Each set defines what frequency to use, what CTCSS sub-tone (if any) to use, what

maximum line deviation to use, what tone deviation to use, what transmit delay (a delay applied from PTT-in or LOOP-in to transmission), what transmit tail (delay from PTT-in, or LOOP-in, to transmission being stopped, and No-TONE period (a period of extra transmission in which No Tone is applied after PTT-in or LOOP-in has been released.

As well as these parameters, which Line (or Lines) can be selected, and whether the Lines should have Flat frequency response or have Pre-emphasis applied. Also, it can Enable or disable the extra 20dB gain pad.

Note that both Line1 and Line 2 can be selected (each with or without pre-emphasis), and if so, then the two signals will be mixed, and the Line potentiometer will adjust the level of them both.

3 Receiver I/O Connections

3.1 25 Pin Connector

The female D-shell, 25 pin, connector is the main interface to the transmitter. The pin connections are described in Table 3.

| Function | Signal | Pins | Specification |
|--------------------------------|---|-----------------------------|---|
| DC Power | +28Vdc(in) 0 Vdc +5Vdc(out) +12Vdc(out) | 13, 25 1, 14 17 15 | +24 to 32 Vdc Common Voltage Output for external Logic(100mA) Output for an external relay(120mA) |
| Serial Communications | SCLK MOSI CH_EN SPEARE_I/O1 SPARE_SEL | 12 6 18 16 5 | Serial Clock Bi-directional Data Pin Enables Channel Select Shift Register Spare Input or Output (for future use) Spare Select (for future use) |
| 600Ω Line Output | Line+ Line- | 8 19 | Transformer Isolated Balanced 600Ω 0dBm Output |
| Carrier Operated Switch Output | COS+ COS- | 10 22 | Opto Coupled Transistor Switch Output (10mA) |
| External Squelch Input | EXT_SQ | 11 | <1 VDC to Squelch >2 VDC or pen ckt to un-squelch |
| External Speaker Output | EXT_SPK | 24 | AC Coupled External Speaker Output, 5W @ 4Ω Load |
| Direct Audio Output | DIR_AUD | 21 | >10kΩ, AC Coupled Audio Output 2Vp-p @ 3kHz System Deviation |
| Discriminator Audio Output | DISC_AUD | 20 | >10kΩ, AC Coupled Un-Squelched 2Vp-p @ 3kHz System Deviation |
| Sub-Audible Tone Output | SUBTONE | 9 | >10kΩ, AC Coupled Un-Squelched, 2Vp-p @ 3kHz System Deviation |

Table 3: Pin connections and explanations for the main 25-pin, D connector

3.2 9 Pin Front Panel Connector

The female D-shell, 9 pin, front panel connector is an RS232 interface for serial communications to a terminal, a terminal emulator, or to a computer. The pin connections are described in table 4.

| Function | Pins | Specification | Pin name on IBM PC |
|----------|------|-----------------------------|--------------------|
| TXD | 2 | Transmit Data (Output) | RxD |
| RXD | 3 | Receive Data (Input) | TxD |
| RTS | 8 | Request To Send (Output) | CTS |
| CTS | 7 | Clear To Send (Input) | RTS |
| DTR | 6 | Data Terminal Ready(Output) | DSR |
| DSR | 1 | Data Set Ready (Input) | DCD |
| GND | 5 | GND | GND |

Table 4: Pin connections for the front panel 9 pin D connector

The pinout for the connector has been chosen so that a straight-through BD9 male to DB9 female cable can connect the transmitter to any male DB9 serial port on an IBM PC compatible computer.

Note that for connection to a modem, a cross-over cable will be required.

4 Channel Programming and Option Selections

Channel and tone frequency programming is most easily accomplished with RF Technology Eclipse50 software. This software can be run on an IBM compatible PC and can be used to calibrate a T50, R50, and PA50 as well as program channel information. See the Eclipse 50 users manual for further information.

But the R50 also has its own stand-alone high level interface, which can be accessed from a VT100 compatible terminal, or terminal emulator (such as HyperTerm which is available as a standard accessory with Windows).

The pertinent aspects of this High Level Interface are described below.

4.1 Setting Options

Note that any text in italics, represents data output by the R50 firmware, rather than command line data sent to the R50 firmware.

The R50, after powering up, will issue a command prompt of the form:

R50>

Via a terminal, or a terminal emulator, a user can type various commands in. The basic command to read parameters is:

R50> read par parameter_name

Where "parameter_name" is one of the following:

| Parameter Name | Parameter Function | Default Value | Parameter Range |
|----------------|-------------------------------------|------------------------------|------------------------------|
| LOOP_GEN | Generate a LOOP potential (see 2.5) | Off | Text: Off or On |
| PA_LOW_BAT | Low Battery Alarm Level (see 2.4) | 20.0 (Volts) | Floating Point Number < 32.0 |
| BAUD_RATE0 | Port 0 Baud Rate | 57600 (BPS) | Decimal number: 300 - 115200 |
| PARITY0 | Port 0 Parity | None | Text: None, Even, or Odd |
| FLOW CONTR OL | Port 0 Flow Control | Off ("On" not yet available) | Text: Off |

Table 6: Some User Defined Parameters

Note that the parameter names have been shown in upper case, but they can be typed in upper or lower case.

A parameter can be changed, or added, by typing

R50> set par parameter_name=parameter_value

As for parameter names, the parameter value can be Upper or Lower case if it is a text value, as against a numeric value.

4.2 Setting Channel Parameters

One can read the data from an existing channel by entering the command:

R50> read chan chan_number

Where chan_number is a number from 0 to 99.

Entering new channel values, or modifying existing ones is possible from the command line interface, but it is not recommended. It can be done by typing the following at a command prompt:

R50> set chan chan_number parameter_list

Where chan_number is a number from 0 to 99.

The format of the parameter_list is quite complex. It has 14 fields. Each field can be separated by a colon(:), comma(,), space, or tab.

For example set chan 0 25.0:35.0,100.0,120.0,0,5,2,0,5,2,10,11,0,3

Field1: Receive Frequency(in MHz). This is 25.0 MHz in the example.

Field2: Transmit Frequency(in MHz) if the exciter is keyed up by anything but PTT-in being asserted. This is 35.0 MHz in the example.

Field3: CTCSS Tone(in Hz) if PTT-in is asserted. This is 100Hz in the example.

Field4: CTCSS Tone(in Hz) if the exciter is keyed up by anything but PTT-in being asserted. This is 120Hz in the example.

Fields 5,6,7: These define the start-up delay (in hundredths of a second), the transmit tail (in seconds), and the no tone period (in tenths of a second) if the exciter keys up from PTT-in being asserted.

Fields 8,9,10: These define the start-up delay (in hundredths of a second), the transmit tail (in seconds), and the no tone period (in tenths of a second), if the exciter keys up from anything other than PTT-in being asserted.

Field 11: Selects the line parameter if PTT-in being asserted caused the exciter to key up. In the example it has disabled the 20dB gain pad, and enabled pre-emphasis on Line 2 (Line 1 is disabled).

Field 12: Selects the line parameter if anything other than PTT-in being asserted caused the exciter to key up. In the example it has disabled the 20dB gain pad, and it would enable pre-emphasis on Line 1 and Line2 (i.e. audio on each input is mixed).

Field 13: Selects the Tone deviation and the Maximum Line deviation if the exciter keys up from PTT-in being asserted. In the example, it has selected the default maximum line deviation (5kHz), and the default tone deviation of 750Hz. (See Tables 7 and 8)

Field 14: Selects the Tone deviation and the Maximum Line deviation if the exciter keys up from anything other than PTT-in being asserted. In the example, it has selected a maximum deviation of 2.5kHz, and a maximum tone deviation of 375Hz. (See Tables 7 and 8)

5 Circuit Description

The following descriptions should be read as an aid to understanding the block and schematic diagrams given in the appendix of this manual.

There are 7 sheets in the schematic in all.

5.1 R50 Master Schematic (Sheet 1)

Sheet 1, referred to as the "R50 Master Schematic", is a top level sheet, showing four circuit blocks, and their interconnection with each other, as well as the interconnection with all connectors and external switches.

P1 is the front panel DB9 RS-232 connector for attachment to a terminal, a terminal emulator, or to an IBM PC running the Eclipse50 software.

P3 represents the rear female DB25 connector.

J1 is the terminal on print circuit board, it is connected to the internal load speaker.

JP2 is for the attachment of an LCD display module. This has been included for later development.

JP3 is a specialised connector for test and factory configuration use only.

D102, D103, and D104 represent the three front panel LEDs.

5.2 Microprocessor (Sheet 2)

Sheet 2 describes the basic microprocessor circuitry.

The core CPU is the Motorola XC68HC12A0. It is configured in 8 bit data width mode.

The CPU is clocked by a 14.7456MHz crystal oscillator circuit (top left) comprising the JFET Q202, and two switching transistors Q203 and Q204.

The CPU contains an 8 channel A/D converter whose inputs are identified as AN0, AN1, ..., AN7.

AN7 is used as LOCK detect inputs from the Locked Loop (PLL) circuits (see 5.6)

AN6 is used to sense the noise squelch level setting.

AN5 is used to sense whether or not the dc supply is within spec or not.

AN4 is used to sense the audio from the discriminator, so the R50 receiver can be used as a deviation meter.

AN3 and AN1 are inputs from the PLL circuits that sense the bias voltage on the VCO control varactor for each VCO.

AN2 is used to sense the carrier squelch level setting.

AN0 is used to sense the RF input signal strength which is detected by the IF chip.

FRDY is an output from the flash. It goes low when the Flash starts to write a byte of data, or erase a block, or erase the whole chip, and it returns to its default high state when the action requested has completed.

FPSW1, FPSW2 and FPSW3 are three pins that have been reserved for future use as switch inputs.

LOOP/VOLTS_SEL is a CPU output that when high applies 12V of dc feed to the audio output.

LINE_LEVEL_U/D and LINE_LEVEL_INC are CPU outputs which are reserved for controlling a digital potentiometer in future.

COS_VOLTS_ON/OFF is a CPU output that when high applies 12VDC feed to COS+ terminal, so that the COS can be selected as +12VDC source or a free switch.

COS_POLARITY is CPU output that when low turns Opto-coupled transistor switch U601on. It is controlled by the noise squelch detect, carrier squelch, or external squelch signal

SQ is a CPU output that when low turns 600W line and direct audio path on. It is controlled by the noise squelch detect, carrier squelch, or external squelch signal

N_BLK_EN is a CPU output that when low turns noise blanker option off.

CTCSS_SEL is a serial bus select pin. It is used to select the FX805 chip(U500), which is used to decode CTCSS tones. (see 5.5)

PLL_SEL is a serial bus select pin. It is used to select the PLL chip in the PLL circuit (U302). (See 5.6)

RCV_ADSEL is a serial bus select pin. It selects the quad Digital to Analogue converter (DAC) that sets the levels for the 12MHz reference oscillator bias voltage, 21.855MHz oscillator bias voltage, noise squelch comparator bias voltage and the LCD bias circuit. (see 5.4)

CH_EN is a serial bus select. It is brought out to the rear panel and is used to interface to the channel encoder on the rear daughter-board. (See 5.1)

FLAT and DE_EMPHA are outputs logically inverted each other, when FLAT pin low, the audio output is flat response, when DE_EMPHA pin low, audio is 750uSec de-emphasized.

F0_PLL is the F0 outputs of the PLL chip divided by 100. They should be 312.5Hz square waves, except for brief periods when frequencies are being changed. (See 5.6)

MON_SW is used to sense front panel MON.SQ switch.

LCD_DB7 is an input used to sense if the LCD display module is busy processing the last command sent to it.

ECLK is a pin that at start-up only, should have the CPU system clock of 7.3728MHz on it.

SQ_LED, ALARM_LED, are CPU outputs that drive (when low) the SQ LED, and the ALARM LED on.

T/R_RELAY_H is a spare pin which is not used in R50 receiver.

SCLK, and MOSI are used as the core of a serial bus. SCLK is a clock pin, and MOSI is a bi-directional data pin.

DBGTX_TTL, DBGRX_TTL are RS232 transmit and receive (TTL) data pins which are connected to the debug port after conversion to/from RS232 compatible voltage levels by U202 and U201.

TXD_TTL, RXD_TTL, RTS_TTL, CTS_TTL, DTR_TTL, DSR_TTL, are RS232 data pins which are connected to the main front panel serial port after conversion to/from RS232 compatible voltage levels by U202 and U201.

N_DET is used to sense the noise squelch output of the receiver section. (see

SUBTONE_IRQ is used to sense the subtone decoded comes from the FX805 (U500). INT is the CPU interrupt input pin which is used to detect the external squelch signal.

BKGD is a bi-directional I/O pin used to communicate with the core of the CPU. It is connected to the debug port and is utilised by specialised hardware to control the CPU externally, even without any firmware being present in the Flash.

The RESET pin is both a low active input and a low active output to the CPU. If generated externally to the CPU, it forces the CPU into reset, and if the CPU executes a RESET instruction this pin will be driven low by the CPU.

Whenever there is insufficient volts (< 4.65V) on pin 2 of the MC33064D (U203), it will keep its RES output low. After the voltage has met the right level it will assert its output low for another 200 milliseconds. Thus the CPU will be held in reset until VCC is at the correct level. Thus the PWR_OK LED will only light when VCC is within specification, and RESET has been released.

S200 is a momentary push-button switch that, when pressed, will cause the CPU to be reset.

MON_SQ is a CPU output to set the monitor speaker on or off

LCD_RS, LCD_R/W, and LCD_E are reserved for interfacing to an LCD display module. Note that this feature has not been implemented.

U205 is used to select whether the Flash or RAM is to be read or written.

U207 is a single supply, 5V, TSOP40 Flash chip of size 8, 16, or 32 Megabits, and is used to store the firmware.

U208 is a 1, or 4, Megabit Static RAM in an SOP-32 package, and is used for both code and data. The code in the RAM is copied from the Flash, at start-up.

5.3 RF Section (Sheet 3)

Sheet 3 is a schematic of RF section, which itself refers to two other subsheets.

U301 is a quad Digital to Analogue converter (DAC), OUTA (pin2) is used to adjust the 3rd local oscillator frequency. OUTB (pin1) is used to adjust frequency of the 12MHz reference. OUTC(pin16) is used to set the noise squelch comparator offset

voltage. OUTD (pin15) is used to set the LCD bias voltage, this feature is not used in this version. Communication between U301 and MicroController U204 is via the serial bus.

U302 is a dual channels PLL chip, X301 is the reference for both PLL channels, PLL channel 1 is for the 1st VCO, channel 2 is for the 2nd VCO. C315, C317, C327, R316 and R317 are components of loop filter for the 1st VCO, C316, C328, C329, R330 and R331 are for loop filter of the 2nd VCO. U303A, U303D are buffers that send the bias voltage of two VCOs to MicroController U204.

U304A, U304B convert the F0LD of the PLL chip to a square wave by a division of 100, and send the signal to MicroController U204.

5.4 Receiver Section (Sheet 4)

RF input signal (25MHz-50MHz) is filtered by a high pass filter (C401, C402, C403, C407, C415, C416, C417, C419, C420 and L401, L404, L405, L406) and a low pass filter (C404, C405, C406, C421, C422 and L402, L403, L407, L408). Q401 is the front-end amplifier, capacitors and coils between Q401 and C440 provide additional filtering for RF signal amplified by Q401. MX401 is a double balanced mixer which converts the RF signal to the 1st IF, the frequency of the 1st IF is at least three times higher than the highest RF frequency to obtain a good image and spurious rejection. In R50 receiver, the 1st IF frequency is 246MHz.

Q402 is used to amplify the 1st IF signal, FIL401 is a SAW filter which provides an excellent spurious rejection for the 1st IF. The filtered IF signal is then fed to a double balanced mixer MX402, the output of MX402 (the 2nd IF) is amplified by Q403, the 2nd IF frequency is selected at 21.4MHz to avoid the interference from in band RF signal.

Q404 is a gate of the noise blanker, the gate is controlled by the impulse noise detector.

FIL404 and FIL405 are two 21.5MHz crystal filters which can be equivalent as a four pole crystal filter, the filer provides minimum 40dB attenuation at adjacent channel frequency. C448, C477, L423 and components between FIL405 and U401 are matching network for the filter.

U401 is IF receiver IC which includes mixer, oscillator, amplifiers and discriminator. The frequency of oscillator is 21.855MHz, it can be tuned by the 3rd_LO_ADJ voltage.

The product of mixer is 455KHz, build in amplifiers of U401, FIL402 and FIL403 provide sufficient gain and adjacent channel rejection for 455KHz IF signal to be discriminated.

Pin9 of U401 is recovered audio output, C411, C412, C413 and R441, R444 and U402A are working as a high pass filter to eliminate the audio frequency, U402B amplifies the FM noise signal, D403 and C438 convert the noise level to a DC voltage. U402C works as a comparator, the offset voltage can be set by the OUTC of U301.

Pin8 of U401 is the other recovered audio output which can be muted by pin5, discriminated audio signal is amplified by U605A to a sufficient level for line level detector, then fed into Audio Section (Sheet 6).

Pin7 of U401 is the Radio Signal Strength Indicator (RSSI) output, U402D is a buffer for send RSSI voltage to MicroController.

Q405 and Q406 are amplifiers for impulse noise signal, the impulse noise is then detected by D401 and U403, C489, R450 and U404 form a 2uSec noise blanking pulse when the impulse noise is detected. Q408 converts the CMOS level to a required switch level to control the noise blanker gate Q404.

U303B and Q407 work as gain control circuit to reduce the Intermodulation which is produced from impulse noise amplifiers.

5.5 Voltage Controlled Oscillator (Sheet 5)

There are two similar VCO circuits in this sheet, the difference between these two VCO is component values, so only one VCO circuit is illustrated in this section.

Q501, C532, C533, C534 and L501 are working as a Colpitts oscillator, the frequency of the oscillator is decided by the tuning voltage of a varactor D501 which comes from the loop filter of the 1st PLL. Q503 is used to reduce the noise on power supply. D503, R517 and C519 are working as AGC circuit to improve output of the VCO signal.

MMIC amplifier MA501 provides about 20dB gain for the VCO signal and feeds it to the PLL chip. MA502 and MA503 provide about 30dB gain of the VCO signal to drive the double balanced mixer MX401, Q506 and those components of which value with "*" are not used in this version, they will be used in case of higher drive power which is required by some high LO level mixer.

5.6 Audio Processing Section (Sheet 6)

U605B, R642, R643, R644, C626, C627 and C628 are working as a 3KHz low pass filter, in addition, the discriminated audio signal level from U605A is attenuated by the low pass filter to fit the dynamic range limitation of CTCSS chip U602.

U602 is a CTCSS tone encoder and decoder. The integrated circuit is also capable of generating and receiving DCS signals, but at this stage this has not been implemented.

The CPU accesses U602 via the serial bus using MOSI, SCLK, and the low active Select signal CTCSS_SEL.

4MHz crystal X401 is used as the reference of the CTCSS decoding. The build-in high pass filter of the audio path (Pin 10 to Pin 11) can eliminate the subtone, this filter can be bypassed by the MicroController. The subtone output from Pin17 is amplified by U605C, through C604 connected to the DB25 terminal on rear panel.

U609B, U607A and U607B are working as a flat/de-emphasis response switch, it can be selected by control signal FLAT and DE_EMPHA from the MicroController U204. U607D and U607C is the squelch switch for line output and speaker.

U609C is the amplifies for 600W line output, U609D is the amplifier for direct audio output, the output level of 600W line and direct audio are adjustable via VR601 on the front panel.

U604 is the power amplifier for internal and external speaker, the power level can be adjusted by VR602 on the front panel.

Depending on the squelch, RL602 will apply a 12VDC to the 600W line output when loop function is selected. If the loop function is not used, RL602 always stay in the position of which C619 is bypassed. The position of RL602 is controlled by the signal LOOP/VOLTS_SEL from the MicroController U204.

Opto-coupled transistor Switch U601 provides a COS (Carrier Operated Switch) output which is controlled by COS_POLARITY signal from the MicroController. The output COS+ and COS- can be used as +12V DC source or a free switch depending on the status of the relay RL601, RL601 is controlled by COS_VOLTS_ON/OFF signal from the MicroController U204.

Discriminated audio level is detected by D604 and C623, signal LINE_LEVEL is connected to the analog-digital converter input pin of the MicroController for calibration purpose.

5.7 Power Generation Section (Sheet 7)

There are three switch-mode dc-dc converters in the board. These use monolithic converters based on the National LM2595. Two of the converters are 12V converters and one is a 5V converter.

The power in to the whole exciter is the voltage rail 28V.

U907 converts this down to 12V.

U908 is set up as an inverter, and uses the 12V rail to create -12V.

U909 converts the +12V rail to +5V for all the digital circuitry.

The +12V rail is used to power the two on-board relays, as well as up to one extra off-board relay. It is also dropped, via a linear regulator (U910) to produce the +10V rail, which in turn is dropped by another linear regulator U911 to produce +5V.

Similarly U913 and U914 are linear regulators that produce -10V and -5V from the -12V output of U908.

+2.5V and -2.5V are not used in the R50 receiver, the reason of being showed on the schematic diagram is to keep same design of the T50 power generation section.

D911 is a 4.096V (3%) reference diode. Its output is buffered by U906 which then produces a reference voltage rail Vref, which is used by the CPU's A/D converter, and the DACs.

6 Field Alignment (Calibration) Procedure

6.1 Standard Test Equipment

Some, or all of the following equipment will be required:

Power supply set to 28Vdc, with current >1A.

RF Signal Generator
50 Ohm Output impedance
Frequency range 25-50MHz
FM modulation at 1KHz
3KHz peak deviation for 25KHz or 20KHz channel spacing

Frequency Counter
The accuracy should be at least 0.5ppm, preferably 0.1ppm

True RMS AC voltmeter, and a DC voltmeter.

6.2 Invoking the Calibration Procedure

The R50 has in-built firmware to perform calibration. This firmware requests the user for information as to meter readings, and/or to attach or adjust the AF signal generator.

The firmware based calibration program can be accessed from a terminal, a terminal emulator, or the Eclipse50 terminal emulator.

As for Section 4.1, the firmware, after power up, issues the following prompt:

R50>

Via a terminal, or a terminal emulator, a user can type various commands in. The basic command to start the calibration procedure is:

R50> cal calibration_type

Where "calibration_type" is one of:

- (a) misc: Miscellaneous parameters are defined and calibrated
- (b) line: Line1, Line2, Dir Aud (Tone), and microphone inputs are tested and calibrated.
- (c) ref: The reference oscillators are adjusted and calibrated
- (d) all : (which does all the above)

6.3 The "Miscellaneous" Calibration Procedure

R50> cal misc

This procedure should not normally be invoked as part of any field maintenance.

The program will print out the Model Name and Serial Number of the exciter. If these parameters haven't already been defined (e.g. at an initial calibration, at the factory, the service personnel will be prompted to enter these values).

Then it will ask the operator to enter the value of Vref (as measured at TP913, see 5.7).

*Measure the voltage, at TP913 (Vref)
and type it on the command line...*

Unless the reference diode D911 has been replaced, this should not be done. The user should simply hit the Enter key to bypass this operation. If, though, D911 has been replaced for some reason, then, the lid of the unit should be removed, and the voltage measured. TP913 can be found just above JP12 (near the centre of the exciter).

Then the receiver low battery alarm level will be asked for. If the current value is acceptable, the User need only hit the Enter key on the keyboard. If another value is preferred, then that value can be typed in.

For example:

*The Exciter's Low Battery Alarm is 24V
If this is correct enter <RET>,
else enter the new value: 26*

In this example, the low Battery Alarm level is changed to 26V.

Then the user will be prompted for serial port baud rates, parities etc. Please leave these parameters unchanged unless you are familiar with how to change such parameters on your PC. The Eclipse50 software will expect 57600 BPS, and No Parity, and No Flow Control. Note well, that if you do change any of these, the change will not take effect until you power down the receiver and then power it up again. (As an alternative to power cycling the receiver, and if the cover is off the receiver, you may simply press switch momentary push-button S200 (see 5.2)).

Then the following questions are:

*Is Flat frequency response on by default (Y/N)?
Is COS purely a sink of current (Y/N)?
Is COS Asserted when the Squelch is closed (Y/N)?
Is COS UnAsserted when the Squelch is open (Y/N)?
Is LOOP Asserted when the Squelch is closed (Y/N)?
Is LOOP UnAsserted when the Squelch is open (Y/N)?*

Always hit "Enter key" unless the value other than default is required, note use the "Y" key if default value need to be changed.

6.4 Line Calibration Procedure

R50> cal line

This procedure is used for calibrating the RF RSSI level reading, FM modulation (deviation) reading. Also this procedure is used to set the 600 Ohm audio line output level, Noise squelch level and Carrier squelch level. Simply follow the instruction of the software as bellow:

Attach an RF signal generator to the input.

*Set the RF output to 37.5MHz,
and an input level of -110dBm
with a 1kHz tone and 3kHz deviation.*

*Adjust the Volume Pot until the DIR AUD output
is 388mV.(eqvt to 0dBm into 600 ohms)*

Enter <RET> when done.

Set the RF signal generator's output to -60dBm

Enter <RET> when done.

rssi_scale is 0.417dBm/dac step, and rssi offset is -137.500dBm) --- for example

Adjust the Modulation to only 1KHz max deviation

Enter <RET> when done.

*deviation_scale is 1.000dBm/dac step, and
deviation offset is .000dBm*

--- for example

Adjust the Carrier Squelch to the desired level

Enter <RET> when set.

-99.5

--- for example

Enter the Fast Noise Threshold(in dBm):

Enter the Carrier Alarm Threshold(in dBm):

*Set the RF generator output to the desired level (< -105dBm),
and adjust the N.SQ adjustment counter clockwise
until the squelch opens, thence turn it clockwise
until the noise is muted.*

Enter <RET> when done

6.5 The "Reference" Calibration Procedure

R50> cal ref

To compensate for crystal ageing and other parameters that drift, the following procedure should be performed approximately once per year.

Open the cover of the receiver, find out the test point TP209 on receiver PCB, using a frequency counter to measure the frequency and follow the instruction as bellow:

*Measure the ECLK frequency, accurate to 0.5Hz
and enter the result(in MHz, eg 7.3727965)*

*Measure the E clock frequency again, and enter yes(y/Y)
if less than 1Hz from prev. freq, or re-enter the frequency
Connect an RF generator to the input
and with output freq of 37.5MHz and output level of -100dBm
Enter <RET> when done.*

7 SPECIFICATIONS

7.1 Overall Description

The receiver is a frequency synthesized, narrow band, HF, FM unit which can be used in conjunction with transmitter and power supply modules as a base station or as a stand alone receiver. All necessary control and 600 ohm line interface circuitry is included.

7.1.1 Channel Capacity

Although most applications are single channel, it can be programmed for up to 100 channels, numbered 0--99. This is to provide the capability of programming all channels into all of the transmitters used at a given site.

7.1.2 CTCSS

Full EIA subtone Capability is built into the modules. The CTCSS tone can be programmed for each channel. This means that each channel number can represent a unique RF and tone frequency combination.

7.1.3 Channel Programming

The channel information is stored in non-volatile memory and can be programmed via the front panel connector using a PC, and/or RF Technology software.

7.1.4 Channel Selection

Channel selection is by eight channel select lines connected to the rear panel that mounts on the rear DB25 female connector.

A BCD active high code applied to the lines selects the required channel. This can be supplied by pre-wiring the rack connector so that each rack position is dedicated to a fixed channel. Alternatively, thumb-wheel switch panels are available.

7.1.5 Microprocessor

A microprocessor is used to control the synthesizer, tone squelch, calibration, fault monitoring and reporting, RSSI reading, deviation measuring, option setting and facilitate channel frequency programming.

7.2 Physical Configuration

The receiver is designed to fit in a 19 inch rack mounted sub-frame. The installed height is 4 RU (178 mm) and the depth is 350 mm. The receiver is 63.5 mm or two Eclipse modules wide.

7.3 Front Panel Controls, Indicators, and Test Points

7.3.1 Controls

Mute Defeat Switch - Toggle (Overrides CTCSS and carrier squelch at the monitor output)

Monitor Speaker volume - Knob

Line output Level - screw driver adjust multi-turn pot

Noise Squelch setting - screw driver adjust multi-turn pot

Carrier Squelch Setting - screw driver adjust multi-turn pot

7.3.2 Indicators

Power ON - Green LED

Squelch Open - Yellow LED

Fault Indicator - Flashing Red LED

7.3.3 Test Points

There are no front panel test points. All important test points are monitored by the firmware.

7.4 Electrical Specifications

7.4.1 Power Requirements

Operating Voltage - 16 to 32 Vdc

Current Drain - 0.5A Maximum

Polarity - Negative Ground

7.4.2 Frequency Range and Channel Spacing

The R50, as a single model, covers the full band, currently the R50 receiver works in 20KHz and 25KHz channel spacing. It can also work in as low as 6.25KHz channel spacing if the narrow band-width IF filter is used.

7.4.3 Frequency Synthesizer Step Size

The specified frequency can be any multiple of 1250Hz.

7.4.4 Frequency Stability

±5 PPM over 0 to +60 C, standard for 25KHz and 20KHz channel spacing

7.4.5 Number of Channels

100, numbered 00 - 99

7.4.6 RF Input Impedance

50W

7.4.7 IF Frequencies

1st IF frequency 246MHz

2nd IF frequency 21.4MHz

3rd IF frequency 455KHz

7.4.8 Sensitivity

-119 dBm for 12dB SINAD

-116 dBm for 20dB Quieting

7.4.9 Selectivity

80dB per RS204C

7.4.10 Spurious and Image Rejection

90dB

7.4.11 Intermodulation

80dB

7.4.12 Modulation Acceptance BW

7.5KHz

7.4.13 Noise Squelch

(a) Adjustment rang 6-26dB SINAD

(b) Attack time 20mSec. Above 20dB Quieting

(c) Release Time 150mSec. At 20dB Quieting decreasing to 20mSec. Above 2uV preset threshold

(d) Hysteresis Equal to approximately 2dB noise quieting

7.4.14 Carrier Level Squelch

Carrier level squelch can be used when it is necessary to set the opening point above 26 dB SINAD as may be required in link applications. The minimum adjustment range is 0.5 to 200 uV.

7.4.15 Receiver Frequency Spread

Less than 1dB change in sensitivity over the band

7.4.16 Receiver Conducted Spurious Emission

Less than -67dBm from 1 to 3000MHz

7.4.17 Audio Frequency Response

(a) 600 Ohm Line and Direct Output

+1/-3 dB 300 - 3000 Hz relative to either a flat response or 750 uSec. de-emphasis

(b) Sub-Audio Output

+1/-3dB 67 - 250 Hz

7.4.18 Audio Output Level

(a) 600 Ohm Line

Adjustable -10 to +10 dBm

(b) Monitor Loudspeaker

5 Watts with external speaker, 0.3 Watt with internal speaker

(c) Discriminator and Sub-Audio

Nominally equal to 1 volt peak at rated system deviation

7.4.19 Audio Distortion

With 750 uSec. De-Emphasis

Less than 3% at 1 KHz and 60% of rated system deviation

With Flat Response

Less than 10% at 1 KHz and 60% of rated system deviation

7.4.20 Channel Select Input/Output

Coding

8 lines BCD coded 00-99

Logic Input Levels

0 = < 0.4 Volts

1 = > 3.5 Volts

Internal 100K pull down resistors selects Ch. 00 when all inputs are O/C.

7.4.21 Carrier Operated Switch Output

Floating Opto-Coupler Output

The carrier operated switch output is via an Opto-coupler. Collector and emitter connections are available to allow connection for source or sink.

The Opto-coupler can be linked inside the receiver to be on when a carrier is detected or to be on in the absence of carrier.

Connection to Remote Switch via 600 Ohm Line

Internal connections are provided by a relay so that 12VDC can be connected to the 600 Ohm line for use over a single pair.

7.4.22 Current Source/Sink, Collector Voltage

$I_c = 10 \text{ mA Maximum}$

$V_c = 30 \text{ Volts Max}$

7.4.23 CTCSS

The CTCSS decoding is provided by a U602. This provides programmable decoding of all 38 EIA and 12 other common tones. See Appendix C for tone squelch frequencies.

7.4.24 External Squelch Input

An external input is provided to squelch or mute the receiver audio output. This may be used in conjunction with an external decoder or to mute the receiver during transmissions.

The External Squelch Input can be connected to the T/R Relay pin on Eclipse transmitters mute the receiver during transmission.

7.5 Connectors

7.5.1 Antenna Connector

Type N Female Mounted on the module rear panel

7.5.2 Power & I/O Connector

25 pin "D" Male Mounted on the rear panel

7.5.3 Test Connector

9 pin "D" Female mounted on the front panel

APPENDIX A

EIA CTCSS TONE FREQUENCIES

| Frequency | EIA Number |
|-----------|------------|
| No Tone | |
| 67.0 | A1 |
| 69.4 | |
| 71.9 | B1 |
| 74.4 | C1 |
| 77.0 | A2 |
| 79.7 | C2 |
| 82.5 | B2 |
| 85.4 | C3 |
| 88.5 | A3 |
| 91.5 | C4 |
| 94.8 | B3 |
| 100.0 | A4 |
| 103.5 | B4 |
| 107.2 | A5 |
| 110.9 | B5 |
| 114.8 | A6 |
| 118.8 | B6 |
| 123.0 | A7 |
| 127.3 | B7 |
| 131.8 | A8 |
| 136.5 | B8 |
| 141.3 | A9 |
| 146.2 | B9 |
| 151.4 | A10 |
| 156.7 | B10 |
| 162.2 | A11 |
| 167.9 | B11 |
| 173.8 | A12 |
| 179.9 | B12 |
| 186.2 | A13 |
| 192.8 | B13 |
| 203.5 | A14 |
| 210.7 | B14 |
| 218.1 | A15 |
| 225.7 | B15 |
| 233.6 | A16 |
| 241.8 | B16 |
| 250.3 | A17 |

B R50 Parts List

Main PCB Assembly Parts

| Ref. | Description | Part Number |
|------|-------------------------------------|--------------|
| C101 | EMI Filter ARRY 100PF SMD | 34/NFA3/1100 |
| C102 | EMI Filter ARRY 100PF SMD | 34/NFA3/1100 |
| C103 | EMI Filter ARRY 100PF SMD | 34/NFA3/1100 |
| C201 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C202 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C203 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C204 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C205 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C206 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C207 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C208 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C209 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C210 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C211 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C212 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C214 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C215 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C216 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C217 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C219 | Capacitor Electrolytic 10U 16V 6032 | 42/3300/010U |
| C220 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C221 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C222 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C224 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C225 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C226 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C301 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C302 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C303 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C304 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C305 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C306 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C307 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C308 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C309 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C310 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C311 | Capacitor Electrolytic 10U 16V 6032 | 42/3300/010U |
| C312 | Capacitor Electrolytic 10U 16V 6032 | 42/3300/010U |
| C313 | Capacitor Electrolytic 10U 16V 6032 | 42/3300/010U |
| C314 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C315 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C316 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C317 | Capacitor 10N+/-5% NPO 50V 1206 | 46/26N1/010N |
| C318 | Capacitor Electrolytic 10U 16V 6032 | 42/3300/010U |
| C319 | Capacitor Electrolytic 10U 16V 6032 | 42/3300/010U |

| Ref. | Description | Part Number |
|------|--|---------------|
| C320 | Capacitor 100P+/-5% NPO 50V 0603 | 46/63N1/100P |
| C321 | Capacitor 100P+/-5% NPO 50V 0603 | 46/63N1/100P |
| C322 | Capacitor 18P+/-5% NPO 50V 0603 | 46/63N1/018P |
| C324 | Capacitor 33P+/-5% NPO 50V 0603 | 46/63N1/033P |
| C327 | Capacitor 1U5+/-10% 10V TANT 1206 | 42/STA1/01U5 |
| C328 | Capacitor Electrolytic L ESR 16V 100U 7343 | 42//STA1/02U2 |
| C329 | Capacitor 10N+/-5% NPO 50V 1206 | 46/26N1/010N |
| C330 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C401 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C402 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C403 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C404 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C405 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C406 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C407 | Capacitor 1N+/-5% NPO 50V 1206 | 46/3300/01N0 |
| C408 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C409 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C410 | Capacitor 100P+/-5% NPO 50V 0603 | 46/63N1/100P |
| C411 | Capacitor 330P+/-5% NPO 50V 1206 | 46/63N1/330P |
| C412 | Capacitor 330P+/-5% NPO 50V 1206 | 46/63N1/330P |
| C413 | Capacitor 330P+/-5% NPO 50V 1206 | 46/63N1/330P |
| C415 | Capacitor 100P+/-5% NPO 50V 0603 | 46/63N1/100P |
| C416 | Capacitor 150P+/-5% NPO 50V 0603 | 46/63N1/150P |
| C417 | Capacitor 150P+/-5% NPO 50V 0603 | 46/63N1/150P |
| C418 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C419 | Capacitor 270P+/-5% NPO 50V 0603 | 46/63N1/270P |
| C420 | Capacitor 180P+/-5% NPO 50V 0603 | 46/63N1/180P |
| C421 | Capacitor 68P+/-5% NPO 50V 0603 | 46/63N1/068P |
| C422 | Capacitor 68P+/-5% NPO 50V 0603 | 46/63N1/068P |
| C423 | Capacitor 390P +/-5% NPO 50V 0603 | 46/63N1/390P |
| C424 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C425 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C426 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C427 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C428 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C429 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C430 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C431 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C432 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C433 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C434 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C435 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C436 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C437 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C438 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C439 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C440 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C441 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C442 | Capacitor 68P+/-5% NPO 50V 0603 | 46/63N1/068P |
| C443 | Capacitor 100P+/-5% NPO 50V 0603 | 46/63N1/100P |
| C444 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |

| Ref. | Description | Part Number |
|------|---|--------------|
| C445 | Capacitor 68P+/-5% NPO 50V 0603 | 46/63N1/068P |
| C446 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C447 | Capacitor 47P+/-5% NPO 50V 0603 | 46/63N1/047P |
| C448 | Capacitor 5P6+/-0.25 NPO 50V 0603 | 46/63N1/05P6 |
| C449 | Capacitor 5P6+/-0.25 NPO 50V 0603 | 46/63N1/05P6 |
| C450 | Capacitor 2P7+/-0.25 NPO 50V 0603 | 46/63N1/02P7 |
| C451 | Capacitor 10P+/-5% NPO 50V 0603 | 46/63N1/010P |
| C452 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C453 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C454 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C455 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C456 | Capacitor 68P+/-5% NPO 50V 0603 | 46/63N1/068P |
| C457 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C458 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C459 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C460 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C461 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C462 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C463 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C464 | Capacitor 56P+/-5% NPO 50V 0603 | 46/63N1/056P |
| C466 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C467 | Capacitor 5P6+/-0.25 NPO 50V 0603 | 46/63N1/05P6 |
| C468 | Capacitor 33P+/-5% NPO 50V 0603 | 46/63N1/033P |
| C469 | Capacitor 15P+/-5% NPO 50V 0603 | 46/63N1/015P |
| C470 | Capacitor 470P+/-10% NPO 50V 0603 | 46/63N1/470P |
| C471 | Capacitor 4P7+/-0.25 NPO 50V 0603 | 46/63N1/04P7 |
| C473 | Capacitor 2P7+/-0.25 NPO 50V 0603 | 46/63N1/02P7 |
| C474 | Capacitor 56P+/-5% NPO 50V 0603 | 46/63N1/056P |
| C475 | Capacitor 15P+/-5% NPO 50V 0603 | 46/63N1/015P |
| C476 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C477 | Capacitor 18P+/-5% NPO 50V 0603 | 46/63N1/018P |
| C478 | Capacitor 18P+/-5% NPO 50V 0603 | 46/63N1/018P |
| C479 | Capacitor 22P+/-5% NPO 50V 0603 | 46/63N1/022P |
| C480 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C481 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C482 | Capacitor 33P+/-5% NPO 50V 0603 | 46/63N1/033P |
| C483 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C484 | Capacitor Electrolytic L ESR 16V 33U 6032 | 41/SELC/033U |
| C485 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C486 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C487 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C488 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C489 | Capacitor 390P +/-5% NPO 50V 0603 | 46/63N1/390P |
| C491 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C492 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C493 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C494 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C495 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C496 | Capacitor 10P+/-5% NPO 50V 0603 | 46/63N1/010P |
| C501 | Capacitor 2P2+/-0.25 NPO 50V 0603 | 46/63N1/02P2 |
| C503 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |

| Ref. | Description | Part Number |
|------|-------------------------------------|--------------|
| C504 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C505 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C506 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C507 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C508 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C509 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C511 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C512 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C513 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C514 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C515 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C516 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C518 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C519 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C520 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C521 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C522 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C523 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C524 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C525 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C526 | Capacitor 150P+/-5% NPO 50V 0603 | 46/63N1/150P |
| C527 | Capacitor 1N+80/-20% Y5V 25V 0603 | 46/63X1/001N |
| C528 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C529 | Capacitor 150P+/-5% NPO 50V 0603 | 46/63N1/150P |
| C530 | Capacitor 22P+/-5% NPO 50V 0603 | 46/63N1/022P |
| C531 | Capacitor 22P+/-5% NPO 50V 0603 | 46/63N1/022P |
| C532 | Capacitor 10P+/-5% NPO 50V 0603 | 46/63N1/010P |
| C533 | Capacitor 4P7+/-0.25 NPO 50V 0603 | 46/63N1/04P7 |
| C534 | Capacitor 10P+/-5% NPO 50V 0603 | 46/63N1/010P |
| C535 | Capacitor 10P+/-5% NPO 50V 0603 | 46/63N1/010P |
| C536 | Capacitor 15P+/-5% NPO 50V 0603 | 46/63N1/015P |
| C537 | Capacitor 15P+/-5% NPO 50V 0603 | 46/63N1/015P |
| C538 | Capacitor 15P+/-5% NPO 50V 0603 | 46/63N1/015P |
| C539 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C541 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C542 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C543 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C544 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C545 | Capacitor 10N+/-10% X7R 50V 0603 | 46/63X1/010N |
| C547 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C548 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C549 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C550 | Capacitor 22P+/-5% NPO 50V 0603 | 46/63N1/022P |
| C551 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C552 | Capacitor 330P+/-5% NPO 50V 1206 | 46/63N1/330P |
| C553 | Capacitor 330P+/-5% NPO 50V 1206 | 46/63N1/330P |
| C554 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C555 | Capacitor 4P7+/-0.25 NPO 50V 0603 | 46/63N1/04P7 |
| C556 | Capacitor 22P+/-5% NPO 50V 0603 | 46/63N1/022P |
| C557 | Capacitor 22P+/-5% NPO 50V 0603 | 46/63N1/022P |
| C558 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |

| Ref. | Description | Part Number |
|------|---|--------------|
| C559 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C560 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C561 | Capacitor 4P7+/-0.25 NPO 50V 0603 | 46/63N1/04P7 |
| C563 | Capacitor 150P+/-5% NPO 50V 0603 | 46/63N1/150P |
| C564 | Capacitor 22P+/-5% NPO 50V 0603 | 46/63N1/022P |
| C601 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C602 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C604 | Capacitor Electrolytic BIPOL 50V 22U+/-20% RB.2.4 | 41/BP01/022U |
| C605 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C606 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C609 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C610 | Capacitor 10N+/-5% NPO 50V 1206 | 46/26N1/010N |
| C611 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C612 | Capacitor 33P+/-5% NPO 50V 0603 | 46/63N1/033P |
| C613 | Capacitor 33P+/-5% NPO 50V 0603 | 46/63N1/033P |
| C614 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C615 | Capacitor 1U+80/-20% Y5V 25V 1206 | 45/Y5X7/1U16 |
| C616 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C617 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C618 | Capacitor ELC BIP 50V 22U+/-20% RB.2.4 | 41/BP01/022U |
| C619 | Capacitor ELC BIP 50V 22U+/-20% RB.2.4 | 41/BP01/022U |
| C620 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C621 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C622 | Capacitor 22N+/-10% X7R 50V 0603 | 45/X7R1/022N |
| C623 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C624 | Capacitor Electrolytic 470U 25V RB.2.4 | 41/2001/470U |
| C625 | Capacitor Electrolytic 470U 25V RB.2.4 | 41/2001/470U |
| C626 | Capacitor 2N2+/-5% NPO 50V 1812 | 46/26N1/02N2 |
| C627 | Capacitor 10N+/-5% NPO 50V 1206 | 46/26N1/010N |
| C628 | Capacitor 120P+/-5% NPO 50V 0603 | 46/63N1/120P |
| C629 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C630 | Capacitor 22N+/-10% X7R 50V 0603 | 45/X7R1/022N |
| C632 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C633 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C634 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C635 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C636 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C901 | Capacitor Electrolytic L ESR 16V 33U 6032 | 41/SELC/033U |
| C902 | Capacitor Electrolytic L ESR 470U 35V RB.2/.4 | 41/200L/470U |
| C903 | Capacitor Electrolytic L ESR 16V 33U 6032 | 41/SELC/033U |
| C913 | Capacitor Electrolytic 1000U 16V RB.2/.4 | 41/2001/1000 |
| C915 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C920 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C923 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C924 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C925 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C926 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C927 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C928 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C929 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |

| Ref. | Description | Part Number |
|-----------|---|--------------|
| C930 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C931 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C933 | Capacitor 100N+80/-20% Y5V 25V 0603 | 46/63Y1/100N |
| C935 | Capacitor Electrolytic L ESR 470U 35V RB.2/.4 | 41/200L/470U |
| C936 | Capacitor Electrolytic L ESR 16V 33U 6032 | 41/SELC/033U |
| C937 | Capacitor Electrolytic L ESR 16V 33U 6032 | 41/SELC/033U |
| C938 | Capacitor Electrolytic L ESR 16V 100U 7343 | 41/SELD/100U |
| C939 | Capacitor Electrolytic L ESR 6.3V 100U 6032 | 41/SELC/100U |
| C940 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C941 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| C943 | Capacitor Electrolytic 10U 16V 6032 | 42/3330/010U |
| D102 | Diode LED Red RT ANG MTG | 21/1010/LEDR |
| D103 | Diode LED Yellow RT ANG MTG | 21/1010/LEDY |
| D104 | Diode LED Green RT ANG MTG | 21/1010/LEDG |
| D200 | Diode Dual GP BAV99 SOT23 | 21/3010/AV99 |
| D301 | Diode V Capacitor MMBV109 SOT23 | 21/3060/V109 |
| D401 | Diode Schotky BAT17 SOT23 | 21/3010/0017 |
| D403 | Diode Dual GP BAV99 SOT23 | 21/3010/AV99 |
| D404 | Diode Dual GP BAV99 SOT23 | 21/3010/AV99 |
| D405 | Diode Schotky BAT17 SOT23 | 21/3010/0017 |
| D406 | Diode V FilterCapacitor MMBV109 SOT23 | 21/3060/V109 |
| D407 | Diode Zen 5V1 BZX84C5V1 SOT23 | 21/3040/C5V1 |
| D501 | Diode VCapacitor MMBV105G SOT23 | 21/3060/105G |
| D502 | Diode VCapacitor MMBV109 SOT23 | 21/3060/V109 |
| D503 | Diode Schotky BAT17 SOT23 | 21/3010/0017 |
| D504 | Diode Schotky BAT17 SOT23 | 21/3010/0017 |
| D601 | Diode GP 50V 1A SMD | 24/SMA1/4004 |
| D602 | Diode GP 50V 1A SMD | 24/SMA1/4004 |
| D603 | Diode Dual GP BAV99 SOT23 | 21/3010/AV99 |
| D604 | Diode Dual GP BAV99 SOT23 | 21/3010/AV99 |
| D605 | Diode Dual GP BAV99 SOT23 | 21/3010/AV99 |
| D906 | Diode Schotky 40V 1A SMD | 24/BRM1/40T3 |
| D907 | Diode Schotky 40V 1A SMD | 24/BRM1/40T3 |
| D908 | Diode Schotky 40V 1A SMD | 24/BRM1/40T3 |
| D909 | Diode Schotky 40V 1A SMD | 24/BRM1/40T3 |
| D910 | Diode GP 50V 1A SMD | 24/SMA1/4004 |
| D911 | Diode Zen 4.096V +/-3% SOT-23 | 29/VREF/0001 |
| Filter401 | SAW Filter 246MHz+/-130KHz SMD | 33/SAWF/0001 |
| Filter402 | Ceramic Filter 455K SMD | 34/2000/CFUC |
| Filter403 | Ceramic Filter 455K SMD | 34/2000/CFUC |
| Filter404 | Crystal Filter 2 Pole 21.4MHZ HC45U | 33/2000/214W |
| Filter405 | Crystal Filter 2 Pole 21.4MHZ HC45U | 33/2000/214W |
| JP2 | Connector 14PIN | 35/2501/0014 |
| JP3 | Connector 2X5PIN | 35/7026/0010 |
| L100 | Ferrite Bead 2A 1206 | 37/P034/0001 |
| L101 | Ferrite Bead .5A 1206 | 37/P033/0001 |
| L102 | Ferrite Bead .5A 1206 | 37/P033/0001 |
| L200 | Choke 220UH+/-20% 50mA 1812 | 37/3320/P103 |
| L202 | Ferrite Bead .5A 1206 | 37/P033/0001 |

| Ref. | Description | Part Number |
|-------|------------------------------------|--------------|
| L203 | Ferrite Bead .5A 1206 | 37/P033/0001 |
| L204 | Ferrite Bead .5A 1206 | 37/P033/0001 |
| L205 | Ferrite Bead .5A 1206 | 37/P033/0001 |
| L301 | Ferrite Bead .5A 1206 | 37/P033/0001 |
| L401 | Inductor 246NH+/-5% | 37/AC52/246N |
| L402 | Inductor 246NH+/-5% | 37/AC52/246N |
| L403 | Inductor 246NH+/-5% | 37/AC52/246N |
| L404 | Inductor 422NH+/-5% | 37/AC52/422N |
| L405 | Inductor 558NH+/-5% | 37/AC52558N |
| L406 | Inductor 380NH+/-5% | 37/AC52/380N |
| L407 | Inductor 169NH+/-5% | 37/AC52/169N |
| L408 | Inductor 169NH+/-5% | 37/AC52/169N |
| L409 | Inductor 680NH+/-10% 1008 | 37/3320/680N |
| L410 | Inductor 270NH+/-5% 0805 | 37/8551/270N |
| L411 | Inductor 270NH+/-5% 0805 | 37/8551/270N |
| L412 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L413 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L414 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L417 | Inductor 100NH+/-5% 0805 | 37/8551/100N |
| L419 | Inductor 100NH+/-5% 0805 | 37/8551/100N |
| L420 | Inductor 150NH+/-5% 0805 | 37/8551/150N |
| L421 | Inductor 680NH+/-10% 1008 | 37/3320/680N |
| L422 | Inductor 100NH+/-5% 0805 | 37/8551/100N |
| L423 | Inductor 2U2H+/-5% 1008 | 37/3320/02U2 |
| L424 | Inductor 2U2H+/-5% 1008 | 37/3320/02U2 |
| L425 | Inductor 560NH+/-5% 0805 | 37/8551/560N |
| L426 | Inductor 3U3H+/-10% 1008 | 37/3320/03U3 |
| L501 | Inductor 18N5H+/-5% | 37/AC5118N5 |
| L502 | Inductor 3U3H+/-10% 1008 | 37/3320/03U3 |
| L503 | Inductor 3U3H+/-10% 1008 | 37/3320/03U3 |
| L504 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L505 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L506 | Inductor 3U3H+/-10% 1008 | 37/3320/03U3 |
| L507 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L509 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L510 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L511 | Inductor 3U3H+/-10% 1008 | 37/3320/03U3 |
| L512 | Inductor 220NH+/-5% 0805 | 37/8551/220N |
| L514 | Inductor 27NH+/-5% 0805 | 37/8551/027N |
| L515 | Inductor 39NH+/-5% | 37/AC52/039N |
| L516 | Inductor 33NH+/-5% 0805 | 37/8551/033N |
| L901 | Choke 33UH+/-20% 200mA SM1812 | 37/3320/P102 |
| L902 | Inductor MSLD 800mA 220U+/-20% SMD | 37/MSP1/220U |
| L903 | Inductor MSLD 500mA 68U+/-20% SMD | 37/MSP1/068U |
| L904 | Inductor MSLD 1A 100U+/-20% SMD | 37/MSP1/100U |
| L905 | Choke 33UH+/-20% 200mA SM1812 | 37/3320/P102 |
| L906 | Ferrite Bead 2A 1206 | 37/P034/0001 |
| L907 | Ferrite Bead 2A 1206 | 37/P034/0001 |
| L908 | Ferrite Bead 2A 1206 | 37/P034/0001 |
| L909 | Ferrite Bead 2A 1206 | 37/P034/0001 |
| MA501 | Amplifier MMIC VAM-6 SOT143 | 24/3010/VAM6 |

| Ref. | Description | Part Number |
|-------|----------------------------------|--------------|
| MA502 | Amplifier MMIC VAM-6 SOT143 | 24/3010/VAM6 |
| MA503 | Amplifier MMIC VAM-6 SOT143 | 24/3010/VAM6 |
| MA504 | Amplifier MMIC VAM-6 SOT143 | 24/3010/VAM6 |
| MA505 | Amplifier MMIC MWA0211L SOT143 | 24/3010/211L |
| MA506 | Amplifier MMIC MWA0211L SOT143 | 24/3010/211L |
| MX401 | Mixer Double BAL Level 7 SMD | 37/MIXR/P028 |
| MX402 | Mixer Double BAL Level 7 SMD | 37/MIXR/P028 |
| P1 | Connector DB9 RT ANG FML PCB MT | 35/5012/025M |
| P3 | Connector DB25 RT ANG FML PCB MT | 35/5032/025F |
| Q200 | Transistor NPN GP SOT23 | 27/3020/3904 |
| Q202 | FET NJ MMBF5484 SOT23 | 27/3030/5484 |
| Q203 | Transistor NPN MMBT2369 SOT23 | 27/3020/2369 |
| Q204 | Transistor NPN MMBT2369 SOT23 | 27/3020/2369 |
| Q205 | Transistor PNP GP SOT23 | 27/3010/3906 |
| Q206 | Transistor NPN GP SOT23 | 27/3020/3904 |
| Q301 | Transistor NPN GP SOT23 | 27/3020/3904 |
| Q401 | Transistor NPN RF BFQ17 SOT89 | 27/300B/FQ17 |
| Q402 | Transistor NPN RF BFQ193 SOT89 | 27/30BF/Q193 |
| Q403 | Transistor NPN RF BFQ17 SOT89 | 27/300B/FQ17 |
| Q404 | FET NJ MMBFJ309 SOT23 | 27/3030/J309 |
| Q405 | Transistor PNP RF BFR92A SOT23 | 27/3020/R92A |
| Q406 | Transistor PNP RF BFR92A SOT23 | 27/3020/R92A |
| Q407 | Transistor NPN GP SOT23 | 27/3020/3904 |
| Q408 | Transistor PNP GP SOT23 | 27/3010/3906 |
| Q501 | FET NJ MMBFJ309 SOT23 | 27/3030/J309 |
| Q502 | FET NJ MMBFJ309 SOT23 | 27/3030/J309 |
| Q503 | Transistor NPN GP SOT23 | 27/3020/3904 |
| Q504 | Transistor NPN GP SOT23 | 27/3020/3904 |
| Q601 | Transistor PNP GP SOT23 | 27/3010/3906 |
| Q602 | FET NMOS BSS138 SOT23 | 27/30B5/5138 |
| Q603 | FET NMOS BSS138 SOT23 | 27/30B5/5138 |
| R103 | Resistor 1206 180R+/-5% 1/4W | 51/3380/0180 |
| R104 | Resistor 1206 180R+/-5% 1/4W | 51/3380/0180 |
| R201 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R202 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R203 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R204 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R205 | Resistor 0805 2K7+/-5% 1/8W | 51/8511/02K7 |
| R206 | Resistor 0805 2K2+/-5% 1/8W | 51/8511/02K2 |
| R207 | Resistor 0805 68K+/-5% 1/8W | 51/8511/068K |
| R209 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R210 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R211 | Resistor 0805 220R+/-5% 1/8W | 51/8511/220R |
| R212 | Resistor 0805 220R+/-5% 1/8W | 51/8511/220R |
| R213 | Resistor 0805 1M+/-5% 1/8W | 51/8511/01M0 |
| R217 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R218 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R219 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R220 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R221 | Resistor 0805 470R+/-5% 1/8W | 51/8511/470R |
| R222 | Resistor 0805 2K2+/-5% 1/8W | 51/8511/02K2 |

| Ref. | Description | Part Number |
|------|------------------------------|--------------|
| R223 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R224 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R225 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R226 | Resistor 1206 180R+/-5% 1/4W | 51/3380/0180 |
| R228 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R229 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R230 | Resistor 0805 120R+/-5% 1/8W | 51/8511/120R |
| R231 | Resistor 0805 120R+/-5% 1/8W | 51/8511/120R |
| R232 | Resistor 0805 560R+/-5% 1/8W | 51/8511/560R |
| R233 | Resistor 0805 22K+/-5% 1/8W | 51/8511/022K |
| R234 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R235 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R236 | Resistor 0805 18K+/-5% 1/8W | 51/8511/018K |
| R237 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R238 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R239 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R240 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R241 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R242 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R243 | Resistor 0805 220R+/-5% 1/8W | 51/8511/220R |
| R244 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R245 | Resistor 0805 12K+/-5% 1/8W | 51/8511/012K |
| R301 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R302 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R303 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R304 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R305 | Resistor 0805 5K6+/-5% 1/8W | 51/8511/05K6 |
| R306 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R307 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R308 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R309 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R310 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R311 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R312 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R313 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R314 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R315 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R316 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R317 | Resistor 0805 3K3+/-5% 1/8W | 51/8511/03K3 |
| R318 | Resistor 0805 150K+/-5% 1/8W | 51/8511/150K |
| R319 | Resistor 0805 150K+/-5% 1/8W | 51/8511/150K |
| R320 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R321 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R322 | Resistor 0805 22K+/-5% 1/8W | 51/8511/022K |
| R323 | Resistor 0805 22K+/-5% 1/8W | 51/8511/022K |
| R324 | Resistor 0805 12K+/-5% 1/8W | 51/8511/012K |
| R325 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R326 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R327 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R330 | Resistor 0805 1K8+/-5% 1/8W | 51/8511/01K8 |
| R331 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |

| Ref. | Description | Part Number |
|------|------------------------------|----------------|
| R332 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R333 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R401 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R402 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R403 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R404 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R405 | Resistor 0805 2R2+/-5% 1/8W | 51/8511/02R2 |
| R406 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R407 | Resistor 0805 18K+/-5% 1/8W | 51/8511/018K |
| R408 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R409 | Resistor 0805 15K+/-5% 1/8W | 51/8511/015K |
| R410 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R411 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R412 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R413 | Resistor 0805 47R+/-5% 1/8W | 51/8511/047R |
| R414 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R415 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R416 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R417 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/033K |
| R418 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/033K |
| R419 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R420 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R421 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R422 | Resistor 0805 22K+/-5% 1/8W | 51/8511/022K |
| R423 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R424 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/033K |
| R425 | Resistor 0805 18K+/-5% 1/8W | 51/8511/018K |
| R426 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R427 | Resistor 0805 2K2+/-5% 1/8W | 51/8511/02K2 |
| R428 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R429 | Resistor 0805 470K+/-5% 1/8W | 51/8511/470K |
| R430 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R431 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R432 | Resistor 0805 22K+/-5% 1/8W | 51/8511/022K |
| R433 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/033K |
| R434 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R435 | Resistor 0805 390R+/-5% 1/8W | 51/8511/390R |
| R436 | Resistor 0805 220K+/-5% 1/8W | 51/8511/220K |
| R437 | Resistor 0805 220K+/-5% 1/8W | 51/8511/220K |
| R438 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R439 | Resistor 0805 390R+/-5% 1/8W | 51/8511/390R |
| R441 | Resistor 0805 22K+/-5% 1/8W | 51/8511/022K |
| R442 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R443 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R444 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R445 | Resistor 0805 8K2+/-5% 1/8W | 51/8511/08K2 |
| R446 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R447 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R448 | Resistor 0805 150K+/-5% 1/8W | 51/8511/150K |
| R449 | Resistor 0805 5K6+/-5% 1/8W | 51/8511/05K6 |
| R450 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/06K8 |

| Ref. | Description | Part Number |
|------|------------------------------|----------------|
| R452 | Resistor 0805 82K+/-5% 1/8W | 51/8511/082K |
| R453 | Resistor 0805 470R+/-5% 1/8W | 51/8511/470R |
| R454 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R455 | Resistor 0805 120R+/-5% 1/8W | 51/8511/120R |
| R456 | Resistor 0805 120R+/-5% 1/8W | 51/8511/120R |
| R457 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R458 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R459 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/033K |
| R460 | Resistor 0805 330R+/-5% 1/8W | 51/8511/330R |
| R461 | Resistor 0805 330R+/-5% 1/8W | 51/8511/330R |
| R462 | Resistor 0805 150R+/-5% 1/8W | 51/8511/150R |
| R463 | Resistor 0805 470R+/-5% 1/8W | 51/8511/470R |
| R464 | Resistor 0805 22K+/-5% 1/8W | 51/8511/022K |
| R465 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R466 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R467 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R468 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R507 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R508 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R509 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R511 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R512 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R514 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R515 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R516 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R517 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R518 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R519 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R520 | Resistor 0805 100R+/-5% 1/8W | 51/8511/100R |
| R521 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R522 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R523 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R524 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R525 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R526 | Resistor 0805 2K2+/-5% 1/8W | 51/8511/02K2 |
| R529 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R530 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R532 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R533 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R535 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R538 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R541 | Resistor 0805 150R+/-5% 1/8W | 51/8511/150R |
| R542 | Resistor 0805 150R+/-5% 1/8W | 51/8511/150R |
| R543 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R544 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R549 | Resistor 0805 47R+/-5% 1/8W | 51/8511/047R |
| R601 | Resistor 0805 2K7+/-5% 1/8W | 51/8511/02K7 |
| R602 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R603 | Resistor 0805 3K3+/-5% 1/8W | 51/8511/03K3 |
| R604 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R605 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |

| Ref. | Description | Part Number |
|------|------------------------------|----------------|
| R606 | Resistor 0805 18K+/-5% 1/8W | 51/8511/018K |
| R607 | Resistor 0805 18K+/-5% 1/8W | 51/8511/018K |
| R608 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R609 | Resistor 0805 680R+/-5% 1/8W | 51/8511/680R |
| R610 | Resistor 0805 0R Jumper | 51/8511/000R |
| R611 | Resistor 0805 1K5+/-5% 1/8W | 51/8511/01K5 |
| R612 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R613 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R614 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R615 | Resistor 0805 3K3+/-5% 1/8W | 51/8511/03K3 |
| R616 | Resistor 0805 1K5+/-5% 1/8W | 51/8511/01K5 |
| R617 | Resistor 0805 12K+/-5% 1/8W | 51/8511/012K |
| R618 | Resistor 0805 12K+/-5% 1/8W | 51/8511/012K |
| R619 | Resistor 0805 12K+/-5% 1/8W | 51/8511/012K |
| R620 | Resistor 0805 22R+/-5% 1/8W | 51/8511/022R |
| R621 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/033K |
| R622 | Resistor 0805 12K+/-5% 1/8W | 51/8511/012K |
| R623 | Resistor 0805 330K+/-5% 1/8W | 51/8511/330K |
| R624 | Resistor 0805 1M+/-5% 1/8W | 51/8511/01M0 |
| R625 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R626 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R627 | Resistor 0805 22K+/-5% 1/8W | 51/8511/022K |
| R628 | Resistor 0805 15K+/-5% 1/8W | 51/8511/015K |
| R629 | Resistor 0805 15K+/-5% 1/8W | 51/8511/015K |
| R630 | Resistor 0805 75K+/-5% 1/8W | 51/8511/075K |
| R631 | Resistor 0805 12K+/-5% 1/8W | 51/8511/012K |
| R632 | Resistor 0805 470K+/-5% 1/8W | 51/8511/470K |
| R633 | Resistor 0805 560R+/-5% 1/8W | 51/8511/560R |
| R634 | Resistor 0805 10R+/-5% 1/8W | 51/8511/010R |
| R635 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R636 | Resistor 0805 100K+/-5% 1/8W | 51/8511/100K |
| R637 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R638 | Resistor 0805 3K3+/-5% 1/8W | 51/8511/03K3 |
| R639 | Resistor 0805 39R+/-5% 1/8W | 51/8511/039R |
| R640 | Resistor 0805 220R+/-5% 1/8W | 51/3380/0220 |
| R641 | Resistor 0805 2R2+/-5% 1/8W | 51/8511/02R2 |
| R642 | Resistor 0805 39K+/-5% 1/8W | 51/8511/039K |
| R643 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/033K |
| R644 | Resistor 0805 680R+/-5% 1/8W | 51/855/11/033K |
| R645 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R646 | Resistor 0805 3K3+/-5% 1/8W | 51/8511/03K3 |
| R647 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R648 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R649 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R650 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R651 | Resistor 0805 2K2+/-5% 1/8W | 51/8511/02K2 |
| R652 | Resistor 0805 680R+/-5% 1/8W | 51/8511/680R |
| R653 | Resistor 0805 0R Jumper | 51/8511/000R |
| R654 | Resistor 0805 2K2+/-5% 1/8W | 51/8511/02K2 |
| R655 | Resistor 0805 220K+/-5% 1/8W | 51/8511/220K |
| R656 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |

| Ref. | Description | Part Number |
|-------|---|--------------|
| R657 | Resistor 0805 10K+/-5% 1/8W | 51/8511/010K |
| R658 | Resistor 0805 4K7+/-5% 1/8W | 51/8511/04K7 |
| R910 | Resistor 0805 0R Jumper | 51/8511/000R |
| R911 | Resistor 0805 0R Jumper | 51/8511/000R |
| R918 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R919 | Resistor 0805 47K+/-5% 1/8W | 51/8511/047K |
| R920 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R921 | Resistor 0805 47R+/-5% 1/8W | 51/8511/047R |
| R922 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R923 | Resistor 0805 1K5+/-5% 1/8W | 51/8511/01K5 |
| R924 | Resistor 0805 390R+/-5% 1/8W | 51/8511/390R |
| R925 | Resistor 0805 150R+/-5% 1/8W | 51/8511/150R |
| R926 | Resistor 0805 1K8+/-5% 1/8W | 51/8511/01K8 |
| R927 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R928 | Resistor 0805 270R+/-5% 1/8W | 51/8511/270R |
| R933 | Resistor 0805 1K+/-5% 1/8W | 51/8511/001K |
| R934 | Resistor 0805 680R+/-5% 1/8W | 51/8511/680R |
| R935 | Resistor 0805 0R Jumper | 51/8511/000R |
| R936 | Resistor 0805 120R+/-5% 1/8W | 51/8511/120R |
| RL601 | Relay DPDT 12V 500mW | 96/2000/012V |
| RL602 | Relay DPDT 12V 500mW | 96/2000/012V |
| T601 | Transformer 600OHM Line | 37/2040/5065 |
| S200 | Switch Tack SMD 4.8 X 5 | 31/SMPB/0001 |
| U201 | IC Quad CMOS RS232 RCV SO14 | 29/14C8/9A01 |
| U202 | IC Quad CMOS RS232 DRV SO14 | 29/14C8/8001 |
| U203 | IC Reset Generator S08 | 29/MC33/064D |
| U204 | IC MCU 68HC12, TQFP112 | 29/68HC/12A0 |
| U205 | IC 3-8 Line Decoder SO16 | 29/2030/C138 |
| U207 | IC Flash 5V TSOP40 | 29/P006/0001 |
| U208 | IC SRAM 4M SOP-32 | 29/SRAM/P013 |
| U209 | IC OCT Latch SO20 | 29/2030/C374 |
| U301 | IC Quad 8BIT DAC MAX534 SSO16 | 29/00MA/X534 |
| U302 | IC Dual PLL 1.1G RFIN SSO16 | 29/LMX2/335L |
| U303 | IC Quad OPAmplifier LM224 SO14 | 29/000L/M224 |
| U304 | IC Dual 4BIT Counter SO16 | 29/2030/C390 |
| U401 | IC FM IF Receiver NE615 | 29/000N/E615 |
| U402 | IC Quad OPAmplifier LM224 SO14 | 29/000L/M224 |
| U403 | IC High Speed COMP SOT23-5 | 29/COMP/U001 |
| U404 | IC Dual Oneshot HCOMS SO16 | 29/2030/C123 |
| U601 | IC Opto-Isolator 4N35 | 25/1010/4N35 |
| U602 | IC CTCSS/DCS En/Decoder | 29/00FX/805L |
| U604 | IC Audio Amplifier 5W TDA2003 | 25/2070/2003 |
| U605 | IC Quad OP Amplifier LM224 SO14 | 29/000L/M224 |
| U607 | IC Quad SPST DG411 SO16 | 29/00DG/411C |
| U609 | IC Quad OP Amplifier LM224 SO14 | 29/000L/M224 |
| U907 | IC Switch Volt Regulator 12V 1A SMD | 29/REG1/0N12 |
| U908 | IC Switch Volt Regulator 12V 1A SMD | 29/REG1/0N12 |
| U909 | IC Switch Volt Regulator 5V 1A SMD | 29/REG2/00N5 |
| U910 | IC Volt Regulator Positive ADJ 800mA LM1117 | 29/00LM/1117 |
| U911 | IC Volt Regulator Positive ADJ LM317 SO8 | 29/000L/M317 |
| U913 | IC Volt Regulator Negative ADJ LM337 SO8 | 29/000L/M337 |

| Ref. | Description | Part Number |
|-------------|--|--------------------|
| U914 | IC Volt Regulator Negative ADJ LM337 SO8 | 29/000L/M337 |
| VR201 | Trimpot 100K Multi Turn Horizontal | 53/THH1/100K |
| VR202 | Trimpot 100K Multi Turn Horizontal | 53/THH1/100K |
| VR601 | Trimpot 100K Multi Turn Horizontal | 53/2060/010K |
| X200 | Crystal Resistor 14.7456MHZ SMD | 33/14M7/0001 |
| X301 | Crystal Resistor 12MHZ SMD | 33/12M0/0001 |
| X401 | Ceramic Discriminator SMD | 34/2000/CDBC |
| X402 | Crystal Resonator 21.855M HC45U | 32/2045/21M855 |
| X601 | Crystal Resonator 4MHZ HC49 | 32/2049/04MO |