


INSTRUCTION MANUAL

Batteries Installation


1. Press the battery compartment cover as shown, then lift up the cover. Insert two "AA" cells (not included) as shown in the illustration. Be sure to observe correct polarity (+ and -). Replace cover.
2. Press Control Unit's battery compartment cover in the direction of the arrow and lift up. Insert one 9-volt battery. Replace Cover.

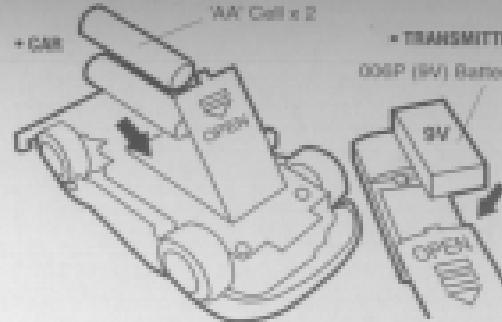


How to play

1. Straighten the wire antenna on the Transmitter.
2. Set the Power Switches on the bottom of the car to the ON position; then place the car on floor.
3. When the Remote Control Unit's button is pressed in position, your car will move in a straight line. Release the button the car will move backward in a circular motion automatically.
4. When not operating your car, be sure set the Power switch to "OFF" Position.

STEERING ALIGNMENT

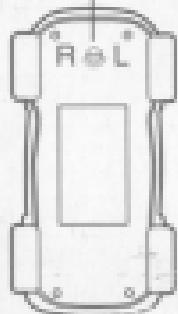

STEERING DIRECTION

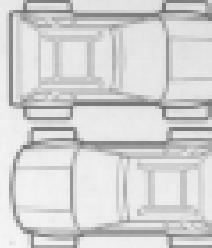

FORWARD MOTION

Press the button



BACKWARD MOTION

Release the button



Hint and Tips

1. If your car moves forward slowly, replace the two "AA" batteries with new ones.
2. If your car does not respond to the Remote Control Unit, replace the 9-volt battery (in Remote Control Unit).
3. If you're not going to use your car for a few days, remove the batteries from the car or Remote Control Unit. Never leave dead or weak batteries either in the car or Remote Control Unit. They could leak damaging chemicals.
4. Your car will work best on a flat surface. Do not use on a wet floor or in mud or sand.
5. If CB transceivers are operating nearby, they may interfere with your control of the car. If this happens, wait till the CB units stop transmitting or move to a new location.

How to Conserve Durability of the Battery Life

- Whenever you stop running the car, turn off the switch and take out all batteries.
- To ensure maximum use of batteries. Take a rest of 20 minutes after 15-20 minutes continuous playing to enabling the batteries to recharge themselves.


This car transmits radio frequency within the citizen's band and conforms to FCC regulations.

Safety Precautions :

Parents, this toy is recommended for children 8 years and older. To ensure that your child's play is both safe and fun please read the instruction manual and explain these general safety rules with your child.

CAUTION :


1. Do not pick up vehicle while in motion.
2. Keep fingers, hair and loose clothing away from the tyres and the wheel hubs while the product is switched on.
3. If this toy is being operated in the presence of children under 8 years of age, adult supervision is recommended.
4. To avoid accidental operation, remove battery when not in use.

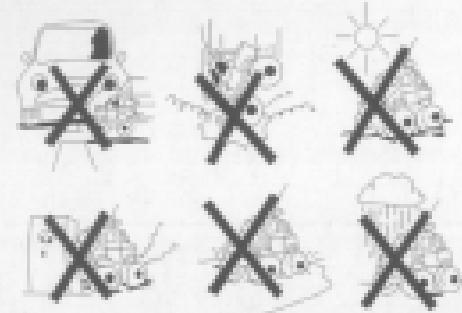

4 892106 240222



ACTUAL PRODUCT MAY VARY FROM
PHOTOGRAPHY ON THIS BOX.

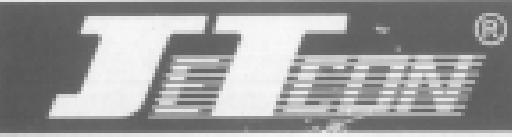

ALL RIGHTS RESERVED

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.