

NO. 3274-T**RADIO CONTROL SAND BUGGY™****INSTRUCTIONS:**

Your SUPERTOYS™ "SAND BUGGY™" is designed to provide you with many hours of driving fun. Please follow these directions:

 

Batteries: 4 AA Alkaline Batteries and 1 9-volt battery required (not included).

Battery Installation for CAR

Remove screw on battery case door with Phillips screw driver and insert 4 AA Batteries as shown (follow +/- inside case and insert) Retighten battery door.

**Battery Installation for CONTROLLER**

Loosen screw as shown and insert 9 volt battery. Retighten screw.

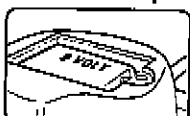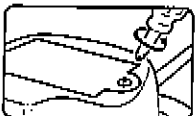
**"Helpful Hints"**

(maintenance and performance tips)

1. Check batteries frequently.
2. Always replace with fresh alkaline batteries.
3. Check battery terminals for contact.
4. To save batteries, always turn Ignition key off when not in operation.
5. Designed to run on most smooth surfaces.
6. If the car does not perform properly, You may need fresh batteries. The 9-volt lasts longer than the AA — so test batteries frequently. Replace batteries if:
 - a) Car speed reduces considerably or if after letting the button go — car continues to move
 - b) Controller — car does not respond properly to controller.

Operating Instructions:


1. Turn Ignition key to right to start engine.
2. Press controller — car will go forward or reverse.
 - to re-direct, let controller go, then press again. (vehicle turns in reverse)
 - Vehicle will now go in new direction forward. (Repeat Action).
3. Repeat (Press Controller) to re-direct vehicle.
4. Press Horn for Realistic Electronic Horn.
5. Push Gear Shift for Accelerating sound.

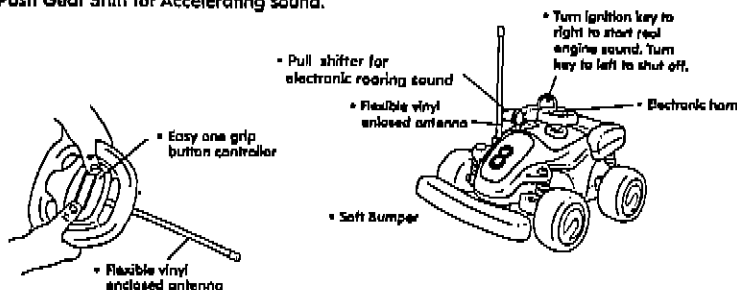

6. Turn Car off when not in use by turning key to left as shown.

ALWAYS TURN CAR OFF

when NOT IN USE or
battery life will reduce sharply

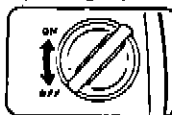

7. For best results — operate car on most smooth surfaces. (Do not operate on SAND and DIRT)
8. The car will operate up to 12-15 feet of the controller.

NOTE: DUE TO OCCASIONAL INTERFERENCE, PRODUCT PERFORMANCE MAY VARY.

IF THIS OCCURS, STOP and RESTART.

9. The Car may not operate properly if:
 - a) the controller is not pressed.
 - b) high metal concentrations in area.
 - c) broadcast, electronic or micro-waves may cause radio interference & improper direction.
 - d) you are outside controller range.
 - e) batteries not installed properly.
10. Maintenance Tips
 - A. NEVER NEVER DROP YOUR SAND BUGGY
 - B. NEVER PULL ON both antennas.
 - C. NEVER disassemble car or controller.
 - D. Replace batteries if motor sound or horn sound is weak or if vehicle does not respond to controller.
 - E. Always remove batteries if vehicle is not in use for long periods.

DIRECT ANY INQUIRIES TO: Supertoys™ USA, Inc.

2145 Jacqueline Avenue
No. Bellmore, N.Y. 11710

All rights reserved world-wide.
Made in China by Supertoys™