



DODGE VIPER
TOUCH PRO RACER


ASSEMBLY INSTRUCTIONS

CAUTIONS:

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and recommended type.
- Adult supervision is recommended.
- Drive your vehicle in a safe area away from people, pets, cars etc. Not in streets, in or near water, or in darkness!
- Don't touch or try to pick up vehicle when it is in motion. Wait until it stops completely. Hold vehicle by back end, never pick up by the wheels.
- Keep hair, fingers, face and loose clothing away from wheels while the vehicle is switched on or while the transmitter is operating.


VEHICLE

1. Use a Phillips head screwdriver to remove the battery compartment cover located on the top of the Crazy Shaker.
2. Insert batteries in the correct position as marked in compartment. Replace compartment cover.
3. Move power switch to the "on" position to operate Crazy Shaker.
4. Move switch to the "off" position when not in use.

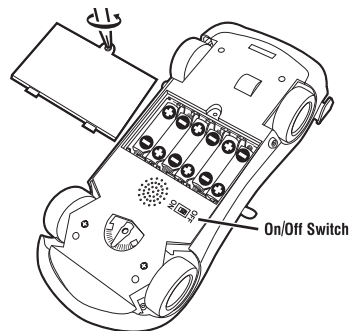


TRANSMITTER

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then remove the cover.
2. Put the 4 "AAA" battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with the screw. When the transmitter's range decreases, replace its battery.

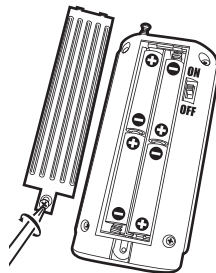

OPERATING INSTRUCTIONS

1. **FORWARD**
Press & hold
2. **TO TURN RIGHT**
Slide thumb to
3. **TO TURN LEFT**
Slide thumb to
4. **BACKWARD**
Press & hold
5. **TO TURN LEFT IN REVERSE**
Slide thumb to
6. **TO TURN RIGHT IN REVERSE**
Slide thumb to
7. **ZIG ZAG**
Quick slide thumb from to and backwards.

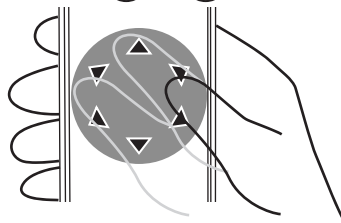

R/C FACTS FOR IMPROVED OPERATION

1. When battery starts to fully discharge, vehicle may slow, stop, or refuse to respond to your control. It's time to recharge vehicle battery or replace transmitter battery.
2. Radio frequency interference can interfere with the control of your vehicle. Buildings, power wires, other R/C transmitters, or CB radio can all cause problems. Pick a place to drive that's away from these things.
3. Hold Transmitter so antenna points up, not toward the vehicle. Keep vehicle within range (about 65 feet) to keep control. If vehicle goes out of range, try lifting transmitter high into the air to increase range for vehicle recovery.
4. Wipe vehicle clean and dry after each use, including inside battery compartments.
5. Turn vehicle power switch off immediately after running. Remove batteries for storing. Keep vehicle and Transmitter away from heat and direct sunlight and moisture.

MAINTENANCE AND PERFORMANCE TIPS

1. Check batteries frequently.
2. Always replace with fresh alkaline batteries.
3. Check battery terminals for contact.
4. To save batteries, always turn switch off when not in use.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

5+

SUPERTOYS

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

NOT INCLUDED

AAx6

AAAx4

Item/Art# 7066
All Rights World-wide Reserved
SUPERTOYS U.S.A. INC.
2145 JACQUELINE AVE, BELLMORE,
N.Y. 11710
Tel: 212-242-6180 Fax: 1-516-781-6860
MADE IN CHINA