

Radio Control TRANSMOBOT

Full Function Radio Controlled
Forward/Reverse Left/Right

FOR AGES 3 AND UP

Transforms from a 6-wheel racing machine to a robot fighter in seconds.



INSTALLING BATTERIES

WARNING: Dispose of old batteries promptly and properly.
Do not burn or bury them.

CAUTIONS:

- Use only fresh batteries of the required size and recommended type.
- If you do not plan to use the Transmobot for a week or more, remove the batteries from both the transmitter and the Transmobot. Batteries can leak chemicals that can destroy electronic parts.

IN THE CONTROLLER

Use a Phillips head screw driver to remove the battery compartment cover located on the back of the controller. Insert 1 "9V." alkaline battery in the correct position as marked in compartment. Replace cover and screw.

IN THE TRANSMOBOT

 
 
 
You can install and use the AA batteries while the battery pack is charging.

- Slide OFF/ON on the bottom of the transmobot to OFF.
- If you are using AA batteries, place them in the supplied battery box according to the polarity symbols (+ and -) marked inside. Then turn the box over so the batteries face in toward the transmobot and snap it into the battery compartment. Then slide the box in the direction of arrow.

If you are using a 6V rechargeable battery pack, place it in the battery compartment according to the polarity symbols (+ and -) marked inside. Then slide it in the direction of arrow.

Note: Be sure to line up the metal contacts on the battery pack, or battery box, with the contacts inside the compartment.


- Turn the battery compartment latch to lock the compartment.

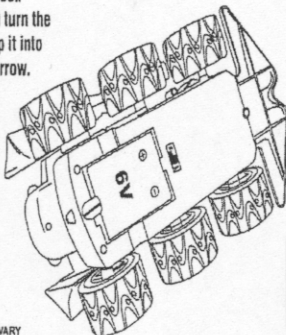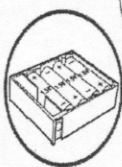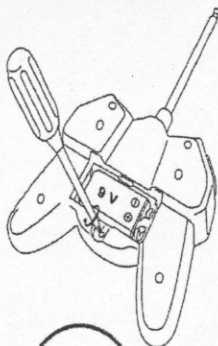

DRIVING THE TRANSMOBOT


- Slide ON/OFF to ON. The top button on the driver's suit lights.
- Fully extend the antenna on the transmitter and slide OFF/ON on the transmitter to ON. The indicator on the transmitter lights.
- Use the transmitter's control levers to move and steer the Transmobot.
 - To drive forward, move "Joystick A" upward.
 - To drive in reverse, move "Joystick A" downward.
 - To spin right, move "Joystick B" to the right.
 - To spin left, move "Joystick B" to the left.
 - To transform, press and hold "Button A".
 - To reverse transforming, press and hold "Button B".

 - When you finish driving the Transmobot, slide OFF/ON on the Transmobot and the transmitter to OFF.

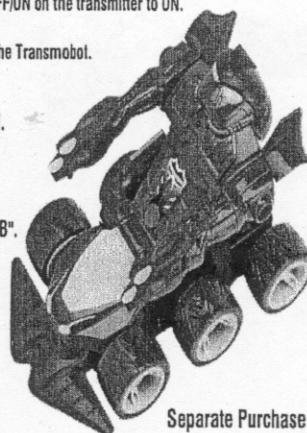

Separate Purchase
Required

 One "9 volt" and 4 "AA"
batteries required
(not included)
or
One "9 volt" and 6V
rechargeable battery pack
and charger (not included)

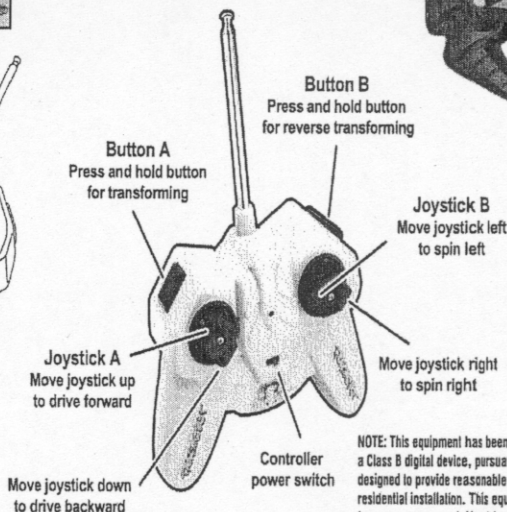

Helpful hints for maintenance and performance.

- 1- Check batteries frequently.
- 2- Always replace with fresh alkaline batteries.
- 3- Check battery terminals for contact.
- 4- Always turn switch off when not in use.
- 5- Run on smooth level surfaces.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is needed. Consult the dealer or an experienced radio/TV technician for help.

ITEM/Art # 4441
All Rights World-wide Reserved
SUPERTOYS U.S.A. INC.
200 FIFTH AVE., ROOM 201 NEW YORK, NY 10010
LEOHOFFMAN
Tel: 212-242-6180 E-mail: leohoff@aol.com
CAUTION: NOT SUITABLE FOR CHILDREN UNDER
36 MONTHS DUE TO SMALL PARTS
MADE IN CHINA



Another quality product from **SUPERTOYS**

COLOURS AND DECORATION MAY VARY