



## WAGAN Corp. Limited Warranty Registration Form

All WAGAN Corporation products are warranted to the original purchaser of this product. **Warranty Duration:** This product is warranted to the original purchaser for a period of one (1) Year from the original purchase date, to be free of defects in material and workmanship. WAGAN Corporation disclaims any liability for consequential damages. In no event will WAGAN Corporation be responsible for any amount of damages beyond the amount paid for the product at retail. In the event of a defective item, please ship the item, prepaid, with a complete explanation of the problem, your name, address and daytime phone number. WAGAN Corporation will, at its option, replace or repair the defective part. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA and does not extend to any units which have been used in violation of written instructions furnished.

**Warranty Disclaimers:** This warranty is in-lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one (1) Year warranty period, a product with a defect will be replaced with a comparable model when the product is returned to WAGAN Corporation with an original store receipt. The replacement product will be in warranty for the balance of the one (1) Year warranty period.

- Please activate my limited warranty for WAGAN Corp. SmartSound FM/USB/Charger
- Enclosed copy of original sales receipt.

|                  |                                |      |  |
|------------------|--------------------------------|------|--|
| Name             |                                |      |  |
| Mail Address     |                                |      |  |
| City             |                                |      |  |
| State, Zip Code  |                                |      |  |
| Item Purchased   | 2315 SmartSound FM/USB/Charger |      |  |
| Stores Name      |                                |      |  |
| Date of Purchase |                                |      |  |
| Signature        |                                | Date |  |

All WAGAN Corporation Products must be registered within (30) days of purchased to activate this warranty. Mail the complete registration form, along with a copy of the original receipt to:

Attn: Customer Service  
WAGAN Corporation  
3589 Yale Way  
Fremont, CA 94538

© 2007 WAGAN Corp.

# SmartSound™


## FM/USB/Charger —

**3 in 1 Wireless FM Transmitter, USB Port and Battery Charger!**



User's Manual

Thank you for purchasing the SmartSound FM/USB/Charger by Wagan Tech. With normal care and proper treatment it will provide years of reliable use. Please read all operating instructions carefully before use.

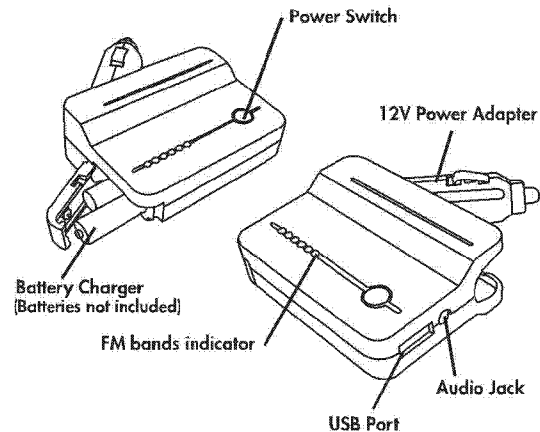

## CHARGING BATTERIES

1. Open the battery cover of your SmartSound FM/USB/Charger. Install the AAA rechargeable batteries and close the battery cover. Make sure you only insert rechargeable batteries.
2. Plug your device to the cigarette lighter port in your car. The batteries will start charging.
3. After the batteries have been fully charged by the car batteries (normally it takes about 8 hours) you may take your SmartSound FM/USB/Charger out of the car and use it where you wish

## CAUTION:

- Do not put non-rechargeable batteries into the SmartSound FM/USB/Charger while plugging it into the cigarette lighter port.
- Attempting to charge non-rechargeable batteries may cause an explosion.

## FM TRANSMITTER

1. Plug one end of the 3.5mm connector into your SmartSound FM/USB/Charger and the other end into your MP3 player or other portable music device.
2. Turn on the SmartSound FM/USB/Charger by pressing and holding the **ON/OFF** button for at least 5 seconds. You can then select the next frequency by pressing the **ON/OFF** button briefly once. To turn off your SmartSound FM/USB/Charger, press and hold the **ON/OFF** button for at least 5 seconds.
3. Turn on your FM radio and tune it to the matching frequency of the SmartSound FM/USB/Charger.
4. Adjust the volume of your MP3 player or other audio source to a medium level.
5. Adjust the volume of your FM radio to the desired audio level.

### FCC CAUTION:

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.