

## WAGAN Corp. Limited Warranty Registration Form

All WAGAN Corporation products are warranted to the original purchaser of this product.  
**Warranty Duration:** This product is warranted to the original purchaser for a period of one (1) Year from the original purchase date, to be free of defects in material and workmanship. WAGAN Corporation disclaims any liability for consequential damages. In no event will WAGAN Corporation be responsible for any amount of damages beyond the amount paid for the product at retail. In the event of a defective item, please ship the item, prepaid, with a complete explanation of the problem, your name, address and daytime phone number. WAGAN Corporation will, at its option, replace or repair the defective part. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA and does not extend to any units which have been used in violation of written instructions furnished.

**Warranty Disclaimers:** This warranty is in-lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract.

**Warranty Performance:** During the above one (1) Year warranty period, a product with a defect will be replaced with a comparable model when the product is returned to WAGAN Corporation with an original store receipt. The replacement product will be in warranty for the balance of the one (1) Year warranty period.

- Please activate my limited warranty for WAGAN Corp. Wireless MP3 / iPod\* / CD
- Enclosed copy of original sales receipt.

|                  |                                             |      |  |
|------------------|---------------------------------------------|------|--|
| Name             |                                             |      |  |
| Mail Address     |                                             |      |  |
| City             |                                             |      |  |
| State, Zip Code  |                                             |      |  |
| Item Purchased   | Wireless MP3 / iPod* / CD Sound Transmitter |      |  |
| Stores Name      |                                             |      |  |
| Date of Purchase |                                             |      |  |
| Signature        |                                             | Date |  |

All WAGAN Corporation products must be registered within (30) days of purchased to activate this warranty. Mail the complete registration form, along with a copy of the original receipt to:

Attn: Customer Service  
 WAGAN Corporation  
 3589 Yale Way  
 Fremont, CA 94538

© 2005 WAGAN Corp.



Item no. 9753

## Wireless MP3 / iPod\* / CD Sound Transmitter™



\* iPod and iPod mini are registered trademarks of Apple Computer, Inc.

**User's Manual**

## Wireless MP3 / iPod\* / CD Sound Transmitter by Wagan Tech

USER'S MANUAL — Please read before using this equipment.

Thank you for purchasing the Wireless MP3 / iPod\* / CD

Sound Transmitter by Wagan Tech. With normal care and proper treatment it will provide years of reliable service. Please read all operating instructions carefully before use.

### Instructions:

1. Open the battery compartment located on the bottom of the unit
2. Insert 2 AAA 1.5V alkaline batteries (not included) following the diagram on the battery compartment cover.

3. Close the battery compartment

4. Connect the audio input cord of the CD Auto Adapter to the headphone jack or line out jack of your portable CD /MP3 player. The line out jack is preferred, if your portable CD/MP3 player has one

5. Push the Power ON/OFF switch on the CD Auto Adapter to the ON position. The lighted red LED light indicates power is on

6. Set the FM band selector switch on the CD Auto Adapter to the range for the FM radio setting used on your car radio

7. Turn on the power of your portable CD player and set the volume to a medium level. Note: The CD Auto Adapter does not provide power for your CD/MP3 player. Therefore,

the batteries (not included) must be installed in your CD/MP3 player

8. Turn your vehicle's radio to medium volume. Then slowly tune thru the FM station range previously selected until you hear the music coming from your CD/MP3 player. NOTE: For optimum performance, it is better for your radio to be set to an open frequency so there will be no interference from other FM Stations. This may require very slight fine tuning, using the Tuning Wheel located on the side of the adapter. This procedure may take a few minutes the first time. However, simply selling one of your preset buttons for your selected station will eliminate the need to repeat the process

9. Adjust the volume of your music source to a distortion free level. You can increase the volume of your car radio as necessary for desired sound level

Note: While driving your car and listening to CDs or MP3s using the Wireless MP3 / iPod\* / CD Sound Transmitter, it is possible that interference from nearby stations may cause your reception fade out. If you hear this happening, adjust the Tuning Wheel. The Tuning Wheel is very sensitive. Move it slightly and you can restore your reception.

\* iPod and iPod mini are registered trademarks of Apple Computer, Inc.



The users manual or instruction manual shall include the following statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC ID: KXS-9753**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

**Product: Sound Transmitter**

**Model: 9753**