


° SWISSPHONE °

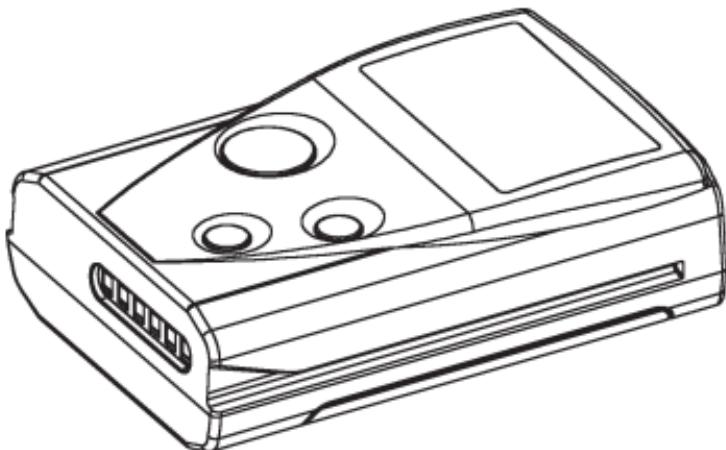

Operating instructions
Swissphone DE920, DE940
Alphanumeric POCSAG pager

Contents

Preface	4
Display	6
Confirmation key	7
Menu structure	8-9
Messages	10-15
Alarm settings	16-17
Alarm clock	18-19
Status display and user information	20
Alarm options	21-23
Communication	24-25
Settings	26-30
Switching on and off	31

Preface

We would like to congratulate you on your new receiver. In purchasing the new Swissphone DE920/DE940 you have decided on a device of the highest quality. The Swissphone DE920/DE940 is a convincing product thanks to the most effective combination of an attractive design, simplest of operation and highest of quality.

These operating instructions provide you with information on how to get the most from your device. Always keep them readily to hand. The Swissphone DE920/940 pager can be configured for the particular application. For this reason, it is possible that functions described in these operating instructions may not be available on your device. We hope you will enjoy reading through these operating instructions and using your Swissphone DE920/DE940 pager.



Special information on additional and useful functions.



Warning



IMPORTANT INFORMATION

- Do not operate this product in hazardous atmosphere or explosion risk areas!
- Do not open device or remove labels!

This device complies with Part 15 of the FCC Rules.


Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.


WARNING – Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device complies with the regulations of the R&TTE European Directive (99/05/EU).
You will find a copy of the certificate of conformity on our website www.swissphone.com.

Display

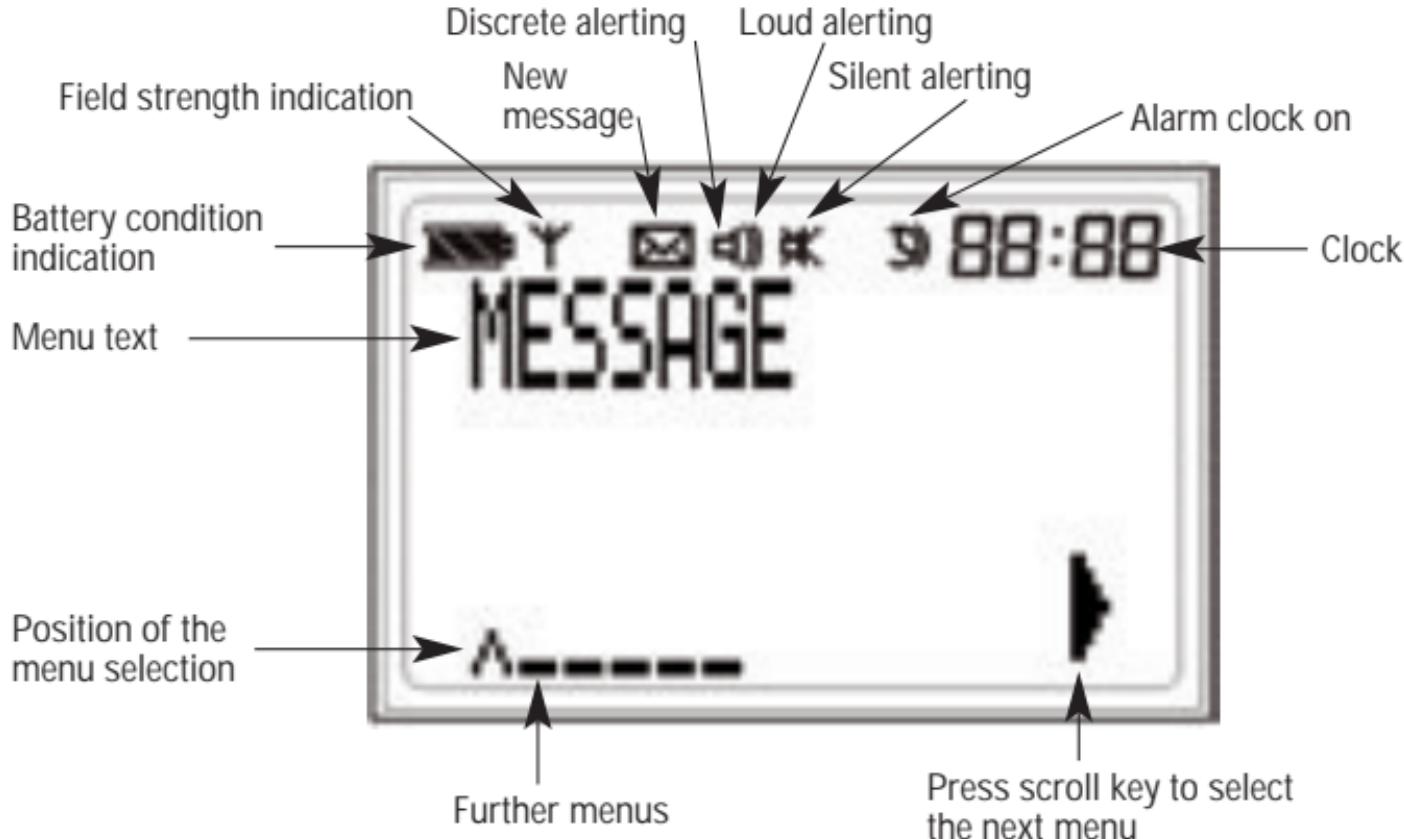

Keys

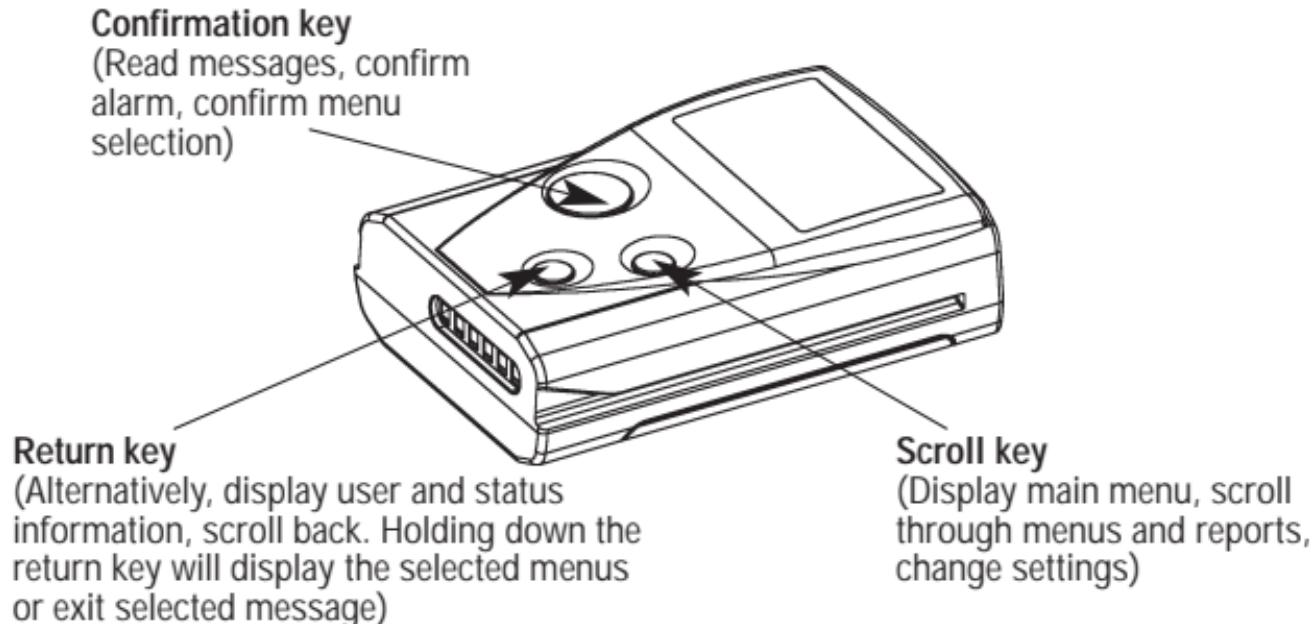

Switching the receiver on

By inserting the battery, the Swissphone DE920/DE940 receiver is automatically switched on (see chapter, "Changing the Power Source").

Menu structure

Starting position: stand-by mode

MESSAGE

- Read
 - └ Message selection
- Delete
 - └ Message selection
- Delete all
- Protect
 - └ Message selection

ALERT

- Loud
- Discrete
- Silent
- Off

ALARM CLOCK

- On/Off
 - └ Selection
- Set time
 - └ HH:MM
- Snoozer
 - └ Number * time delay

STATUS

- Status info
- User info

By pressing the confirmation key, the message selection for "Read messages" is displayed directly.

By pressing the scroll key, the main menu is displayed.

ALERT OPTIONS

- Profile
 - └ Selection
- Alertpattern
 - └ RIC=>pattern
- Call reminder
 - └ Selection
- EA-Monitor
 - └ Selection
- DynGo System
 - └ Information
- Out of range
 - └ Selection

COMMUNICATION

(only DE940)

- Callback
 - └ Selection
- Pairing
- Coding
 - └ Selection

SETTINGS

- Set time
 - └ HH:MM
- Set date
 - └ Day DD.MM.YY
- Language
 - └ Selection
- Light
 - └ Selection
- Battery
 - └ Selection
- LCD contrast
 - └ Set
- ECO mode
 - └ Selection

SWITCH OFF

- └ Are you sure?

Messages

Individual messages received are alerted, displayed and stored in the memory. Single new (unread) messages are also identified by means of the envelope icon. The individual saved messages are displayed from left to right in the menus "read", "delete" and "protect" by means of icons, based on the time they were received. When a new message is saved all the messages are moved to the right by one position with the oldest message being moved into the automatic storage tray if the memory is already full. Protected messages are retained in the memory.

Reading new messages

A newly received message appears on the display immediately.

- Alerting is stopped by pressing any key.
- By pressing the scroll key, you can read the messages. Only once you have scrolled right through to the end of the message is the message considered as being read. At the end of the release time the receiver automatically reverts back to stand-by mode.



Call reminder

If your device has been configured with call reminder any unread messages are alerted again after the pre-set time (see chapter "Alarm options"). The call reminder is switched off as soon as the particular message(s) are read.

Reading messages

Starting position: stand-by mode.

- Press the confirmation key to display messages. The cursor is then on the most recent message.



- Press the scroll key to select the next message
- Press the confirmation key to read the selected message. The first 3 lines of the message are displayed
- Press the scroll key to read the whole message



Reading messages with the confirmation key

You also have the possibility of directly scrolling through and reading all messages directly with the confirmation key.



Simple operation

If your receiver is configured for simple operation, then you get directly into the most recent message by using the confirmation key. As soon as you have read it, the next unread message is displayed. In order to reach the main menu, press the scroll key and return key simultaneously for at least 2 seconds.



Illuminated display

To switch on display illumination manually, press the confirmation key for 1 second. To switch the display off again press the confirmation key again for 1 second. The display will be switched off automatically at the latest when the receiver reverts back to stand-by mode.

Message folder

Title of the message folder



1 to 2 message folders



The DE920/DE940 can show a maximum of two message folders, depending on how it has been programmed. When selected the title of the message folder is displayed in the menu list. Press the confirmation key in order to display the messages in the messages folder. The messages can then be read with the help of the scroll key.



New (unread) messages in the message folders are not highlighted by means of an envelope icon

Deleting individual messages

Starting position: stand-by mode

- Press the scroll key and the “MESSAGES” menu is displayed
- Press the confirmation key
- With the scroll key, select the “Delete” menu and press the confirmation key
- With the scroll key, select the message, which is to be deleted
- Press the confirmation key to delete the message
- Press the confirmation key again to delete all messages or the return key to abort the process

Deleting all messages

Starting point: stand-by mode

- Press the scroll key and the “MESSAGES” menu is displayed
- Press the confirmation key
- With the scroll key, select the “Delete all” menu to delete all messages
- Press the confirmation key. The question appears, “Are you sure?”
- Press the confirmation key again to delete all messages or the return key to abort the process

Protecting messages

Protected messages are not overwritten by more recent messages and therefore remain until they are deleted.

Starting position: stand-by mode

- Press the scroll key and the "MESSAGES" menu is displayed
- Press the confirmation key
- With the scroll key, select the menu "Protect"
- Press the confirmation key
- With the scroll key, select the message required
- Press the confirmation key to protect the message

Alerting

Alarm settings differentiate essentially between messages with and without priority. This depends on how the particular receiver address (RIC) is configured.

In the alarm options menu the Swissphone DE920/DE940 can be configured to "loud" (loud alerting with vibrator), "discrete" (mini beep with vibrator), or "silent" (vibrator only) and "off" (visual display only).

Starting position: stand-by mode

- Press the scroll key and the "MESSAGES" menu is displayed
- With the scroll key, select the "ALERT" menu
- Press the confirmation key
- With the help of the scroll key, select the required alarm option
- Press the confirmation key to accept the alarm option selected



Messages with priority

With loud alerting the alarm is twice as long for messages with priority than for normal messages. With all other types of alerting messages with priority are firstly signalled by means of a vibrator and then loudly with a vibrator.

The following table illustrates the type of alerting for each configuration.

	Symbol	Alerting	Alerting of messages with priority
Loud	🔊	 Standard signalling	 Doubled standard signalling
Discrete	🔊	 10 seconds vibration then mini beep	 10 seconds vibration then doubled standard signalling
Silent	🔇	 10 seconds vibration	 10 seconds vibration then doubled standard signalling
Off			 10 seconds vibration then doubled standard signalling

Acoustical alerting 

Vibration 

Alarm clock

Starting position: stand-by mode

- Press the scroll key and the "MESSAGES" menu is displayed
- With the scroll key, select the "ALARM CLOCK" menu
- Press the confirmation key.

Switching the alarm clock on and off

Starting position: "ALARM CLOCK" menu

- Press the confirmation key to select the "On/Off" menu
- Select "On" or "Off" with the scroll key
- Accept your selection with the confirmation key



Quitting alarm clock

The alarm tone is switched off as soon as any key is pressed. The alarm clock icon will blink as long as the repeat alarm is active. After the alarm repeat period the alarm tone starts again. If the confirmation key is pressed for at least 2s the alarm tone is switched off for the whole day. The alarm, however, remains switched on and will sound, once again, the next day.

Setting the alarm clock

Starting position: "ALARM CLOCK" menu

- Press the confirmation key to select the "Set time" menu
- Push the confirmation key
- With the scroll key set the hours and minutes and confirm respectively

Alarm repeat

Starting position: "ALARM CLOCK" menu

- With the scroll key, select the "Snoozer" menu
- Press the confirmation key
- With the scroll key, select the number of repeats and the time interval in minutes and confirm respectively



Switching-on with alarm clock


If the alarm clock is switched on and the receiver is switched off, the Swisspone DE920/940 will be switched on at the alarm time set and the alarm clock will sound.

Status display and user information

Starting position: stand-by mode

- Press the scroll key and the "MESSAGES" menu is displayed
- With the scroll key, select the "STATUS" menu
- Press the confirmation key

The following screen appears on the display:

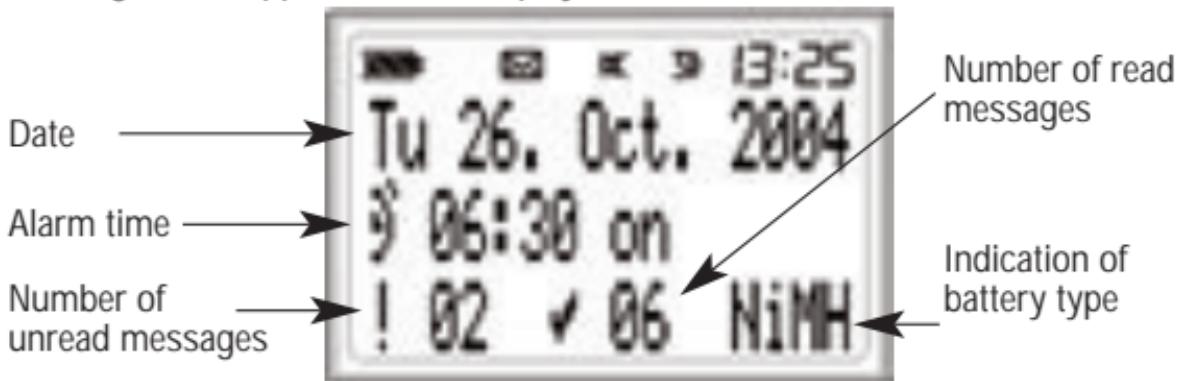

- If the scroll key is pressed, the user information is displayed, otherwise the Swissphone DE920/DE940 receiver goes into the stand-by mode after the release time.



Direct display of the status screen and of the user information:

If the receiver is in the stand-by mode, then by holding down the return key the status information screen and the user information are alternately displayed for 1 s.

Alert options

Starting position: stand-by mode

- Press the scroll key and the “MESSAGES” menu is displayed
- With the scroll key, select the “ALERT OPTIONS” menu
- Press the confirmation key

User profiles

Starting position: “ALERT OPTIONS” menu

- Press the confirmation key to select the “Profile” menu
- Select a user profile with the scroll key
- Accept your selection with the confirmation key
- With the scroll key, switch advanced profile on or off
- Press the confirmation key

Alarm tones

Starting position: “ALERT OPTIONS” menu

- Press the confirmation key to select the “Alert pattern” menu
- With the scroll key, select a RIC with sub-address
- Press the confirmation key
- With the scroll key, select a melody. The melody is played during the selection
- Press the confirmation key
- Set a further alarm tone or press return to exit the “Alert pattern” menu

Call reminder

Starting position: "ALERT OPTIONS" menu

- Press the scroll key to select the "Call reminder" menu
- Press the confirmation key
- With the scroll key select between "loud" and "discrete"
- Press the confirm key

EA monitor

This function is only activated if your system supports "express alerting".

Starting position: menu "ALERT OPTIONS"

- With the scroll key, select the menu "EA Monitor"
- Press the confirmation key
- With the scroll key, select between "off", "discrete" or "loud"
- Press the confirmation key

DynGo system

This function is only activated if your device supports DynGo.

Starting position: menu "ALERT OPTIONS"

- With the scroll key, select the "DynGo system" menu
- Press the confirmation key and the DynGo program is displayed

Acoustic field strength alert

Starting position: "ALERT OPTIONS" menu

- Press the scroll key to select the menu "Out of range"
- Press the confirmation key
- With the scroll key, switch the field strength alarm on or off
- Press the confirm key

Communication

In the "COMMUNICATION" menu, you configure how the DE940 communicates via Bluetooth with a connected mobile phone.

Starting position: stand-by mode

- Press the scroll key and the "MESSAGES" menu is displayed
- With the scroll key, select the "COMMUNICATION" menu
- Press the confirmation key

Callback

In the "Callback" menu, you select what response is issued to a received message. The selected response is forwarded via Bluetooth to a connected mobile phone.

Starting position: "COMMUNICATION"

- Press the confirmation key
- Press the confirmation key to select the "Callback" menu
- Choose and confirm one of the selection options with the scroll key

Pairing

With the "Pairing" menu, the DE940 is paired with a Bluetooth-enabled mobile phone so that the two devices can communicate with each other. Please also read the Operating Instructions of your mobile phone for this.

Starting position: "COMMUNICATION"

- Press the confirmation key
- With the scroll key, select the "Pairing" menu
- Press the confirmation key

Text "Searching" is shown on the display and the DE940 searches for Bluetooth-enabled devices in its vicinity. After a short period, you will see the Bluetooth name of the mobile phone found in the vicinity on the display. Press the confirmation. The two devices are now paired.

Coding

In the "Coding" menu, you configure whether the Bluetooth connection is to be coded. This setting is dependent on your mobile phone. Please read the Operating Instructions of your mobile phone.

Starting position: "COMMUNICATION»

- Press the confirmation key
- With the scroll key, select the "Coding" menu
- Press the confirmation key
- Choose and confirm one of the selection options with the scroll key

Settings

Starting position: stand-by mode

- Press the scroll key and the “MESSAGES” menu is displayed
- With the scroll key, select the “SETTINGS” menu
- Press the confirmation key

Setting the clock

Starting position: “SETTINGS” menu

- Press the confirmation key to select the “Set time” menu
- With the scroll key set the hours and minutes and confirm respectively

Setting the date

Starting position: “SETTINGS” menu

- With the scroll key, select the “Set date” menu
- Press the confirmation key
- With the scroll key select the year, month and day of the week and confirm respectively

Language

Starting position: “SETTINGS” menu.

- With the scroll key, select the “Language” menu.
- Press the confirmation key.
- With the scroll key, select one of two pre-set languages.
- Press the confirmation key

Light

If active, the background illumination is switched on with each operation.

Starting point: "SETTINGS" menu

- With the scroll key, select the "Light" menu
- Press the confirmation key
- With the scroll key activate or de-activate settings
- Press the confirmation key

Selecting the type of battery

The SWISSPHONE DE920/DE940 receiver automatically identifies whether an alkaline battery or a re-chargeable battery is installed.

The type of re-chargeable battery installed (NiHM or NiCd) can be configured there. On rare occasions, it may happen that a battery, which has already been used is identified as a re-chargeable battery when it is installed, or the other way round. In such cases, you can overwrite the automatic identification of the re-chargeable battery. Please ensure that the type of re-chargeable battery installed corresponds to the setting in the device. This ensures optimal indication of the battery charge level.

Starting position: "SETTINGS" menu

- With the scroll key, select the "Battery" menu
- Press the confirmation key
- With the scroll key, select between "Alkaline", "NiMH" and "NiCd"
- Press the confirmation key

Battery level indication



80 % – 100 %



33 % – 80 %



13 % – 33 %



0 % – 13 %

When it is switched on, the battery icon is always visible on the display and indicates the amount of energy still available, except in ECO mode. Period of operation can be up to 1000 hours, depending on the power supply, network configuration and the type of operation programmed. Should the energy source be virtually used up, the empty battery icon starts to blink and a regular reminder tone sounds. There is still an operating time of at least 24 hours available. By pressing the confirmation key, the battery alarm is switched off, the empty battery icon, however, continues to blink.

LCD contrast

Starting position: "SETTINGS" menu

- With the scroll key, select the "LCD contrast" menu
- Press the confirmation key
- With the scroll key, set the LCD contrast
- Press the confirmation key

ECO mode


If ECO mode is switched on the display will be completely switched off in stand-by mode. No status icons are displayed. The life of the battery can be considerably increased in this way.

Starting position: "Settings" menu

- With the scroll key, select the "ECO mode" menu
- Press the confirmation key
- With the scroll key, switch ECO on or off
- Press the confirmation key

Changing the power source

Remove the clip holster and open the cover on the back of the receiver. Insert the power source supplied into the compartment and in doing so pay ensure that the polarity is correct.

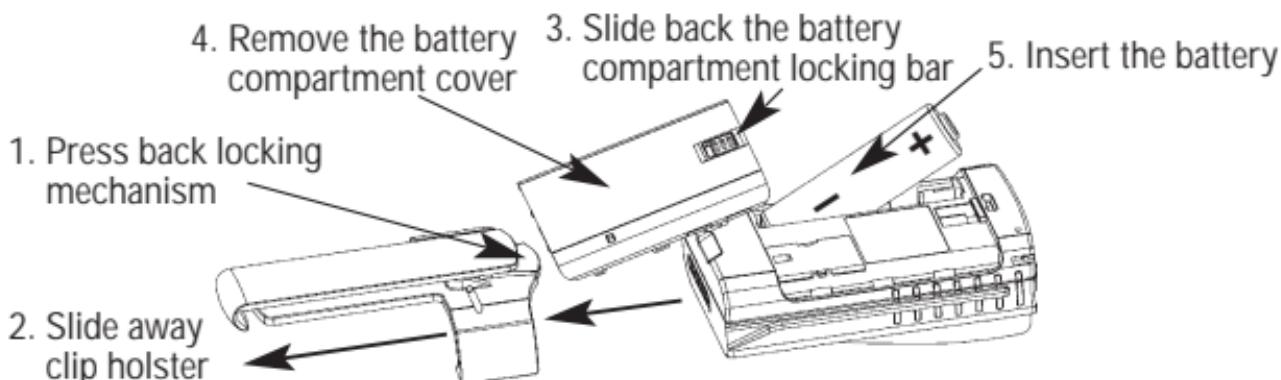

The following power sources of the size AA, or., L6, or AM3 (Mignon) can be used:

- Alkaline: leak-proof alkaline-dry batteries

 NB: alkaline batteries should not be charged or re-charged. Danger of explosion!

- Re-chargeable batteries, either nickel cadmium or nickel metal hydride. For safety reasons, to re-charge use a charger from the original Swissphone range of accessories.

 WARNING: Do not dispose of batteries and re-chargeable batteries in fire. Risk of explosion!

 WARNING: Keep batteries out of reach of children under 3 years old.

The Swissphone DE920/DE940 receiver is automatically switched on when the battery is inserted. A test is done whilst all loads in the device are activated temporarily. The device then is ready to receive messages.

 **NB:**
For optimal indication of the battery or re-chargeable battery levels, the type of re-chargeable battery installed has to be set using the operation in the device (see chapter: "Selecting the type of re-chargeable battery").

Switching on and off

Switching off

Starting position: stand-by mode

Press the scroll key and the menu "MESSAGES" is displayed

- With the scroll key, select the menu "SWITCH OFF"
- Press the confirmation key. The question, "Are you sure?" appears
- Press the confirmation key once again to switch off the receiver

Switching on

Hold down any key for a longer period to switch the receiver on.

Switching on with alarm clock

If the alarm clock is switched on and the receiver is switched off, the Swissphone DE920/940 will be switched on at the alarm time set and the alarm clock will sound.

In order to set the alarm clock, please refer to "Setting the alarm clock".



Swissphone Telecom AG, Fälmisstrasse 21, CH-8833 Samstagern, Switzerland

Customer Service:



© SWISSPHONE Telecom AG

Reserves the right to make technical changes without prior notification.