

## **Wireless microphone operation procedure**

- 1. The YMV-2 is a wireless microphone, Please use two of UM3 of battery for power supply.**
- 2. Power switch for turn on and turn off the power supply.**
- 3. The operation frequency is 210.6MHz .**
- 4. The audio signal pick-up from condenser microphone through transmitter to receiver, And audio signal output from jack of receiver.**
- 5. The RF signal send and receive from antenna .**