



**CHOKING HAZARD - SMALL PARTS,
NOT FOR CHILDREN UNDER 3 YEARS.**

IMPORTANT!

- Do not leave batteries in the vehicle or the transmitter when the toy is not in use.
- Do not use old and new batteries together.
- Do not mix different types of batteries. Only batteries of the same or equivalent type as recommended are to be used. (e.g. alkaline, Ni-Cd rechargeable, and manganese, or other non-alkaline batteries)
- Dispose of old batteries in the proper manner; do not burn or place near fire.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Not suitable for children under 3 years of age due to small parts.
- Remove rechargeable batteries from the unit before recharging.
- Recharging of rechargeable batteries should only be done under adult supervision.
- The screwdriver is not a toy.
- Do not give the screwdriver to children.
- Change the car body by adult only.
- Exhausted batteries are to be removed from the toy.

BATTERY REQUIREMENTS

 
- This vehicle requires 3 "AA" (LR6) batteries (alkaline or Ni-Cd rechargeable batteries), and one 9V (6LR61) (alkaline) (6F22) (carbon zinc) battery for the transmitter.

INSTALLING THE BATTERIES

TRANSMITTER


 
Removal of the battery cover requires a "phillips head" screwdriver. **See Figure 1.** After removing this screw, slide the cover downward to remove. Place the 9 V battery in position so that the (+) and (-) are in the proper alignment as noted. Replace screw to battery cover. **See Figure 2.**

Figure 1
Dessin 1
Abbildung 1
Figuur 1
Figura 1
Dibujo 1



Removal of the battery cover requires a "phillips head" screwdriver, push the tab on the battery compartment lid and slide the lid back on its hinge. **See Figure 3.** Make sure the "AA" batteries are new or freshly charged batteries (Do not mix old or used batteries with new batteries). Place the batteries in the battery compartment being sure that the (+) and (-) poles of the batteries are positioned correctly. **See Figure 4.** Replace the cover.

Figure 3
Dessin 3
Abbildung 3
Figuur 3
Figura 3
Dibujo 3

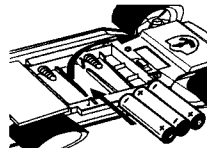

OPERATING R/C CAR

IMPORTANT!

- Do not use vehicle in mud, water, snow, or sand.
- Do not play with vehicle in the street.
- Do not crash vehicle into any object at high speeds.
- When the vehicle slows down install new or freshly charged batteries.
- Clean the vehicle with a damp paper towel after operating. (Do not use any chemicals to wipe off car)
- Do not leave vehicle in direct sunlight for lengthy periods.

OPERATING CAR

1. Turn the car switch to "ON". *See Figure 5.*
2. There is 1 joysticks on transmitter. *See Figure 6.*
3. Pull the trigger to the inward direction for forward running. *See Figure 7.*

Figure 5
Dessin 5
Abbildung 5
Figuur 5
Figura 5
Dibujo 5

 



Figure 6
Dessin 6
Abbildung 6
Figuur 6
Figura 6
Dibujio 6

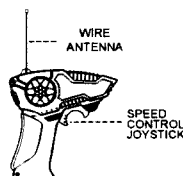

4. Push the trigger to the outward direction for reverse running. **See Figure 8.**
5. Release the trigger, the car will come to stop. **See Figure 9.**
6. Do not let vehicle get out of transmitting range as you will then have no control. This range varies due to surroundings.
7. When finished, turn all switches to off position and remove all batteries. Vehicle operation varies from 15 to 20 minutes depending on how the car is used, and the age of the batteries.

Figure 7
Dessin 7
Abbildung 7
Figuur 7
Figura 7
Dibujo 7

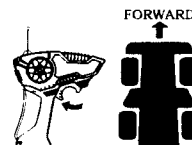


Figure 8
Dessin 8
Abbildung 8
Figuur 8
Figura 8
Dibujo 8

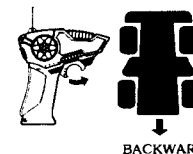


 
Figure 9
Dessin 9
Abbildung 9
Figuur 9
Figura 9
Dibujo 9



WHEEL ALIGNMENT

Your steering can be adjusted with the trim switch located on the bottom chassis area. Turn either left or right until you have made the adjustment to maintain a straight path of movement. **See Figure 10.**

Figure 10
Dessin 10
Abbildung 10
Figuur 10
Figura 10
Dibujo 10



THINGS YOU SHOULD KNOW

- Radio interference can cause your car to react strangely.
- Another vehicle operating on the same frequency can disrupt your controlling the vehicle.
- CB's, cellular telephones, two way radios, and other transmitting devices, and high tension wires may cause interference with operation.
- Your vehicle can sometimes cause interference with television or even radio reception. Move to another area if you notice this occurrence.

NATURE POWER OF SUPPLY

Receiver : $4.5V = 0.6A$
Transmitter : $9V = 0.05A$



ARTIN warrants this product against manufacturer's defects for a period of 90 days from the date of purchase.

 Please keep your sales receipt with the packaging for that period as proof of purchase.

Please call
our HOTLINE **1-800-97-ARTIN(27846)**

Within this period of time (90 days) we will repair or replace without charge for any manufacturing defects only. This warranty does not cover postage and transportation costs. Accidental damage, misuse, abusive use, crashing, corrosion from dampness, or any other damage related to misuse are not covered by this warranty. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

HOTLINE HOURS :
10:00 A.M. - 5:00 P.M. MONDAY - FRIDAY (EXCEPT HOLIDAYS)
ARTIN USA, INC. • ROOM 602, 200 FIFTH AVENUE, NEW YORK, 10010 • FAX: 1-212-453-1800 • HOTLINE: 1-800-87-ARTIN
E-mail: advertisingusa@artin.com

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Controlled Vehicle
3 Function Truck Series
Scale: 1:20
MCS:316502112